

# ***Network Camera***

---

## **User's Guide**

Software Version 2.4

**IPELA**

**SNC-RZ50N/RZ50P**

---

# Table of Contents

---

## Overview

Features .....	4
Precautions .....	5
How to Use This User's Guide .....	6
System Requirements .....	7

---

## Preparation

Assigning the IP Address to the Camera .....	8
Assigning an IP address using the IP Setup Program .....	8
When using Windows XP Service Pack 2 or later .....	10
When using Windows Vista .....	12
Accessing the Camera Using the Web Browser .....	15
Basic Configuration by the Administrator .....	17

---

## Operating the Camera

Administrator and User .....	18
Logging in to Homepage — Welcome Page .....	19
Logging in as a user .....	19
Displaying the Administrator menu directly .....	20
About viewers .....	20
Configuration of Main Viewer .....	21
Main menu .....	22
Camera control section .....	22
Monitor image .....	23
Controlling the Monitor Image .....	24
Monitoring the camera image .....	24
Zooming in the monitor image .....	24
Capturing a Monitor Image .....	25
Capturing a monitor image .....	25
Saving the captured image .....	25
Operating the Camera .....	26
Controlling via the control panel .....	26
Panning and tilting by clicking the monitor image .....	26
Panning, tilting and zooming by specifying the area .....	26
Zooming an image by the camera zoom bar .....	27
Moving the camera to a preset position .....	27
Controlling the Camera on a Panorama Image .....	27
Facing the camera toward a specified point .....	27

Using the Trigger Button .....	28
Sending a monitor image via e-mail .....	28
Sending a monitor image to an FTP server .....	28
Recording a camera image as a still image .....	28
Controlling alarm output 1, 2 .....	29
Controlling Day/Night function .....	29
Playing the audio file stored in the camera .....	29
Switching TCP/UDP Transmission Mode .....	30

---

## Administrating the Camera

Basic Operations of Administrator Menu .....	31
How to setup the Administrator menu .....	31
Configuration of Administrator menu .....	32
Configuring the System — System Menu .....	33
System Tab .....	33
Date & time Tab .....	35
Superimpose Tab .....	36
Initialize Tab .....	37
System log Tab .....	38
Access log Tab .....	38
Setting the Camera Image and Audio — Camera Menu .....	39
Common Tab .....	39
Picture Tab .....	40
Day/Night Tab .....	41
Video codec Tab .....	42
Streaming Tab .....	44
Configuring the Network — Network Menu .....	45
Network Tab .....	45
Wireless Tab — Setting of wireless connection .....	46
Dynamic IP address notification Tab — Notifying the IP Address .....	49
SSL Tab — Setting the SSL function .....	51
How to install the CA certificate .....	53
To remove the CA certificate which has been installed .....	54
Using the 802.1X Authentication Function — 802.1X Menu .....	55
System configuration of 802.1X network .....	55
Common Tab — Basic setting of 802.1X authentication function .....	56
Client certificate Tab .....	56
CA certificate Tab .....	58
Setting the 802.1X authentication function — Example of Windows Server 2003 .....	59
Setting the User — User Menu .....	62
Setting the Security — Security Menu .....	63

<b>Saving the Camera Position and Action</b>	
— <b>Preset position Menu</b> .....	64
Position Tab	
— Saving pan/tilt/zoom position .....	64
Tour Tab — Setting a tour .....	66
<b>Sending an Image via E-mail</b>	
— <b>e-Mail (SMTP) Menu</b> .....	67
Common Tab — Setting the e-Mail (SMTP)	
Function .....	67
Alarm sending Tab — Setting the e-mail	
sending mode when detecting the alarm .....	68
Periodical sending Tab — Setting the	
periodical e-mail sending mode .....	69
<b>Sending Images to FTP Server</b>	
— <b>FTP client Menu</b> .....	70
Common Tab	
— Setting the FTP client function .....	70
Alarm sending Tab — Setting the FTP client	
action when detecting the alarm .....	70
Periodical sending Tab — Setting the	
periodical FTP client activity .....	71
<b>Recording Images in Memory</b>	
— <b>Image memory Menu</b> .....	73
Common Tab — Setting the image memory	
function .....	73
Alarm recording Tab — Setting the Image	
memory function when detecting the alarm ...	74
Periodical recording Tab	
— Setting the periodical recording mode .....	75
Folder structure of image memory .....	76
<b>Downloading Images from the Camera</b>	
— <b>FTP server Menu</b> .....	77
<b>Setting the Alarm Output</b>	
— <b>Alarm output Menu</b> .....	78
Alarm out 1, 2 Tab .....	78
<b>Outputting Audio Linked to Alarm Detection</b>	
— <b>Voice alert Menu</b> .....	79
Voice alert 1, 2, 3 Tab .....	79
<b>Setting the Operations from the Viewer</b>	
— <b>Trigger Menu</b> .....	80
<b>Setting the Schedule — Schedule Menu</b> .....	82
<b>Setting the Alarm Buffer</b>	
— <b>Alarm buffer Menu</b> .....	83
<b>Setting the Object Detection Function</b>	
— <b>Object detection Menu</b> .....	84
What is unattended object detection? .....	84
Common Tab .....	85
Unattended object setting Tab .....	90
Configuration Tab .....	90
<b>Transmitting with External Equipment Using</b>	
<b>the External Serial Terminal — Serial Menu</b> ...	91

## Others

<b>Using the Supplied IP Setup Program</b> .....	92
Starting the IP Setup Program .....	92
Bandwidth control Tab .....	92
Date time Tab .....	93
Rebooting the Camera .....	93
<b>Using the SNC audio upload tool</b>	
— <b>Transmitting Audio to Camera</b> .....	94
Installing the SNC audio upload tool .....	94
Connecting the Camera to the Computer .....	94
Using the SNC audio upload tool .....	95
<b>Using the SNC video player — Playing</b>	
<b>Video/Audio File Recorded with Camera</b> .....	99
Installing the SNC video player .....	99
Using the SNC video player .....	100
<b>Using the SNC panorama creator</b>	
— <b>Creating a Panorama Image</b> .....	101
Installing the SNC panorama creator .....	101
Using the SNC panorama creator .....	101
Creating and transmitting a panorama	
image .....	102
Saving a custom image to the camera .....	102
<b>Using the SNC privacy masking tool</b>	
— <b>Masking a Camera Image</b> .....	103
Installing the SNC privacy masking tool .....	103
Using the SNC privacy masking tool .....	104
Setting a privacy mask .....	105
<b>Using the Custom Homepage Installer</b> .....	106
Uploading the homepage to the camera	
using the Custom Homepage Installer .....	106
<b>Assigning the IP Address to the Camera</b>	
<b>Using ARP Commands</b> .....	109
<b>Using the SNMP</b> .....	110
1. Inquiry Commands .....	110
2. Setting Commands .....	110
<b>When You Discard the Camera</b> .....	111
<b>Glossary</b> .....	112
<b>Index</b> .....	115

# Features

## High-quality monitoring via the network

You can monitor a high-quality live image from the camera using the Web browser on a computer connected to a 10BASE-T or 100BASE-TX network. The maximum frame rate is 30 fps for SNC-RZ50N and 25 fps for SNC-RZ50P.

Up to 20 users can view an image from one camera at the same time.

The camera supports JPEG, MPEG4 and H.264 video compression formats (video codecs) and can operate in either the “Single codec” or “Dual codec” mode. The “Single codec” mode allows monitoring in one of the two video codecs, and the “Dual codec” mode allows monitoring in JPEG and MPEG4 simultaneously.

## Remote-controllable high-speed pan/tilt mechanism and high magnification auto-focus zoom lens

The camera is provided with a high-speed (300° rotation/second) pan/tilt mechanism, which allows -170° to +170° panning and -90° to +25° tilting. The camera is also provided with a high-magnification zoom lens with optical zoom of 26 magnifications and digital zoom of 12 magnifications, for a total of 312 magnifications.

## Wireless LAN

Inserting the optional wireless card SNCA-CFW1 (802.11b) or SNCA-CFW5\* (802.11b or 802.11g) into the CF card slot or PC card slot enables you to transmit images from the camera via wireless LAN.

If you use the CF card slot, insert the Sony wireless card SNCA-CFW1 (optional) in it. If you use the PC card slot, use with a commercially available Compact Flash Type II-PCMCIA converting adaptor.

\* SNCA-CFW5 is not available in some countries and areas. For details, contact your authorized Sony dealer.

## Image transmission using an e-mail or FTP

You can send a still image from the camera as an e-mail or FTP server, attachment by setting off a trigger using an external sensor input, built-in object detection function or manual trigger button. You can also send still images sequentially for a determined period before and

after the trigger to an FTP server, or send them periodically.

## Preset positions and Tour programs

You can save up to 16 preset positions (pan, tilt and zoom positions) of the camera, and up to 5 tour programs composed from the preset positions. You can activate the preset positions by synchronizing them with an external sensor input or built-in object detection function.

## Intelligent object detection function

The camera is provided with an intelligent object detection function to watch images. This function combines “Moving object detection” that detects moving objects in camera images with “Unattended object detection” that detects objects that do not move for a specified period in camera images.

## Alarm output

The camera is equipped with two sets of alarm outputs. You can use the alarms to control peripheral devices by synchronizing them with the external sensor inputs, built-in object detection function, manual trigger button, Day/Night function or timer.

## Direct panning/tilting

Clicking on a desired point in the viewer allows you to pan and tilt the camera in the direction of that point. Dragging a desired area in the viewer allows you to zoom in the dragged area as well as pan and tilt the camera.

## Superimpose function

Date/time can be superimposed on the image. You can select the superimposing point from among four corners of the display, and you have the option to write time data and four-figure camera ID into it.

## NOTICE TO USERS

© 2005 Sony Corporation. All rights reserved. This manual or the software described herein, in whole or in part, may not be reproduced, translated or reduced to any machine readable form without prior written approval from Sony Corporation.

SONY CORPORATION PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL, THE SOFTWARE OR OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO THIS MANUAL, THE SOFTWARE OR SUCH OTHER INFORMATION. IN NO EVENT SHALL SONY CORPORATION BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, WHETHER BASED ON TORT, CONTRACT, OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL, THE SOFTWARE OR OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

Sony Corporation reserves the right to make any modification to this manual or the information contained herein at any time without notice. The software described herein may also be governed by the terms of a separate user license agreement.

- “IPELA” and **IPELA** are trademarks of Sony Corporation.
- “VISCA” is a trademark of Sony Corporation.
- Microsoft, Windows, Internet Explorer and MS-DOS are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Java is a trademark of Sun Microsystems, Inc. in the United States and other countries.
- Intel and Pentium are registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.
- Adobe, Acrobat and Adobe Reader are trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- CompactFlash and CF are trademarks of SanDisk Corporation, registered in the United States and other countries.

All other company and product names are trademarks or registered trademarks of the respective companies or their respective makers.

## Precautions

### Data and security

- You should keep in mind that the images or audio you are monitoring may be protected by privacy and other legal rights, and the responsibility for making sure you are complying with applicable laws is yours alone.
- Access to the images and audio is protected only by a user name and the password you set up. No further authentication is provided nor should you presume that any other protective filtering is done by the service. Since the service is Internet-based, there is a risk that the image or audio you are monitoring can be viewed or used by a third-party via the network.
- SONY IS NOT RESPONSIBLE, AND ASSUMES ABSOLUTELY NO LIABILITY TO YOU OR ANYONE ELSE, FOR SERVICE INTERRUPTIONS OR DISCONTINUATIONS OR EVEN SERVICE CANCELLATION. THE SERVICE IS PROVIDED AS-IS, AND SONY DISCLAIMS AND EXCLUDES ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THE SERVICE INCLUDING, BUT NOT LIMITED TO, ANY OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR THAT IT WILL OPERATE ERROR-FREE OR CONTINUOUSLY.
- Security configuration is essential for wireless LAN. Should a problem occur without setting security, or due to the limitation of the wireless LAN specifications, SONY shall not be liable for any damage.
- Always make a test recording, and verify that it was recorded successfully. SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF FAILURE OF THIS UNIT OR ITS RECORDING MEDIA, EXTERNAL STORAGE SYSTEMS OR ANY OTHER MEDIA OR STORAGE SYSTEMS TO RECORD CONTENT OF ANY TYPE.
- Always verify that the unit is operating properly before use. SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS DUE TO FAILURE OF THIS UNIT, EITHER DURING THE WARRANTY PERIOD OR AFTER EXPIRATION OF THE WARRANTY, OR FOR ANY OTHER REASON WHATSOEVER.
- If you lose data by using this unit, SONY accepts no responsibility for restoration of the data.

### Operating or storage location

Avoid operating or storing the camera in the following locations:

- Extremely hot or cold places (Operating temperature: 0°C to +40°C [32°F to 104°F])
- Exposed to direct sunlight for a long time, or close to heating equipment (e.g., near heaters)
- Close to sources of strong magnetism
- Close to sources of powerful electromagnetic radiation, such as radios or TV transmitters
- Locations subject to strong vibration or shock

### Ventilation

To prevent heat buildup, do not block air circulation around the camera.

### Transportation

When transporting the camera, repack it as originally packed at the factory or in materials of equal quality.

### Cleaning

- Use a blower to remove dust from the lens or optical filter.
- Use a soft, dry cloth to clean the external surfaces of the camera. Stubborn stains can be removed using a soft cloth dampened with a small quantity of detergent solution, then wipe dry.
- Do not use volatile solvents such as alcohol, benzene or thinners as they may damage the surface finishes.

#### Note on laser beams

Laser beams may damage a CCD. You are cautioned that the surface of a CCD should not be exposed to laser beam radiation in an environment where a laser beam device is used.

## How to Use This User's Guide

This User's Guide explains how to operate the SNC-RZ50N/RZ50P Network Camera from a computer. The User's Guide is written to be read on the computer display.

As this section gives tips on using the User's Guide, read it before you operate the camera.

### Jumping to the related page

When you read the User's Guide on the computer display, click on the sentence to jump to the related page.

### Software display examples

Note that the displays shown in the User's Guide are explanatory examples. Some displays may be different from the ones which appear as you operate the application software.

### Printing the User's Guide

Depending on your system, certain displays or illustrations in the User's Guide, when printed out, may differ from those as portrayed on your screen.

### Installation Manual (printed matter)

The supplied Installation Manual describes the names and functions of parts and controls of the Network Camera, connecting examples and how to set up the camera. Be sure to read the Installation Manual before operating.

---

# System Requirements

These are the requirements for the computer that displays the image or controls the camera.

## Processor

Intel Pentium 4, 1.5 GHz or higher (Pentium 4, 2.4 GHz or higher recommended)

## RAM

256 MB or more

## OS

Microsoft Windows XP, Windows Vista 32-bit edition (operation verified for Ultimate and Business editions)

## Web browser

Microsoft Internet Explorer Ver.6.0, 7.0

## Java

1.6.0\_12

As of June, 2009.

## Preparation

The Preparation section explains what the administrator has to prepare for monitoring images after installation and connection of the camera.

# Assigning the IP Address to the Camera

To connect the camera to a network, you need to assign a new IP address to the camera when you install it for the first time.

You can assign an IP address in two ways:

- Using the IP Setup Program stored in the supplied CD-ROM (see this page)
- Using the ARP (Address Resolution Protocol) commands (see page 109)

This section explains how to assign an IP address to the camera using the supplied setup program and how to configure the network.

Before starting, connect the camera, referring to “Connecting the Camera to a Local Network” in the supplied Installation Manual.

Consult the administrator of the network about the assigned IP address.

### Notes

- The IP Setup Program may not operate correctly if you use a personal firewall or antivirus software in your computer. In that case, disable the software or assign an IP address to the camera using another method. For example, see “Assigning the IP Address to the Camera Using ARP Commands” on page 109.
- If you are using Windows XP Service Pack 2 or later, or Windows Vista, disable the Windows Firewall function. Otherwise the IP Setup Program will not operate correctly. For the setting, see “Configuring Windows Firewall” in “When using Windows XP Service Pack 2 or later” on page 11 or “Configuring Windows Firewall” in “When using Windows Vista” on page 14.

## Assigning an IP address using the IP Setup Program

- 1** Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser. If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista, pop-up “AutoPlay” may appear. For details, “Installing software” in “When using Windows Vista” on page 12.

- 2** Click the **Setup** icon of **IP Setup Program**. The “File Download” dialog opens.

When you are using Windows XP Service Pack 2 or later, or Windows Vista, a message regarding the active contents may appear. For details, see “Installing software” in “When using Windows XP Service Pack 2 or later” on page 10 or “Installing software” in “When using Windows Vista” on page 12.

- 3** Click **Open**.

### Note

If you click “Save this program to disk” on the “File Download” dialog, you will not be able to perform set up correctly. Delete the downloaded file, and click the **Setup** icon again.

- 4** Install the IP Setup Program on your computer using the wizard. If the Software License Agreement is displayed, read it carefully and click **Accept** to continue with the installation.

- 5** Start the IP Setup Program.

When you are using Windows Vista, message “User Account Control – An unidentified program wants access to your computer” may appear. In this case, click **Allow**.

The program detects the network cameras connected to the local network and lists them on the Network tab window.



The screenshot shows the 'IP Setup Program ver \*\*\*' window with the 'Network' tab selected. It contains a table with columns for MAC address, IP address, Model, Serial No., and Version No. Below the table are radio buttons for 'Obtain an IP address automatically' and 'Use the following IP address'. There are also fields for 'Primary DNS server address', 'Secondary DNS server address', 'Third DNS server address', and 'Fourth DNS server address'. At the bottom, there are fields for 'HTTP port No.', 'Administrator name', and 'Administrator password', along with 'Reboot', 'Cancel', and 'OK' buttons.

- 6 Click on the camera in the list to which you want to assign a new IP address.

MAC address	IP address	Model	Serial No.	Version No.
08-00-46-ec-47-73	192.168.0.100	SNC-***	100001	1.00

The network settings for the selected camera are displayed.

- 7 Set the IP address.

**To obtain the IP address automatically from a DHCP server:**

Select **Obtain an IP address automatically**.

The screenshot shows the 'Obtain an IP address automatically' radio button selected, with the 'Use the following IP address' option unselected.

The IP address, Subnet mask and Default gateway are assigned automatically.

**To specify the IP address manually:**

Select **Use the following IP address**, and type the IP address, Subnet mask and Default gateway in the relevant boxes.

The screenshot shows the 'Use the following IP address' radio button selected. The IP address field contains '192 . 168 . 0 . 100', the Subnet mask field contains '255 . 0 . 0 . 0', and the Default gateway field is empty.

### Note

When you select **Obtain an IP address automatically**, make sure that the DHCP server is operating on the network.

- 8 Set the DNS server address.

**To obtain the DNS server addresses automatically:**

Select **Obtain DNS server address automatically**.

The screenshot shows the 'Obtain DNS server address automatically' radio button selected, with the 'Use the following DNS server address' option unselected.

**To specify the DNS server addresses manually:**

Select **Use the following DNS server address**, and type the Primary DNS server address and Secondary DNS server address in the relevant boxes.

The screenshot shows the 'Use the following DNS server address' radio button selected. The Primary DNS server address field contains '192 . 168 . 0 . 200', the Secondary DNS server address field contains '192 . 168 . 0 . 201', and the Third and Fourth DNS server address fields are empty.

### Note

The Third DNS server address and Fourth DNS server address are invalid for this camera.

- 9 Set the HTTP port No.

The screenshot shows the 'HTTP port No.' field with a radio button selected for '80' and a text box for manual input, with '(1024 to 65535)' in parentheses.

Normally, select **80** for the HTTP port No. To use another port number, type the port number between 1024 and 65535 in the text box.

- 10 Type the Administrator name and Administrator password.

The screenshot shows the 'Administrator name' field containing 'admin' and the 'Administrator password' field containing '\*\*\*\*\*'.

The factory settings of both items are “admin.”

### Note

You cannot change the Administrator name and Administrator password in this step. To change these items, see “Setting the User — User Menu” on page 62.

- 11 Confirm that all items are correctly set, then click **OK**.

The screenshot shows the 'OK' button.

If “Setting OK” is displayed, the IP address is correctly assigned.



**12** To access the camera directly, double-click the camera name in the list.

MAC address	IP address	Model	Serial No.	Version No.
08-00-46-ec-47-73	192.168.0.100	SNC-***	100001	1.00

**Tips**

- The factory setting of the camera network is as follows.

IP address: 192.168.0.100  
Subnet mask: 255.0.0.0

**Wireless LAN setting**

Type: Adhoc  
SSID: snc-rz50  
Channel: 11 ch  
WEP: Nothing  
IP address: 10.0.0.100  
Subnet mask: 255.0.0.0

- When you select the camera in the network tab and right-click **Copy**, and the camera’s **MAC address, DHCP/FIXED\*, IP address, Port number, Model name, Serial number** and **Version number** can be copied in the clipboard. When you hold down **Ctrl** and press **a**, you can select all cameras in the network tab.

\* **DHCP** stands for a DHCP setting. **FIXED** stands for a fixed IP address.

The welcome page of the network camera is displayed on the Web browser.



**Notes**

- If the IP address is not set correctly, the welcome page does not appear after step 12. In that case, try to set the IP address again.
- When you set the SSL function (SSL tab, page 51) to On, "Security Alert" dialog or Alert page may appear according to the status of the certificate. In this case, allow the browser to continue reading. (The model on sale in China does not support the SSL function.)


**When using Windows XP Service Pack 2 or later**

**Installing software**


A warning message regarding the active contents may appear when you install software such as IP Setup Program from CD-ROM. In this case, operate as follows:

Example: In case of IP Setup Program

If message “Internet Explorer” appears, click **Yes**.

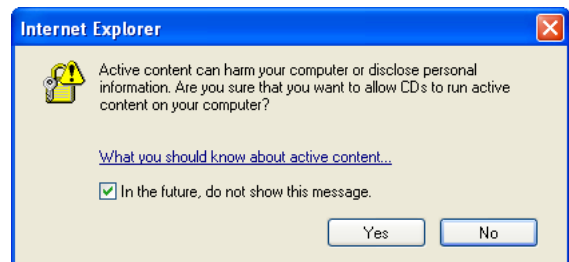


If message “File Download – Security Warning” appears, click **Run**.

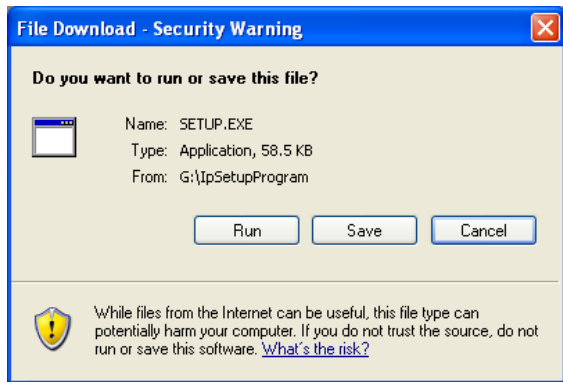

### Note

If you select **Save** in the “File Download – Security Warning” dialog, you will not be able to perform installation correctly. Delete the downloaded file, and click the **Setup** icon again.

If message “Internet Explorer – Security Warning” appears, click **Run**.

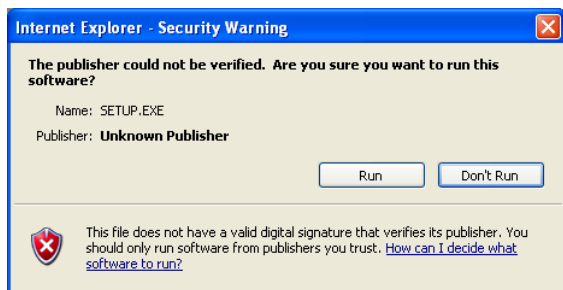


The software installation starts.


## Installing ActiveX Control

During installation of ActiveX Control, the information bar or “Security Warning” may appear. In this case, operate as follows:

If message “Information Bar” appears, click **OK**.

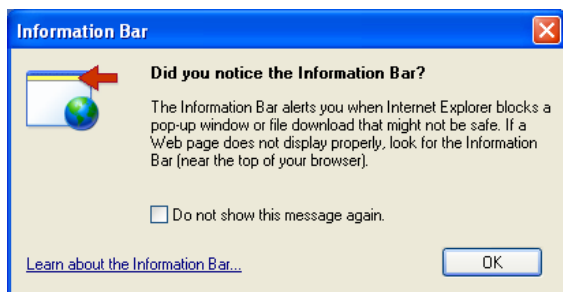

If the information bar appears, click on the bar and select **Install ActiveX Control...**

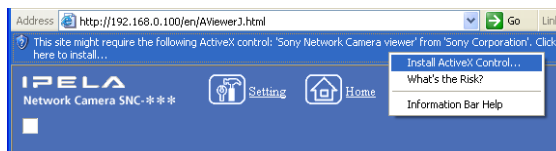

If “Internet Explorer – Security Warning” appears, click **Install**.



The installation of ActiveX Control starts. When installation is completed, the main viewer or the Object detection menu appears.


## Configuring Windows Firewall

The IP Setup Program or SNC audio upload tool may not operate correctly depending on the configuration of Windows Firewall. (No cameras are shown in the list even if they are detected.) In this case, confirm the Windows Firewall configuration as follows:

Example: In case of IP Setup Program

- 1 Select **Control Panel** from the Start menu of Windows.
- 2 Select **Security Center** of the working field.


- 3** Select **Windows Firewall** and select **Off** in the Windows Firewall dialog.

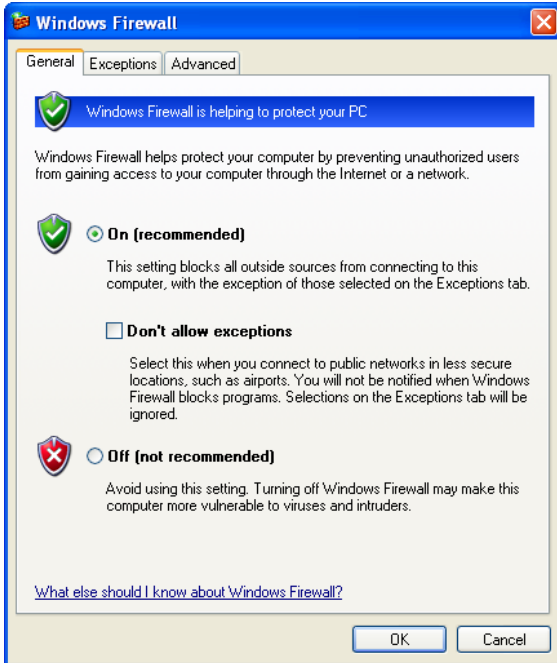

The cameras will be displayed in the list.

If you want to keep Windows Firewall **On**, continue with the following steps.


- 4** Select the “Exceptions” tab.
- 5** Select **Add Program....**

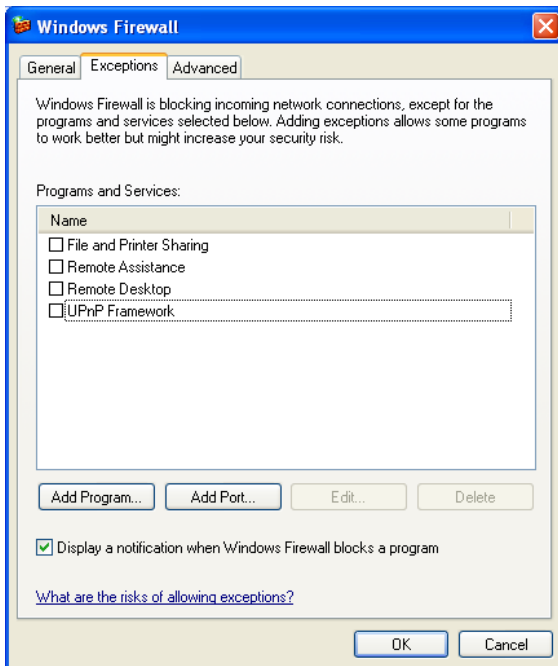

- 6** In the Add Program dialog, select **IP Setup Program** and click **OK**.

Then the IP Setup Program is added to the Programs and Services list.

- 7** Click **OK**.

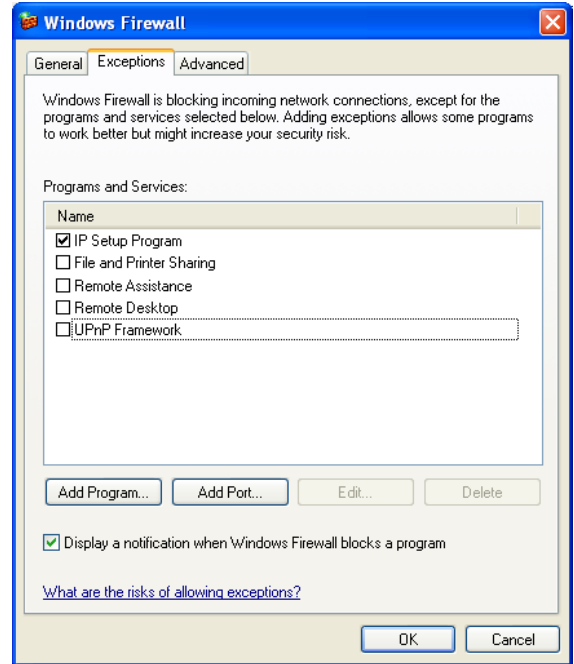

When the above procedure is completed, the cameras connected in the local network are displayed in the IP Setup Program.


## When using Windows Vista

### Installing software

A warning message regarding the active contents may appear when you install software such as IP Setup Program from CD-ROM. In this case, operate as follows:

Example: In case of IP Setup Program

If pop-up “AutoPlay” appears when a CD-ROM is inserted into the CD-ROM drive, click **Install or run program**.

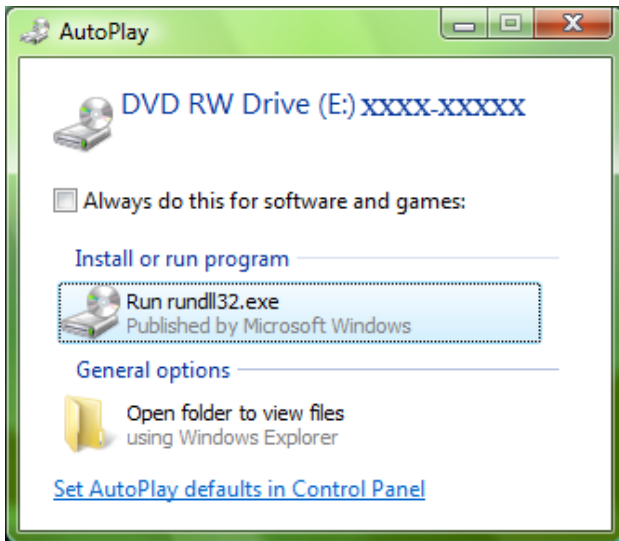


#### Note

If you click **Open folder to view files**, Web browser will not open automatically. In this case, double-click the “index.htm” file in the CD-ROM.

If message “Internet Explorer” appears, click **Yes**.



If message “File Download – Security Warning” appears, click **Run**.

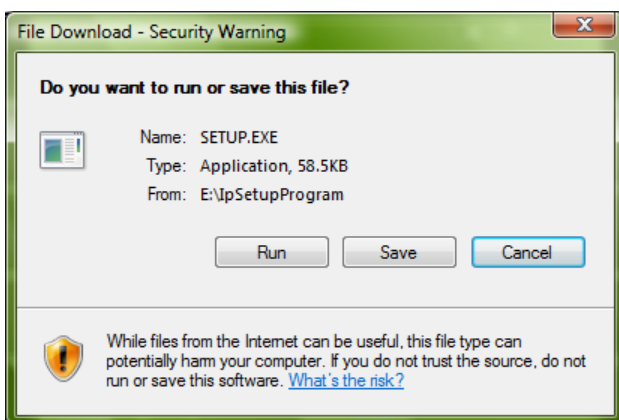


#### Note

If you select **Save** in the “File Download – Security Warning” dialog, you will not be able to perform

installation correctly. Delete the downloaded file, and click the Setup icon again.

If message “Internet Explorer – Security Warning” appears, click **Run**.

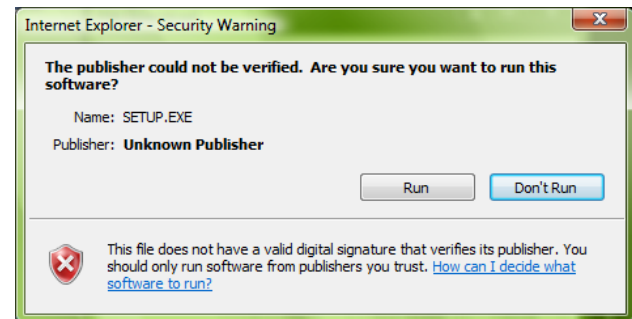

If message “User Account Control – An unidentified program wants access to your computer” appear, click **Allow**.

The software installation starts.


## Starting the software

When you start software such as IP Setup Program, message “User Account Control – An unidentified program wants access to your computer” may appear. In this case, click **Allow**.


## Installing ActiveX Control

During installation of ActiveX Control, the information bar or “Security Warning” may appear. In this case, operate as follows:

If message “Information Bar” appears, click **OK**.

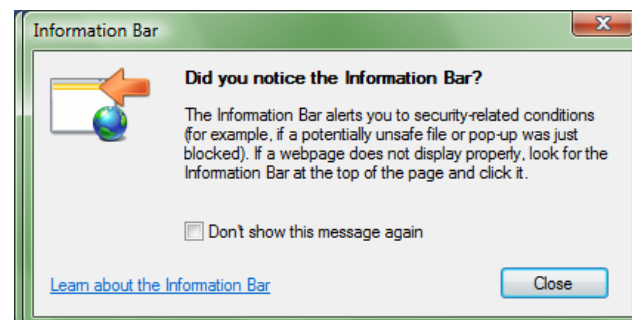

If the information bar appears, click on the bar and select **Install ActiveX Control...**

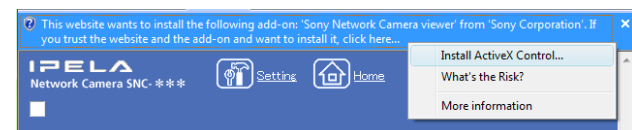

If message “User Account Control – Windows needs your permission to continue” appear, click **Continue**.

If “Internet Explorer – Security Warning” appears, click **Install**.




The installation of ActiveX Control starts. When installation is completed, the main viewer or the Object detection menu appears.

## Configuring Windows Firewall

The IP Setup Program or SNC audio upload tool may not operate correctly depending on the configuration of Windows Firewall. (No cameras are shown in the list even if they are detected.) In this case, confirm the Windows Firewall configuration as follows:


Example: In case of IP Setup Program

- 1 Select **Control Panel** from the Start menu of Windows.
- 2 Click **Windows Firewall**.
- 3 Select **Turn Windows Firewall on or off**. “User Account Control – Windows needs your permission to continue” may appear. In this case, click **Continue**.
- 4 Select **Off** in the “General” tab.

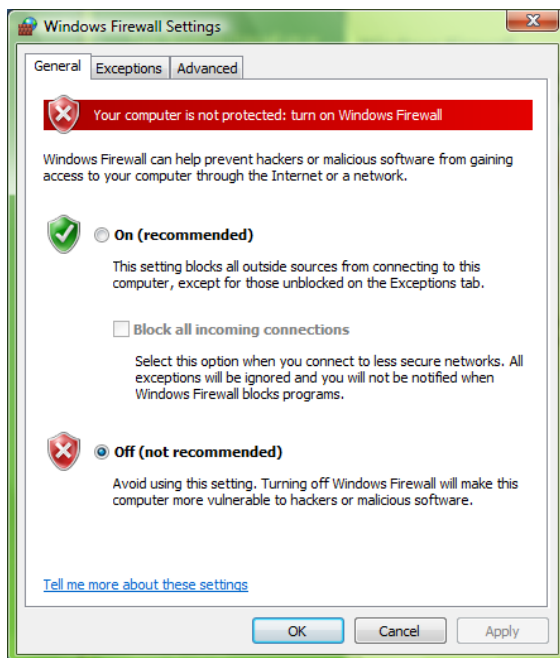


The cameras will be displayed in the list. If you want to keep Windows Firewall **On**, continue with the following steps.

- 5 Select the “Exceptions” tab.
- 6 Select **Add Program...**
- 7 If the Add Program dialog appears, select **IP Setup Program** and click **OK**.

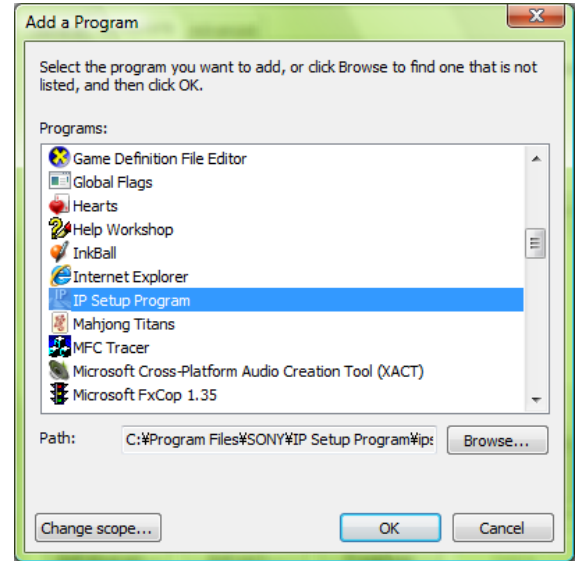

Then the IP Setup Program is added to the Program or port list.

- 8 Click **OK**.

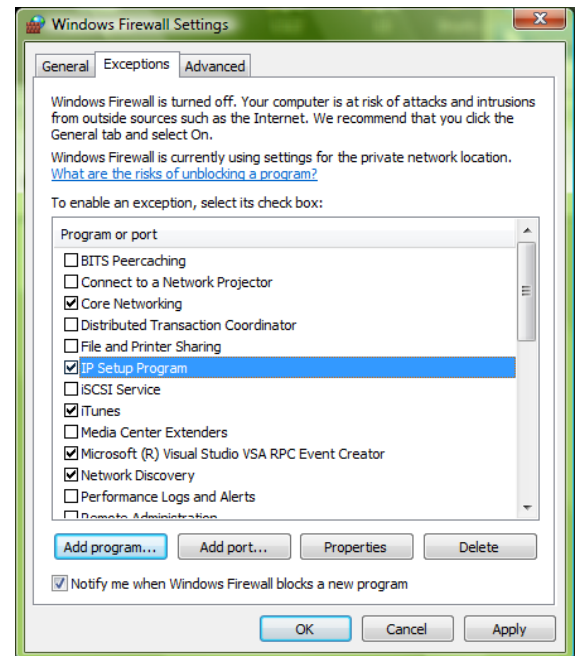

When the above procedure is completed, the cameras connected in the local network are displayed in the IP Setup Program.


# Accessing the Camera Using the Web Browser

After the IP address has been assigned to the camera, check that you can actually access the camera using the Web browser installed on your computer. Use Internet Explorer as the Web browser.

- 1 Start the Web browser on the computer and type the IP address of the camera in the URL box.



The welcome page is displayed.

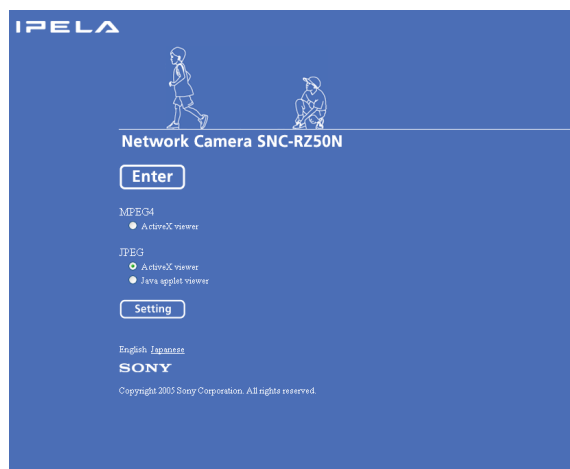

## Note

When you set the SSL function (SSL tab, page 51) to **On**, “Security Alert” dialog may appear. For details, refer to “Using the SSL function” on page 15.

- 2 Click **Enter**.

The main viewer is displayed.



If the main viewer is displayed correctly, accessing the camera is confirmed.

## Using the SSL function

### Note

The model on sale in China does not support the SSL function.

### When Internet Explorer 6 is used


“Security Alert” dialog may appear according to the status of the certificate. In this case, click **Yes** to continue.

The welcome page appears (in SSL communication).



## When Internet Explorer 7 is used


When you enter the camera IP address, “Certificate Error” may appear according to the status of the certificate set on the camera. In this case, click **Continue to this website (not recommended)**, to continue. The welcome page appears (in SSL communication).

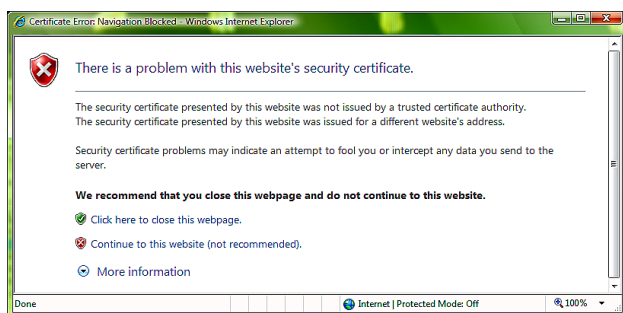


## When “Allow HTTP connection for some clients” (page 51) is checked

To use HTTP and SSL connections separately to access, enter the following in the address box of the browser.
 
### For HTTP connection

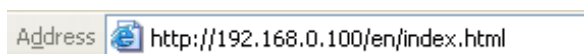


### For SSL connection

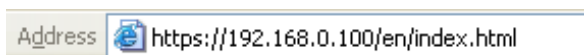 

## When the main viewer of the camera is displayed for the first time

When you click **Enter**, “Security Warning” is displayed. When you click **Yes**, ActiveX control is installed and the main viewer is displayed.

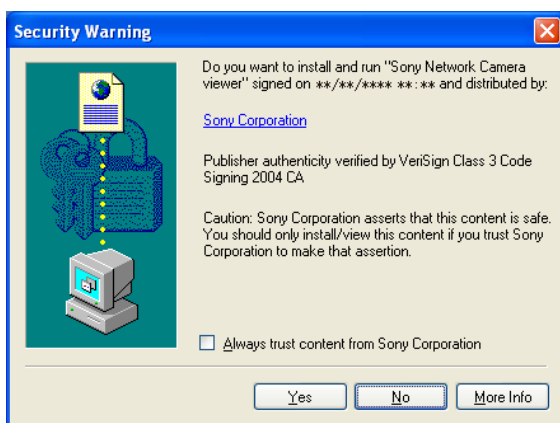

### Notes

- If **Automatic configuration** is enabled in the Local Area Network (LAN) Settings of Internet Explorer, the image may not be displayed. In that case, disable

**Automatic configuration** and set the Proxy server manually. For the setting of the Proxy server, consult your network administrator.

- When you install ActiveX Control, you should be logged in to the computer as Administrator.
- When you are using Windows XP Service Pack 2 or later, or Windows Vista, the information bar or “Security Warning” may appear as you click **Enter**. For details, see “Installing ActiveX Control” in “When using Windows XP Service Pack 2 or later” on page 11 or “Installing ActiveX Control” in “When using Windows Vista” on page 13.

### Tip

Every page of this software is optimized as display character size **Medium** for Internet Explorer.

## To display the welcome page and the main viewer correctly

To operate the welcome page and the main viewer correctly, set the security level of the Internet Explorer to **Medium** or lower, as follows:

- 1 Select **Tools** from the menu bar for Internet Explorer, then select **Internet Options** and click the **Security** tab.
- 2 Click the **Internet** icon (when using the camera via the Internet) or **Local intranet** icon (when using the camera via a local network).
- 3 Set the slider to **Medium** or lower. (If the slider is not displayed, click **Default Level**.)

## When using antivirus software, etc. on the computer

- When you use antivirus software, security software, personal firewall or pop-up blocker on your computer, the camera performance may be reduced, for example, the frame rate for displaying the image may be lower.
- The Web page displayed when you log in to the camera uses JavaScript. The display of the Web page may be affected if you use antivirus software or other software described above on your computer.



# Basic Configuration by the Administrator

You can monitor the camera image by logging in with the initial conditions set for this network camera. You can also set various functions according to the installing position, network conditions or purpose of the camera. We recommend you configure the following items before monitoring images from the camera.

Setting contents	Setting menu
Flip the image according to the installation position (desk top or ceiling).	E. flip (page 39)
Set the format of the image sent from the camera.	Video codec Tab (page 42)
Select the white balance mode according to the installing position (indoor or outdoor).	White balance (page 40)
Select the brightness of the image sent from the camera.	Exposure mode (page 40) Brightness (page 41)
Select the quality of the image sent from the camera.	Video codec Tab (page 42)
Select the view size of the image.	View size (page 22)
Select whether the audio from the external microphone is sent or not.	Microphone (page 39)
Synchronize the date and time of the camera with those of the computer.	Date & time Tab (page 35)
Make the setting for sending the monitor image attached to an e-mail.	e-Mail (SMTP) Menu (page 67)
Set the user access right for the camera.	User Menu (page 62)
Set a place to be watched beforehand.	Preset position Menu (page 64)
Prepare a panorama image.	Creating a Panorama Image (page 101)

## Operating the Camera

The Operating the Camera section explains how to monitor the image from the camera using your Web browser. Use Internet Explorer as the Web browser. The functions of the camera should be set by the Administrator. For the setting of the camera, see “Administrating the Camera” on page 31.

## Administrator and User

This network camera identifies the people who log in as the **Administrator** or **User**.

The **Administrator** can use all the functions of this network camera including camera setting. The **User** can use the functions for monitoring the image and audio from the camera, and controlling the camera. The **Viewer mode** setting is used to restrict the user's access rights. There are five types of users.

Each type of user can use the corresponding functions below.

Function	Administrator	User				
		Full	Pan/Tilt	Preset position	Light	View
Monitor a live image	●	●	●	●	●	●
View the date and time	●	●	●	●	●	●
Control the frame rate (Available in JPEG mode only)	●	●	–	–	–	–
Control the image view size	●	●	●	●	●	–
Zoom an image using the digital zoom	●	●	●	●	●	–
Save a still image in the computer	●	●	●	●	●	– <sup>1)</sup>
Send an image file to the FTP server	●	●	–	–	–	–
Send an image attached to an e-mail	●	●	–	–	–	–
Record an image in the memory	●	●	–	–	–	–
Control the alarm output of the I/O port on the camera	●	●	–	–	–	–
Switch the Day/Night function mode	●	●	–	–	–	–
Play an audio file (Voice alert)	●	●	–	–	–	–
Switch the TCP/UDP transmission mode (Available in MPEG4/H.264 mode only)	● <sup>2)</sup>	● <sup>2)</sup>	–	–	–	–
Call the Preset position	●	●	●	●	–	–
Perform the pan/tilt/zoom operation	●	●	●	–	–	–
Receive the audio	●	●	●	●	●	●
Control the setting menu	●	–	–	–	–	–

- Usable function
- Not usable function

- 1) This function is usable with the Java applet viewer.
- 2) This function is not usable with the Java applet viewer.

The access rights of the administrator and the user can be set in “Setting the User — User Menu” of the Administrator menu on page 62.

# Logging in to Homepage — Welcome Page

## Logging in as a user

- 1 Start the Web browser on your computer and type the IP address of the camera you want to monitor.



The welcome page of Network Camera is displayed.



- 2 Select the viewer.  
The usable codecs and viewers are displayed depending on the **Mode** setting in the **Video Codec** Tab in the Camera menu (page 42).


### When Mode is set to Single codec

You can monitor the image of the selected video codec (JPEG, MPEG4 or H.264). For JPEG images, you can select **Java applet viewer**.

### When JPEG is selected



### When MPEG4 is selected

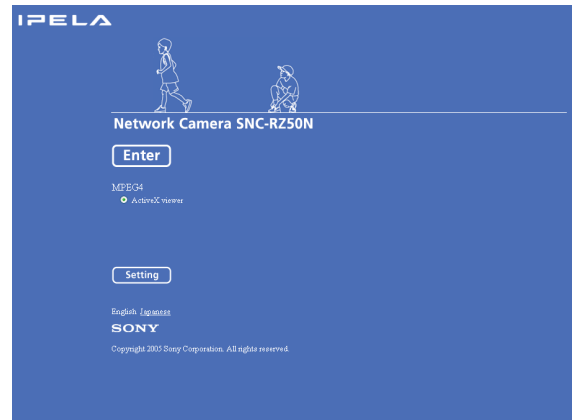

### When H.264 is selected



### When Mode is set to Dual codec

You can monitor JPEG and MPEG4. For JPEG, you can select **Java applet viewer**.



- 3 Click **Enter**.  
The main viewer appears.

#### With the ActiveX viewer (MPEG4/H.264)



#### With the Java applet viewer



Control the camera from the main viewer.

#### Note

If the welcome page does not start correctly, the security level of the Internet Explorer may be set to higher than **Medium**. See “To display the welcome page and the main viewer correctly” on page 16 and check the security level.

## Displaying the Administrator menu directly

When the administrator sets the camera functions, the Administrator menu can be opened directly from the welcome page.

- 1 Select the viewer language on the welcome page. Click **English** or **Japanese** at the bottom of the welcome page.
- 2 Click **Setting** on the welcome page. The following dialog appears.



- 3 Enter the user name and password for Administrator, then click **OK**.

The user name “admin” and the password “admin” are set at the factory for the Administrator. You can change them using the User menu of the Administrator menu (see page 62).

The Administrator menu appears in other window.



## About viewers

You can use the following viewers.

### ActiveX viewer

This viewer can monitor the camera image in any of the **JPEG**, **MPEG4** and **H.264** video codecs.

You must install this viewer when you access the main viewer for the first time.

## When you display the main viewer of the camera for the first time

When you log in the network camera using ActiveX viewer for the first time (by clicking **Enter** to enter the main viewer), the Security Warning appears. Click **Yes** and install ActiveX Control. You can use all the functions of the viewer with ActiveX Control.

## Java applet viewer

You can select this viewer when the camera image is in **JPEG**. The frame rate is lower than the ActiveX viewer. The Java applet viewer operates only when Java is installed and Java (Sun) is enabled. If it does not operate correctly, check whether the Java has been installed successfully and Java (Sun) is enabled.

For details on the Java version for which operation has been verified, see “System Requirements” on page 7.

### To check the Java version

Select **Tools** from the menu bar of Internet Explorer, then select **Internet Options** and click the **Advanced mode** tab. Check the version of Java displayed in **Java (Sun)**. If **Java (Sun)** is not displayed, it means that Java is not installed. You need to install Java.

### To enable Java Plug-in

Example: In case of Java Plug-in Ver. 1.6.0\_01

Check “Use JRE 1.6.0\_01 for <applet> (requires restart)” in “Java (Sun)”.

### To install Java Plug-in

Download Java 2 Runtime Environment, Standard Edition (JRE) from the website of Sun Microsystems, Inc., and install it by following the instructions on the installer.

### Notes

- If **Automatic configuration** is enabled in the Local Area Network (LAN) Settings of Internet Explorer, the camera image may not be displayed. In that case, disable **Automatic configuration** and set the Proxy server manually. For the setting of the Proxy server, consult your network administrator.
- When you install ActiveX Control, you should be logged in to the computer as the Administrator.


### Tip

Every page of this software is optimized for display character size **Medium** for Internet Explorer.


# Configuration of Main Viewer

This section explains the functions of the parts and controls of the main viewer. For a detailed explanation on each part or control, see the specified pages.


## Main viewer using ActiveX viewer (MPEG4 or H.264)

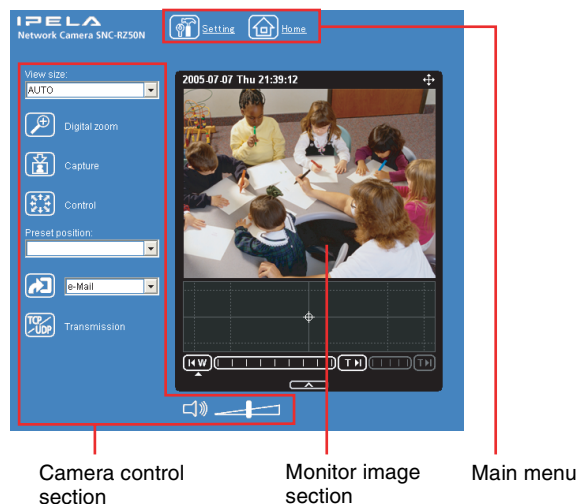

## Main viewer using ActiveX viewer (JPEG)

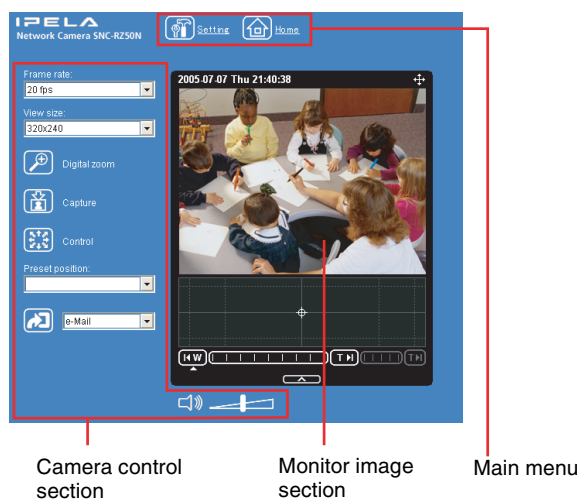

## Main viewer using Java applet viewer

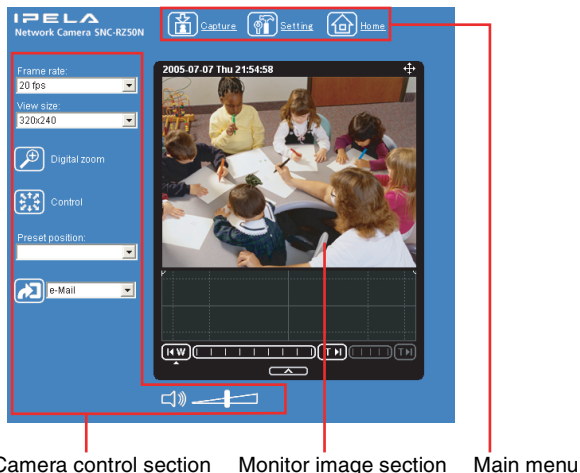

Camera control section    Monitor image section    Main menu

## Main menu



### Setting

Click to display the Administrator menu. (page 31)  
You can operate this function only when logging in as the administrator.



### Home

Displays the welcome page.

## Camera control section

### Frame rate



(Displayed only when the camera image is in JPEG.)

Selects the frame rate to transmit images. (page 24)

### View size



Selects the view size to be displayed. (page 24)



### Digital zoom

Click to change the size of the digital zoom. (page 24)



### Capture


(Displayed in the main menu when the Java applet viewer is used.)

Click to capture a still image shot by the camera and to store it in the computer. (page 25)



### Control

Click to operate the camera using the pan, tilt and zoom functions.

When you click this icon,  appears and enables you to control pan, tilt and zoom functions from the main viewer. (page 26)

## Preset position



(Displayed only when one or more preset positions are stored in memory.)

Select the **Preset position** name from the drop-down list. The camera will move to the preset position that you have stored in memory using the Preset position menu.



### Control panel


Click to display the following control panel.



You can control pan, tilt, zoom, and focus of the camera. (page 26)

## Pan/Tilt control

Click the arrow button of the direction in which you want to move the camera. Keep it pressed to move the camera continuously.

To return to the home position, click .

You can select the operation mode of the 8-direction arrow buttons for panning and tilting in **PTZ mode** of the System menu.

## Zoom control

Press **WIDE** to zoom out, and press **TELE** to zoom in. Zooming continues while the button remains pressed.

## Focus control

To focus on a nearby object, press **NEAR**. To focus on a distant object, press **FAR**.

By pressing **ONE PUSH AF**, the focus is set to the optimum position.


### Note

To control the focus manually, set **Focus mode** of the Camera menu to **Manual**. (page 39)

## Trigger



(Displayed only when the camera **Viewer mode** (page 63) is set to **Full** and one or more triggers are enabled in the Trigger menu (page 80).)

Select the function you want to use from the drop-down list and click . The selected function is activated.

The selectable functions are as follows:

- send the still images attached to an e-mail (page 28)
- send the still images to an FTP server (page 28)
- record the still image files in the built-in memory, ATA memory card (not supplied) or CF memory card (not supplied) (page 28)
- control the alarm output (page 29)
- switch the Day/Night function on/off (page 29)
- play the audio file stored in the camera (page 29)

## Transmission (TCP/UDP transmission mode)

(Displayed only when the camera image is in MPEG4 or H.264 and the ActiveX viewer is used.)

Each click switches the transmission mode of the video/audio data between TCP mode, UDP (Unicast) mode, and UDP (Multicast) mode. (page 30)

The last selected mode is saved in the computer, and will stay selected for the next startup.

### Notes




- When the SSL function is used, the transmission function cannot be used.
- The model on sale in China does not support the SSL function.

## Volume




(Displayed when **Microphone** (page 39) is set to **On**.)

Drag the  bar to adjust the volume.

When you click , the icon changes to  and the audio output stops. To output the audio, click  again.

### Note

If  does not appear when the Java applet viewer is used, **Audio codec** may not be set to **G.711 (64 kbps)** (page 40), or Java may not be installed correctly. To check if Java is installed correctly, refer to “Java applet viewer” of “About viewers” on page 20.

## Monitor image



The image shot by the camera is shown here. The date and time is displayed at the top of the window.

# Controlling the Monitor Image

You can monitor the camera image on the monitor window of the main viewer.

## Monitoring the camera image

- 1 Log in to the homepage to display the main viewer. To log in, see “Logging in as a user” on page 19.



- 2 Select the frame rate (only when the camera image is in **JPEG**).



Click the **Frame rate** list box to select the frame rate for transmitting the image. Selectable frame rates are as follows.

### SNC-RZ50N

1, 2, 3, 4, 5, 6, 8, 10, 15, 20, 25, 30 fps

### SNC-RZ50P

1, 2, 3, 4, 5, 6, 8, 12, 16, 20, 25 fps

“fps” is a unit indicating the number of frames transmitted per second.

For example, if you select **30 fps** for SNC-RZ50N, the image is sent at the maximum speed of the connected line (30 fps maximum).

### Note

The selected value indicate the maximum number of frame rate that can be transmitted.

The number of frames actually transmitted may vary depending on network environments and camera settings (image size and image quality settings).

- 3 Select the view size.



Click **View size** list box to select the view size from **Auto**, **640 × 480**, **320 × 240**, or **160 × 120**.

**Auto** is determined by the image size specified in the Camera menu (page 42).

## Zooming in the monitor image

- 1 Click
- 2 Click the point you want to zoom in. The image is magnified by about 1.5 times with the clicked point at the center.



The digital zoom icon changes to


- 3 To cancel zooming in, click



# Capturing a Monitor Image

You can capture an image being monitored as a still image and save it in the computer.

## Capturing a monitor image

- 1 Display the camera image in the monitor window.
- 2 Click .  
The still image of the moment you click is captured, and this still image is displayed in the capture window.

### With the ActiveX viewer



### With the Java applet viewer




- 3 To close the capture window, click **Cancel** or **Close**.

# Saving the captured image

## With the ActiveX viewer


- 1 Capture the monitor image.
- 2 Click **Save**.  
The **Save As** dialog appears.

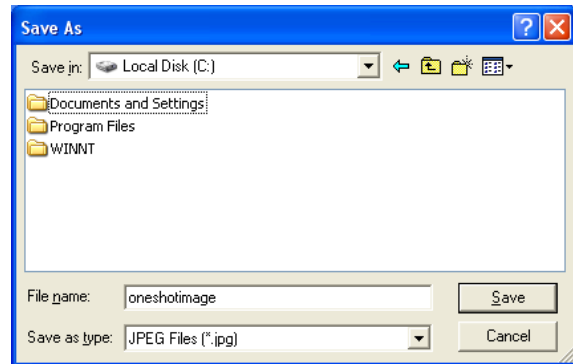

- 3 Select **JPEG Files** or **Windows Bitmap Files** as **Save as type**.
- 4 Type the **File name** and specify **Save in**, then click **Save**.

## With the Java applet viewer

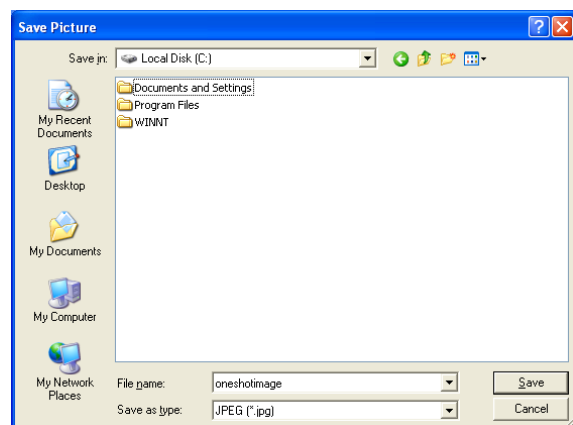


- 1 Capture the monitor image.
- 2 Right-click the mouse to display the menu and select **Save Picture As...**.  
The **Save Picture** dialog appears.






- 3 Select **JPEG** or **Bitmap** as **Save as type**.
- 4 Type in **File name** and specify **Save in**, then click **Save**.

# Operating the Camera



You can operate the camera from the main viewer.

When you click , the display switches to . Next,  and **Preset position** list box are displayed on the upper right of the window.

When  is displayed in white on the upper right of the window, you can use the Pan/Tilt control function. If you execute the digital zoom when you can control Pan/Tilt,  turns gray and you can no longer control the camera in the monitor window or in the panorama window, nor can you control zoom in the zoom bar.




When you cancel the digital zoom,  returns to white.

## Notes

- The **Preset position** list box is not displayed when no preset position is memorized.
- When **Exclusive control mode** of the System menu is set to **On** and you click , the remaining time that you are authorized to operate the camera is displayed. If you cannot get the control, the icon switches to  and the waiting time is displayed.

## Controlling via the control panel

You can operate the camera direction, zoom, and focus by using the control panel for the monitor image currently displayed.


- 1 Click .  
 is displayed.
- 2 Click .  
The control panel is displayed.



- 3 Control each function using the displayed control panel.

## Pan/Tilt control

Click the arrow button of the direction in which you want to move the camera. Keep it pressed to move the camera continuously.

To return to the home position, click .

## Zoom control

Click **WIDE** to zoom out, and click **TELE** to zoom in. Zooming continues while the button remains pressed.

## Focus control

To focus on a nearby object, click **NEAR**. To focus on a distant object, click **FAR**.


By clicking **ONE PUSH AF**, the focus is set to the optimum position.

## Note

To control the focus manually, set **Focus mode** of the Camera menu to **Manual**. (page 39)


## Panning and tilting by clicking the monitor image

Click on the monitor image, and the camera moves so that the clicked portion is positioned at the center of the display.

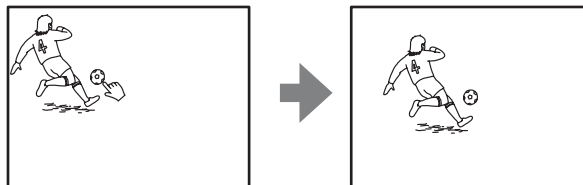

## Panning, tilting and zooming by specifying the area

Click and hold the left button of the mouse on the monitor image, and drag the mouse diagonally to draw a red frame around the portion you want to enlarge. The camera moves so that framed portion is positioned at the center of the display and is zoomed in.

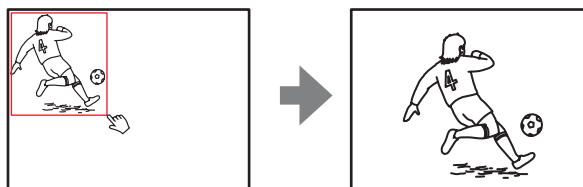

## Notes


- When **Zoom mode** in the Camera menu is set to **Full** (see page 39), zooming of the specified area stops at the **TELE** end of the optical zoom. If you want to

zoom in further using the digital zoom, specify the area again.

- When the specified area is zoomed in, the center may be shifted or some portion of the image may appear out of the monitor image section. In this case, click the point you want to move to the center or click the arrow button on the image control section.

## Zooming an image by the camera zoom bar


When you have the authorization to control this function, the zoom bar is displayed below the window. You can specify a location to be zoomed by clicking the zoom bar.

The zoom bar is either displayed or turned off by clicking  below the image frame.



- W** Optical WIDE end icon: Click to move the zoom to optical WIDE end (same magnification).
- T** Optical TELE end icon: Click to move the zoom to optical TELE end (26 × magnification).
- TM** Digital TELE end icon: Click to move the zoom to digital TELE end (312 × magnification)

## Turning off the zoom bar


When you are not going to use the zoom bar, click  under the panorama window to turn off the panorama window. Click it again to turn off the zoom bar.

**Note**

The zoom bar of the digital area is not displayed when **Zoom mode** of the Camera menu is not set to **Full**.

## Moving the camera to a preset position


Select a preset position name from the **Preset position** drop-down list. The camera will move to the preset position that you have stored in memory using the Preset position menu (page 64).

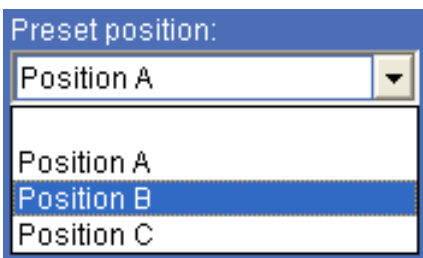

# Controlling the Camera on a Panorama Image

When you have the authorization to control the camera, the panorama window is displayed under the monitor window.

In the panorama window, a 360° view around the camera is displayed as a panorama image. When you click on the displayed panorama image, the camera faces the clicked area.

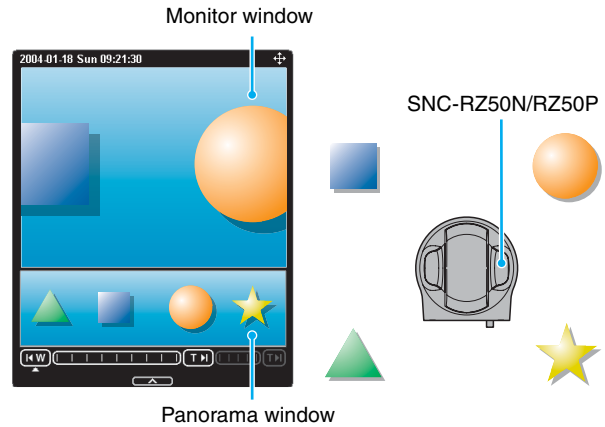

## To create the panorama image

Create the panorama image with the supplied SNC panorama creator. Refer to page 101 for details.

**Tip**

The panorama image is a still picture converted from the image taken when you were going to create it with the SNC panorama creator. When the camera is moved or when the layout around the camera is changed, you should create the panorama image again.


## Facing the camera toward a specified point

- 1 Create a panorama image with the SNC panorama creator and display it.



- 2 Click the point you want to watch in the panorama window.


The camera is moved to face toward the clicked point, and the present image at the point is displayed in the monitor window.

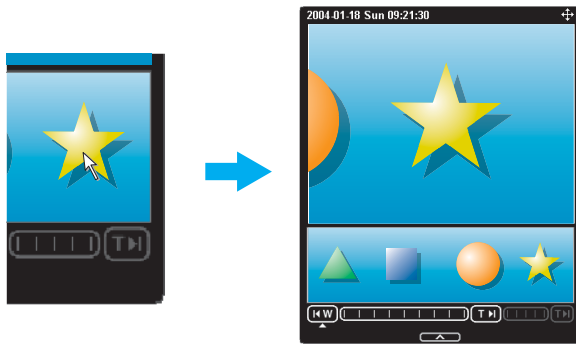


Click the point you want to watch in the panorama window.

The present situation is displayed in the monitor window at the clicked point.

### To turn off the panorama window

When you are not going to use the panorama image, click  under the panorama window to turn off the panorama window.

## Using the Trigger Button

You can operate various functions of the camera simply by clicking  (trigger) in the main viewer.


### Sending a monitor image via e-mail

You can send a captured still image by attaching it to an e-mail.

To use this function, you need to make **e-Mail (SMTP)** active and set the address in the Trigger menu of the Administrator menu properly (page 80).

- 1 Display the image on the monitor window.
- 2 Select **e-Mail** from the trigger drop-down list.




- 3 Click .  
The still image of the moment you click is captured, and your e-mail with the image file attached is sent to the specified mail address.

### Sending a monitor image to an FTP server

You can send a captured still image to the FTP server. To use this function, you need to make **FTP client** active and set the address in the Trigger menu of the Administrator menu properly (page 80).

- 1 Display the image on the monitor window.
- 2 Select **FTP** from the trigger drop-down list.



- 3 Click .  
The still image of the moment you click is captured, and the image file is sent to the FTP server.

### Recording a camera image as a still image


You can capture a camera image as a still picture and record it.

The still images are recorded in the built-in memory, ATA memory card (not supplied) or “CF memory card” (not supplied).

To use this function, you need to make **Image memory** active and set the details in the Trigger menu of the Administrator menu (page 80).

- 1 Display the image on the monitor window.
- 2 Select **Image memory** from the trigger drop-down list.



- 3 Click . The still image of the moment you click is captured, and the image file is recorded.


## Controlling alarm output 1, 2

You can control Alarm output 1, 2.

To use this function, you need to make **Alarm output 1** or **Alarm output 2** active in the Trigger menu of the Administrator menu (page 81).

- 1 Display the image on the monitor window.
- 2 Select **Alarm output1** or **Alarm output2** from the trigger drop-down list.



- 3 Click . The alarm output is switched by clicking. The alarm output mode can be selected from **Toggle** or **Timer** of **Alarm output 1, 2** in the Trigger menu (page 81).

### Tip

For the connection of peripheral devices to the alarm output of the I/O port, see the supplied Installation Manual.

## Controlling Day/Night function


You can control the Day/Night function On (night mode) and Off (day mode).

To use this function, you need to make **Day/Night** active in the Trigger menu of the Administrator menu (page 81).


- 1 Display the image on the monitor window.

- 2 Select **Day/Night** from the trigger drop-down list.



- 3 Click . Each click switches the Day/Night function alternately between On (night mode) and Off (day mode).

### Note

If **Day/Night mode** in the Trigger-Day/Night menu (page 81) is set to **Disable** or **Auto**, you cannot control the Day/Night function by clicking .


## Playing the audio file stored in the camera

You can play the audio file previously stored in the camera using the SNC audio upload tool.

To use this function, you need to make **Voice alert1**, **Voice alert2** and **Voice alert3** active in the Trigger menu of the Administrator menu (page 81).

- 1 Display the image on the monitor window.
- 2 Select **Voice alert1**, **Voice alert2** or **Voice alert3** from the trigger drop-down list.



- 3 Click . Playback of the selected audio file starts and the playback sound is output from the speaker connected to the camera.


# Switching TCP/UDP Transmission Mode


You can select TCP or UDP as the communication port for the video/audio data.

This function can be used when **Mode** (video codec mode) (page 42) is set to **MPEG4** or **H.264** and the ActiveX viewer is used.

## Notes

- The function may not operate correctly when you use personal firewall software or antivirus software on your computer. In that case, disable the software or select the TCP mode.
- If you are using Windows XP Service Pack 2 or later, or Windows Vista, disable “Windows Firewall.” For details, see “Configuring Windows Firewall” in “When using Windows XP Service Pack 2 or later” on page 10 or “Configuring Windows Firewall” in “When using Windows Vista” on page 12.
- When the SSL function is used, TCP/UDP transmission icon does not appear. UDP transmission cannot be selected whereas TCP transmission can be used.

- 1 Open the main viewer.
- 2 Click  **TCP/UDP Transmission**. The **Select TCP/UDP** dialog appears.

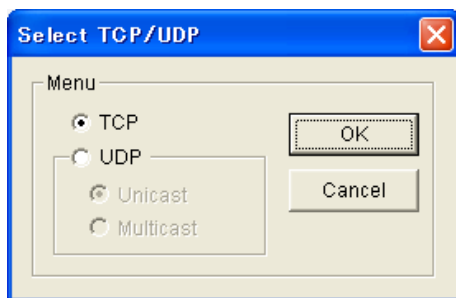

- 3 Click one of the buttons **TCP**, **UDP (Unicast)** or **UDP (Multicast)**.

**TCP:** This is normally selected.

When **TCP** is selected as the communication port, HTTP communication is adopted for video/audio communications.

HTTP is the protocol used for reading the usual Web page.

In an environment capable of reading Web pages, you can watch or listen to the video/audio by selecting the TCP port.

**UDP (Unicast):** When **UDP (Unicast)** is selected as the communication port, RTP (Real-time

Transport Protocol) is adopted for video/audio communications. Since RTP is the protocol for running video/audio data, the video/audio playback is smoother than when TCP (HTTP) is selected. If a firewall is installed between the camera and the computer, or depending on the network environment, the video/audio may not play back properly when **UDP (Unicast)** is selected. In that case, select **TCP**.

**UDP (Multicast):** This protocol is selectable when **Multicast streaming** (page 44) is **On**. When **UDP (Multicast)** is selected as the transmission port, RTP (Real-time Transport Protocol) and UDP multicast techniques are adopted for video/audio transmission. By selecting it, the network transmission load of the camera can be reduced. If a router that does not correspond to the multicast or a firewall is installed between the camera and the computer, the video/audio may not play back properly. In that case, select **TCP** or **UDP (Unicast)**.

- 4 Click **OK** to close the dialog.

If you do not change the transmission setting, click **Cancel**.

## Administering the Camera

The Administering the Camera section explains how to set the functions of the camera by the Administrator. For the monitoring of the camera image, see “Operating the Camera” on page 18.


This section explains the basic operations and each option of the Administrator menu.

### Note on the display of menu options

The setting menus of this unit will clearly display only the setting options that you can currently select. The grayed out options cannot be selected.

## Basic Operations of Administrator Menu

You can use the Administrator menu to set all functions to suit the user's needs.

Click **Setting** in the welcome page or  in the main viewer to display the Administrator menu.


### How to setup the Administrator menu

- 1 Log in the homepage to display the welcome page. You can learn how to log in on page 19 “Logging in as a user”.
- 2 Select the viewer language on the welcome page. Click **English** or **Japanese** at the bottom of the welcome page.
- 3 Click **Setting** on the welcome page. The authentication dialog appears. Enter the user name and password for Administrator. The user name “admin” and password “admin” are set at the factory for the Administrator.

Administrator menu appears.



 
The following steps also display the Administrator menu.

- 1 Click **Enter** in the welcome page to display the main viewer.
  - 2 Click  in the main viewer.
  - 3 Enter the user name and password for Administrator.
- 4 Click the menu name (example: System) on the left side of the Administrator menu. The clicked menu appears. Example: “System” menu



- 5 Select the required tab above the menu, and set each setting option in the tab.

Example: “Date & time” tab of “System” menu

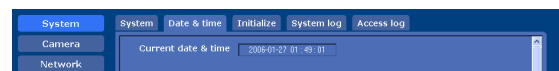

See pages 33 to 91 for details of the menu tabs and setting options.

- 6 After setting, click **OK**. The settings you have made become active.

Click **Cancel** to invalidate the set values and return to the previous settings.

### Buttons common to every menu

The following buttons are displayed on all the menus. The functions of the buttons are the same on every menu.



Click this button to validate the settings.

Cancel

Click this button to invalidate the set values and return to the previous settings.

## General notes on menus

- After changing a setting on a menu, wait at least 10 seconds before turning off the power of the camera. If the power is turned off immediately, the changed setting may not be stored correctly.
- When the camera settings are changed while watching the main viewer, some settings cannot be restored. To reflect the change on the opening main viewer, click **Refresh** of the web browser.

## Configuration of Administrator menu



### System

Displays the System menu. (“Configuring the System — System Menu” on page 33)

### Camera

Displays the Camera menu for setting the camera image and audio. (“Setting the Camera Image and Audio — Camera Menu” on page 39)

### Network

Displays the Network menu for setting the network connection. (“Configuring the Network — Network Menu” on page 45)

### 802.1X

Displays the 802.1X menu for connecting the camera to the network configured in compliance with the 802.1X standard for port authentication. (“Using the 802.1X Authentication Function — 802.1X Menu” on page 55)

### User

Displays the User menu for setting the log in user name and password. (“Setting the User — User Menu” on page 62)

### Security

Displays the Security menu for specifying a computer that is allowed to connect to the camera. (“Setting the Security — Security Menu” on page 63)

### Preset position

Displays the Preset position menu to register a position you want to save. “Tour function”, which rotates the registered positions, is also set here. (“Saving the Camera Position and Action — Preset position Menu” on page 64)

### e-Mail (SMTP)

Displays the e-Mail (SMTP) menu for sending an e-mail. (“Sending an Image via E-mail — e-Mail (SMTP) Menu” on page 67)

### FTP client

Displays the FTP client menu for sending an image/ audio file, etc. to an FTP server. (“Sending Images to FTP Server — FTP client Menu” on page 70)

### Image memory

Displays the Image memory menu for recording an image/audio file, etc. in the built-in memory or in an ATA memory card (not supplied) or a CF memory card (not supplied) inserted in the camera. (“Recording Images in Memory — Image memory Menu” on page 73)

### FTP server

Displays the FTP server menu for setting the FTP server function of the camera. (“Downloading Images from the Camera — FTP server Menu” on page 77)

### Alarm output

Displays the Alarm output menu for setting the alarm out terminal of the camera. (“Setting the Alarm Output — Alarm output Menu” on page 78)

### Voice alert

Displays the Voice alert menu for playing the audio file stored in the camera in synchronization with alarm detection by the sensor input or the object detection function. (“Outputting Audio Linked to Alarm Detection — Voice alert Menu” on page 79)

### Trigger

Displays the Trigger menu for operations when you click the trigger button in the main viewer. (“Setting the Operations from the Viewer — Trigger Menu” on page 80)



## Schedule

Displays the Schedule menu for the Day/Night function, Preset position function, e-Mail (SMTP) function, FTP client function, Image memory function and Alarm out function, Voice alert function and so on. (“Setting the Schedule — Schedule Menu” on page 82)

## Alarm buffer

Displays the Alarm buffer menu for the buffer that records the image and audio related to alarm detection. (“Setting the Alarm Buffer — Alarm buffer Menu” on page 83)

## Object detection

Displays the Object detection menu for the object detection function built into the camera. (“Setting the Object Detection Function — Object detection Menu” on page 84)

## Serial

Displays the Serial menu for communications with external equipment through the external serial terminal. (“Transmitting with External Equipment Using the External Serial Terminal — Serial Menu” on page 91)

# Configuring the System

## — System Menu

When you click **System** in the Administrator menu, the System menu appears.

Use this menu to perform the principal settings of the software.

The System menu has six tabs: **System**, **Date & time**, **Superimpose**, **Initialize**, **System log** and **Access log**.

## System Tab

The screenshot shows the System Tab configuration window with the following settings:

- Title bar name:** Sony Network Camera SNC... (Maximum: 32 characters)
- Welcome text:** (Maximum: 1024 characters)
- Serial number:** 100001
- Software version:** 1.0
- Homepage:** Default (selected), Custom (selected) with Path: /user/
- Selected memory:** Flash memory (selected) with Used space: 0kbyte; ATA memory card: empty; CF memory card: empty
- Exclusive control mode:** On (selected), Off (unselected); Operation time: 30 sec. (10 to 600 sec.); Maximum wait number: 10 (0 to 10)
- PTZ mode:** Normal (selected), Step (unselected); Par/Tilt level: 1; Zoom level: 1
- Sensor input mode:** Sensor input 1: Normally open (selected), Normally closed (unselected); Sensor input 2: Normally open (selected), Normally closed (unselected)

### Title bar name

Type a name of up to 32 characters to be displayed on the title bar. The characters typed here are displayed on the title bar of the Web browser.

### Welcome text

Type any text of up to 1024 characters in HTML format to show on the welcome page. Use the <BR> tag for a line break. (A line break is equivalent to 2 characters.)

### Serial number

The serial number of the camera is displayed.

### Software version

The software version of this camera is displayed.

## Homepage

Select the homepage to be displayed when you enter the camera IP address in your browser's web address box.

**Default:** Displays the homepage stored in the camera.

**Custom:** Displays your individual homepage.

You can display your favorite homepage stored in the built-in flash memory, an ATA memory card (not supplied) or a CF memory card (not supplied).

To store the HTML file of the homepage in the built-in flash memory, use the Custom Homepage Installer included in the supplied CD-ROM.

To learn how to use of the Custom Homepage Installer, see page 106.

For the verified cards, contact your authorized Sony dealer.

To display your individual homepage, perform the following operation:

- 1** Select **Custom**.
- 2** Type the path of the HTML file using up to 64 characters in the text box on the right of **Path**.
- 3** In **Selected memory**, select the memory in which the homepage is stored.  
You can select **Flash memory**, **ATA memory card** or **CF memory card**.  
The directory displayed in the text box on the right of **Path** changes according to the selected memory.

### Tip

Even when you select **Custom**, the homepage inside the camera can be displayed by typing the following URL in the address box of your Web browser.

Example: When the IP address of the camera is set to 192.168.0.100

http://192.168.0.100/en/index.html

## Exclusive control mode

Controls the authority to operate pan, tilt, zoom and some other functions of the camera.

- On:** Only one user has control authority. Set the operation time for one user in **Operation time**. If a user tries to operate a function during operation by another user, the authority is controlled by the settings of **Operation time** and **Maximum wait number**.
- Off:** Multiple users can control pan, tilt and zoom at the same time. When multiple users control these functions at the same time, the last operation has priority.

## Operation time

Sets the time length for a user who has control authority. The selectable range is from **10** to **600** seconds. This is effective when **Exclusive control mode** is **On**.

## Maximum wait number

Sets the number of users who are permitted to wait for their turn for control authority during operation by one user. The selectable number is from **0** to **10**. This is effective when **Exclusive control mode** is **On**.

### Notes

- To use **Exclusive control mode**, the date and time of the camera and the connected computer must be set correctly at first.
- To use **Exclusive control mode**, do not disable the web browser Cookie. When it is disabled, this mode cannot be used.
- When you change the **Exclusive control mode** setting, click **Refresh** on the web browser to reflect the change when opening the main viewer.

## PTZ mode

Select the pan/tilt control mode using the 8-direction arrow buttons (page 26) and the zoom control mode using the TELE/WIDE button (page 26).  
Select **Normal** or **Step**.

**Normal:** When you click the mouse button, the camera starts panning, tilting or zooming operation, and the operation continues while you hold down the mouse button. To stop the operation, release the mouse button.

**Step:** Each time you click the mouse button, the camera moves (panning, tilting or zooming). If you keep the mouse button held down for more than 1 second, the operation mode is temporarily changed to **Normal**. When you release the mouse button, the camera operation stops and the **Step** mode is restored.

When you select **Step**, **Pan/Tilt level** and **Zoom level** are selectable.

**Pan/Tilt level:** Select the camera transition level from **1** to **10** by clicking the 8-direction arrow button for panning/tilting. Selecting **10** provides the maximum transition level.

**Zoom level:** Select the camera transition level from **1** to **10** by clicking **WIDE** or **TELE** for zooming. Selecting **10** provides the maximum transition level.

## Sensor input mode

Specify the detection mode of the signal input to the sensor input terminal of the camera.

**Normally open:** Detects alarm when the sensor input is short-circuited.

**Normally closed:** Detects alarm when the sensor input is open-circuited.

## OK/Cancel

See “Buttons common to every menu” on page 31.

## Date & time Tab

### Current date & time

Displays the date and time set on the camera.

#### Note

After you have purchased the camera, be sure to check the date and time of the camera and set them if necessary.

### PC clock

Displays the date and time set on your computer.

### Date & time format

Select the format of date and time to be displayed in the main viewer from the drop-down list.

You can select the format between **yyyy-mm-dd hh:mm:ss** (year-month-day hour:minute:second), **mm-dd-yyyy hh:mm:ss** (month-day-year hour:minute:second), and **dd-mm-yyyy hh:mm:ss** (day-month-year hour:minute:second).

### Adjust

Select how to set the day and time.

**Keep current setting:** Select if you do not need to set the date and time.

**Synchronize with PC:** Select if you want to synchronize the camera’s date and time with those of the computer.

**Manual setting:** Select if you want to set the camera’s date and time manually.

Select the year, month, date, hour, minutes and seconds from each drop-down list.

**Synchronize with NTP:** Select if you want to synchronize the camera’s date and time with those of the time server called NTP server (Network Time Protocol). Set the **NTP server name** and the **Interval**.

### NTP server name

Type the host name or IP address of the NTP server, using up to 64 characters.

### Interval

Select an interval between **1** and **24** hours at which you want to adjust the camera’s time referring to the NTP server’s time. The set interval is a guide, and does not indicate the exact time.

#### Note

The setting time may not match with the exact time according to the network environment.

### Time zone

Set the time difference from Greenwich Mean Time in the area where the camera is installed.

Select the time zone in the area where the camera is installed from the drop-down list.

### Automatically adjust clock for daylight saving time changes

When you select it, the clock is automatically adjusted according to the daylight saving time of the selected time zone.

#### Note

If the time zone selected in **Time zone** is different from that set on the computer, the time is adjusted using the time zone difference and set on the camera.

## OK/Cancel

See “Buttons common to every menu” on page 31.

# Superimpose Tab



## Superimpose

Select **On** to superimpose camera IDs, date and time, or other information onto video images.

### Style

Select the display style for superimposed text.

**Border:** Display an outline around the characters of the text.

**Background:** Display a black background around the text.

**Transparent:** Display a partially transparent background around the text.

### Position

Select the position in which to display the superimposed text.

You can select from **Upper left**, **Upper right**, **Lower left**, or **Lower right**.

### Font size

Select the size of the superimposed text.

**Standard:** Display the text in standard size. Up to 41 characters can be displayed.

**Small:** Display the text in a small size. Up to 60 characters can be displayed.

### Superimpose Format

Enter alphanumeric characters to create your own text display or use special tags.

When you click the following buttons, a special tag is automatically entered into the format box.

**Date & time:** The <DATETIME> tag is entered into the format box, and the date and time will be superimposed.

**Camera ID:** The <CAMERAID> tag is entered into the format box, and the camera ID entered in the **Camera ID** box will be superimposed.

**Frame rate:** The <FPS> tag is entered into the format box, and the current frame rate will be superimposed.

**Bit rate:** The <BPS> tag is entered into the format box, and the current bit rate will be superimposed.

**Zoom:** The <ZOOMRATIO> tag is entered into the format box, and the current zoom ratio will be superimposed.

**Area title:** The <AREATITLE> tag is entered into the format box, and the area title names configured in the area title table will be superimposed.

**Preset position name:** The <POSITIONNAME> tag is entered into the format box, and the preset position name will be superimposed.

### Note

If the preset position name is entered using double-byte characters, it will not be properly displayed when superimposed on the image.

### Camera ID

Use single-byte alphanumeric characters to enter a camera ID or a camera name to be superimposed. Click **Camera ID** to enter the <CAMERAID> tag into the format box.

### Area title table

Configure area titles to be superimposed. Click **Area title** to enter the <AREATITLE> tag into the format box.

### No.1 to No.20

Configure the **Area title**, **On/Off**, **Lower left**, **Upper right**, **Set**, and **Clear** settings in each line.

### Note

If multiple titles are configured for the same area, the title name with the highest No. value takes priority.

### Area title

Use single-byte alphanumeric characters to enter the area title name to be superimposed.

### On/Off

Select this to enable an area title.

Specify the rectangular area in which the superimposed title will be displayed by clicking **Lower left** and **Upper right**.

To specify the lower left position of the rectangular area, move the camera to a position in which you want the title displayed and click **Lower left**. Next, specify the upper right position by moving the camera and clicking **Upper right**.

Click **Set** to store **Area title**, **On/Off**, **Lower left**, and **Upper right** setting information to the camera.  
Click **Clear** to delete **Area title**, **On/Off**, **Lower left**, and **Upper right** setting information from the camera.


### Notes

- The superimposed camera ID and/or date & time area is regarded as an inactive area of the object detection function.
- A pale image may be viewed under the background of the superimposed area.
- The size of the superimposed number is reduced if the image size is set to **384 × 288** or **320 × 240 (QVGA)**.
- The superimposed number is not readable if the image size is set to **160 × 120 (QQVGA)**.
- When you have changed the **Date & time** setting, click **Refresh** of the Web browser to reflect the change on the opening main viewer.

### OK/Cancel

See “Buttons common to every menu” on page 31.

## Initialize Tab

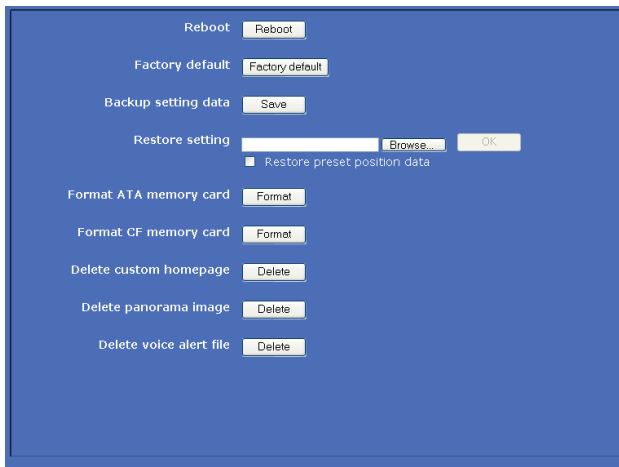

### Reboot

Reboots the camera.

Click **Reboot**, and the message “This Camera will be rebooted. Are you sure?” appears. Click **OK** to reboot the camera. It takes about two minutes to start again.

### Factory default

Resets the camera to the factory settings.

Click **Factory default**, and the message “Setup data will be initialized. Are you sure?” appears. When you click **OK**, the network indicator on the camera starts to blink. After adjustments of the default settings have finished, the camera reboots automatically. Do not turn off the camera until the camera reboots.

### Tip

The camera can also be reset to the factory settings by turning on the power of this unit while pressing the reset switch on the camera. For details, see the supplied Installation Manual.

### Backup setting data

Saves the setting data of the camera in a file.

Click **Save**, and follow the instructions on the Web browser to specify the folder and save the setting data of the camera. The file name preset at the factory is “snc-rz50.cfg.”

### Restore setting

Loads the stored setting data of the camera.

Click **Browse** and select the file in which the setting data is stored. Then, click **OK**, and the camera is adjusted according to the loaded data and restarted.

### Restore preset position and privacy masking settings

When you select it, the stored setting data of the camera, the preset position data and the privacy masking data are loaded.

### Notes

- With **Restore setting**, some items in the Network menu (page 45) cannot be restored.
- When **Restore preset position and privacy masking settings** is selected, it may take a long time to load the setting data.
- The following items cannot be stored or restored with **Backup setting data** or **Restore setting**.
  - audio files uploaded using SNC audio upload tool
  - a panorama image recorded in the camera using SNC panorama creator
  - a homepage created using Custom Homepage Installer
  - a client certificate and CA certificate to be used in the 802.1X authentication function
  - a certificate to be used in the SSL function (the model on sale in China does not support the SSL function.)

### Format ATA memory card

Click **Format** to format the ATA memory card (not supplied) inserted into the PC card slot of the camera. The files and folders stored in the ATA memory card are deleted while formatting.

### Format CF memory card

Click **Format** to format the CF memory card (not supplied) inserted into the CF card slot of the camera.

The files and folders stored in the CF memory card are deleted while formatting.

**Notes**

- Before formatting, disable the image memory function and the FTP server function to protect the ATA memory card or CF memory card against writing.
- Do not activate the **Format ATA memory card** or **Format CF memory card** function when no card is inserted into the each card slot.

**Delete custom homepage**

By pressing **Delete**, you can delete the homepage recorded in the flash memory of the camera with Custom Homepage Installer (page 106).

**Delete panorama image**

By pressing **Delete**, you can delete the panorama image recorded in the camera with SNC panorama creator (page 101).


**Delete voice alert file**

Click **Delete** to delete all the audio files stored in the camera using SNC audio upload tool (page 94).

**Notes**

- Clicking **Delete** deletes all the stored audio files simultaneously. To delete a specified audio file only, perform deletion of the audio file in the corresponding Voice alert tab of the Voice alert menu (page 79).
- Before deleting the audio file, set **Voice alert** to **Off** in each tab of the Voice alert menu (page 79).

**System log Tab**

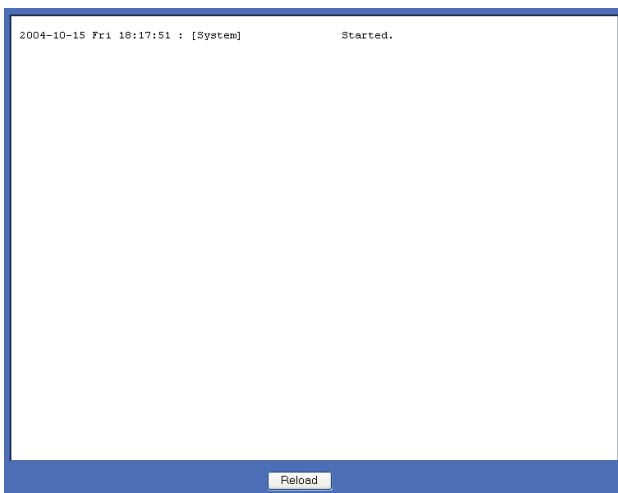

The data of the software activity of the camera is recorded in this log. It includes data that is useful when a problem occurs.

Click **Reload** to reload the latest data.

**Access log Tab**



The access record of the camera is displayed. Click **Reload** to reload the latest data.


# Setting the Camera Image and Audio

## — Camera Menu

When you click **Camera** in the Administrator menu, the Camera menu appears.

Use this menu to set the functions of the camera. The Camera menu consists of five tabs: **Common**, **Picture**, **Day/Night**, **Video codec** and **Streaming**.

### Common Tab

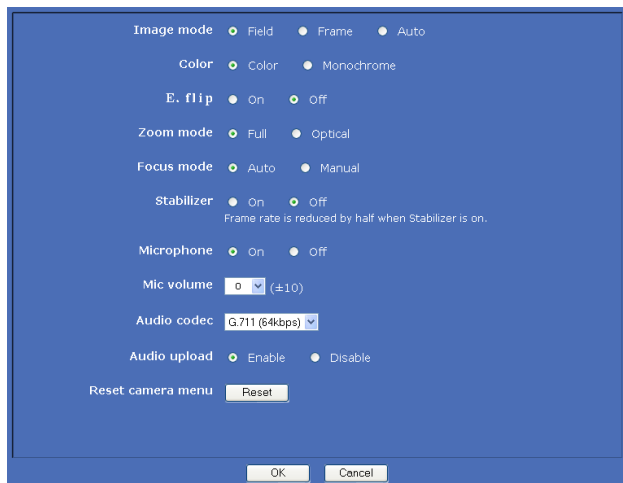

### Image mode

Selects the mode of the image output from the camera.

**Field:** Select this option when shooting a moving image.

**Frame:** Select this option when shooting a still image. With this setting, the vertical resolution increases but the edge of a moving object may be jagged.

**Auto:** The **Frame** or **Field** mode process is automatically performed depending on movement in the image. **Frame** is performed for an area without movement, and **Field** is performed for an area with movement.

### Color

Select **Color** or **Monochrome** for the image.

### E. flip

The image can be displayed upside down. Select **Off** when you fix the camera to the ceiling. Select **On** when you install the camera on the rack or the desk.

### Zoom mode

Selects the zoom mode.

**Full:** An image can be zoomed up to 26× optical zoom and 12× digital zoom, 312× zoom in total.

**Optical:** An image can be zoomed up to 26× optical zoom.

### Focus mode

Selects the focus mode.

**Auto:** The focus is automatically adjusted.

**Manual:** The focus can be adjusted by using the **NEAR**, **FAR** and **ONE PUSH FOCUS** buttons of the control panel displayed from the main viewer.

### Stabilizer

Select the stabilizer to compensate for oscillation. Select **On** to activate the stabilizer when the camera is affected by oscillation.

#### Notes

- The stabilizer is effective for the images on a computer. They are not effective for the video output.
- The view angle of the camera is reduced by approximately 10 % when **Stabilizer** is set to **On**.
- The frame rate lowers half when **Stabilizer** is set to **On**.
- The stabilizer may not be effective depending on the degree of oscillation.
- Set **Stabilizer** to **Off** when using the privacy mask (page 103).
- If a flat object such as a solid wall or floor occupies the greater part of a shooting scene or if a large object occupying the greater part of the scene passes by or continues moving, the whole image may tremble. In this case, set **Stabilizer** to **Off**.
- When the brightness of the scene changes suddenly or when you change the brightness setting, the whole image may tremble momentarily.

### Microphone

Select whether you are going to send the audio from the microphone input connector. Select **On** to send the audio from this network camera.

#### Note

When you change the **Microphone** setting, click **Refresh** on the Web browser to reflect the change when opening the main viewer.

### Mic volume

Set the volume level of the audio input from the microphone input connector. It is adjustable from **-10** to **+10**.

## Audio codec

Select the bit rate when you send the audio from the microphone input connector. **G.711 (64kbps)**, **G.726 (40kbps)**, **G.726 (32kbps)**, **G.726 (24kbps)** or **G.726 (16kbps)** can be selected.

### Note

If the bit rate is set to other than **G.711(64kbps)**, no audio is output when you use the Java applet viewer.

## Audio upload

Using the SNC audio upload tool stored in the supplied CD-ROM, you can output the audio that is input to the computer's audio input terminal from the speaker connected to the line output jack of the camera. Select **Enable** to output the audio from the speaker.

## Reset camera menu


Click **Reset**, and the message "Camera menu setting is reset to default. Are you sure?" is displayed. To reset to default, click **OK**.

## OK/Cancel

See "Buttons common to every menu" on page 31.

## Picture Tab

You can set the color condition, exposure, etc. of the camera.

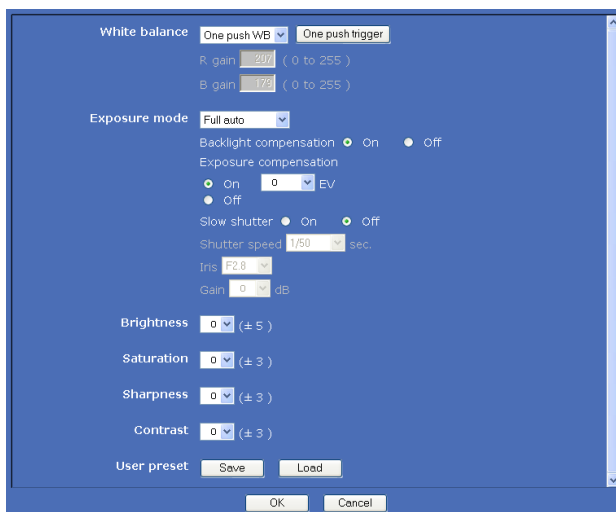

## White balance

Select the white balance mode.

**Auto:** Automatically adjusts the color to be closest to the image you are viewing. (approximately 3000 K to 7500 K)

**Indoor:** Adjusts the white balance for shooting indoors under an incandescent lamp. (about 3200 K)

**Outdoor:** Adjusts the white balance for shooting outdoors. (about 5800 K)

**One push WB:** The **One push trigger** button becomes active. Click the button to adjust the white balance instantly.

**ATW:** Makes the subject lighter and automatically adjusts to re-create the original color. (approximately 2000 K to 10000 K)

**Manual:** When this option is selected, **R gain** and **B gain** become active.

Selectable gain values are from **0** to **255**.

## Exposure mode

Select the exposure mode of the camera.

The setting items required for the selected mode become active.

**Full auto:** The camera performs the gain adjustment and iris adjustment automatically. In this case, the shutter speed is fixed. (1/60 sec. for NTSC or 1/50 sec. for PAL).

When this option is selected, **Slow shutter** and **Backlight compensation** become active.

**Shutter priority:** The camera performs the gain adjustment and iris adjustment automatically and you can select the shutter speed. When this option is selected, **Shutter speed** becomes active.

**Iris priority:** The camera performs the gain adjustment and shutter speed adjustment automatically, and you can select the iris. When this option is selected, **Iris** becomes active.

**Manual:** You can set the exposure manually. When this option is selected, **Shutter speed**, **Iris** and **Gain** become active.

Set the following items as required, according to the selected exposure mode.

### Backlight compensation

You can set **On** or **Off** for backlight compensation. When you select **On**, the backlight compensation function starts to work.

### Exposure compensation

The exposure compensation function adjusts the brightness of the image by compensating the exposure. When you select **On**, you can select the exposure compensation values.

Selectable values are as follows:



-1.75, -1.50, -1.25, -1.00, -0.75, -0.50, -0.25, 0, +0.25, +0.50, +0.75, +1.00, +1.25, +1.50, +1.75 (EV)

### Slow shutter

Set the slow shutter. When **On** is selected, the auto exposure setting including the long time exposure is set to adjust to the brightness of the scene.

### Shutter speed

Select the shutter speed of the camera from the drop-down list.

Selectable values of the shutter speed are as follows:

**SNC-RZ50N:** 1/10000, 1/6000, 1/4000, 1/3000, 1/2000, 1/1500, 1/1000, 1/725, 1/500, 1/350, 1/250, 1/180, 1/125, 1/100, 1/90, 1/60, 1/30, 1/15, 1/8, 1/4, 1/2, 1 (sec.)

**SNC-RZ50P:** 1/10000, 1/6000, 1/3500, 1/2500, 1/1750, 1/1250, 1/1000, 1/600, 1/425, 1/300, 1/215, 1/150, 1/120, 1/100, 1/75, 1/50, 1/25, 1/12, 1/6, 1/3, 1/2, 1 (sec.)

### Iris

Select the iris from the drop-down list.

Selectable values of the iris are as follows:

Close, F28.0, F22.0, F19.0, F16.0, F14.0, F11.0, F9.6, F8.0, F6.8, F5.6, F4.8, F4.0, F3.4, F2.8, F2.4, F2.0, F1.6

### Gain

Select the gain from the drop-down list.

Selectable values of the gain are as follows:

-3, 0, +2, +4, +6, +8, +10, +12, +14, +16, +18, +20, +22, +24, +26, +28 (dB)

### Brightness

Fine adjust the brightness for the exposure set in the exposure mode. It is brighter when a larger value is selected, and it is darker when a smaller value is selected. A value from **-5** to **+5** can be set.

### Saturation

Select the saturation in 7 steps, from **-3** to **+3**.

Selecting **+3** provides the image with the highest saturation.

### Sharpness

Select the sharpness in 7 steps, from **-3** to **+3**.

Selecting **+3** provides the image with the highest sharpness.

### Contrast

Select the contrast in 7 steps, from **-3** to **+3**.

Selecting **+3** provides the image with the highest contrast.

### Note

The Brightness, saturation and contrast settings are effective for the images from a computer. They are not effective for the video output.

### User preset

You can save the present settings in the camera as custom settings, or you can load the settings saved in the camera.

This function is useful when you temporarily change the settings for the image or reset them to the previous settings.

**Save:** Click to save the present settings of the Picture tab.


**Load:** Click to load the saved settings. To use them, click **OK**.

### OK/Cancel

See “Buttons common to every menu” on page 31.

## Day/Night Tab

Use this tab to set the day/night function of the camera.

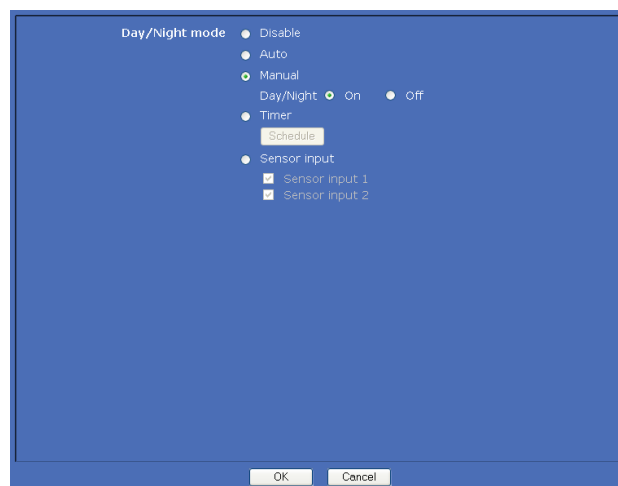

### Day/Night mode

Select the day/night mode from among five modes.

**Disable:** Always works in day mode.

**Auto:** Normally works in day mode. It switches automatically to night mode in a dark place.

### Note


The day/night mode is not switched to night mode automatically when **Exposure mode** is set to **Shutter priority**, **Iris priority** or **Manual** in the Picture tab.

**Manual:** Switch the day/night mode manually. When you select **Manual**, **On** and **Off** become active.

When you select **On**, the camera works in night mode. When you select **Off**, it works in day mode.

**Timer:** Normally the camera works in day mode. It switches to night mode at the time that you have you set in the Schedule menu.

Click **Schedule** and the setting menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

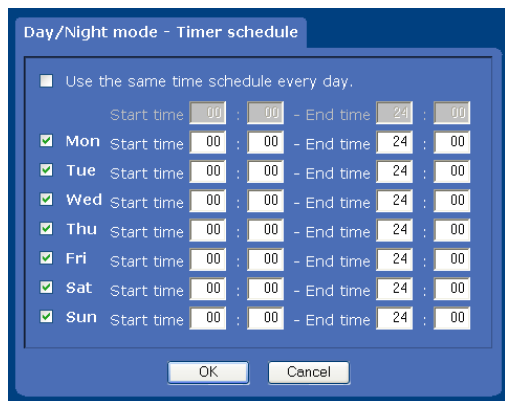

**Sensor input:** Controls the day/night mode by synchronizing it with the sensor input. Select the sensor input with which you want to synchronize the mode: **Sensor input 1** or **Sensor input 2**. While a sensor input is detected, the camera works in night mode.

## OK/Cancel

See “Buttons common to every menu” on page 31.

## Video codec Tab

Use this tab to set the items for the video codec.



## Mode

Select the operation mode of the camera.

**Single codec:** Select one video codec from among **JPEG**, **MPEG4** and **H.264**. The camera supports the selected video codec.

**Dual codec:** The camera supports both JPEG and MPEG4 video codecs simultaneously. When you select this option, select the priority codec from **JPEG** or **MPEG4**.

## JPEG setting/MPEG4 setting/H.264 setting

Set the details of the video codecs.

Selectable items become active according to the **Mode** setting. Set the active items in **JPEG setting**, **MPEG4 setting** or **H.264 setting** as required.

## Image size

You can select the image size to be sent from the camera.

**SNC-RZ50N:** 704 × 480 (4CIF), 640 × 480 (VGA), 384 × 288, 320 × 240 (QVGA), 160 × 120 (QQVGA)

**SNC-RZ50P:** 704 × 576 (4CIF), 640 × 480 (VGA), 384 × 288, 320 × 240 (QVGA), 160 × 120 (QQVGA)

When **640 × 480 (VGA)** is selected and **Cropping** is set to **On**, you can crop a portion of the image and display the cropped image on the computer.

## Cropping

When the image size is set to **640 × 480 (VGA)**, you can crop a portion of the image and display the cropped image on the computer. Cropping reduces the transmitting data size and thus the network load, and a higher frame rate is achieved.

Select **On** to crop the image, or **Off**.

### Note

Object detection (page 84) operates for an image in the image size that is not cropped even if **Cropping** is set to **On**.


## To crop an image

- 1 Set the **Image size** to **640 × 480 (VGA)**. **Cropping** becomes active.
- 2 Set **Cropping** to **On** and click the **Area setting** button. The area setting window appears.
- 3 Click on the still image to specify the trimming portion.

A red frame that appears when you clicked indicates the trimming portion.


The trimming portion is determined as shown below:

Point rotated by 180° around the axis of the center of the still image    Still image

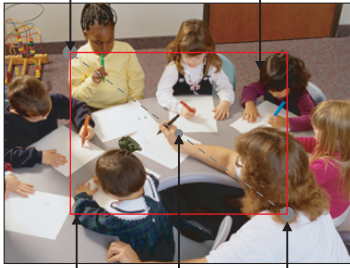

Red trimming frame    Center of the still image    Clicked point

To change the trimming portion, click on another point on the image.

- 4 Click **OK** at the bottom of the window. The cropped image is displayed on the main viewer.
- 5 To close the image, click  in the upper-right corner.

### Frame rate

Set the frame rate of the image.

Selectable values of the frame rates are as follows.

**SNC-RZ50N:** 1, 2, 3, 4, 5, 6, 8, 10, 15, 20, 25, 30 (fps)

**SNC-RZ50P:** 1, 2, 3, 4, 5, 6, 8, 12, 16, 20, 25 (fps)

“fps” is a unit indicating the number of frames transmitted per second.

### Image quality (for JPEG only)

Set the quality of JPEG image.

Selectable values are from **Level 1** to **Level 10**.

When **Level 10** is selected, the best image quality is achieved.

### Bandwidth control (for JPEG only)

Limits the network bandwidth for the JPEG image data output from the camera. Selectable bandwidths are as follows:

0.5, 0.6, 0.7, 0.8, 0.9, 1.0, 2.0, 3.0, 4.0 (Mbps), and

**Unlimited**

#### Note

Audio may be interrupted depending on the selected bandwidth. In that case, select a wider bandwidth.

### Bit rate (for MPEG4 and H.264 only)

Set the bit rate of MPEG4 or H. 264 image transmission for a line.

Selectable values are as follows:

**H.264:** 32, 64, 128, 256, 384, 512, 768, 1024, 1536 (kbps)

**MPEG4:** 64, 128, 256, 384, 512, 768, 1024, 1536, 2048 (kbps)

### Adaptive rate control (for MPEG4 and H.264 only)

This function adjusts the frame rate and the bit rate automatically so that the camera plays back a smooth image to suit the connected computer environment. If **On** is selected, the MPEG4 or H.264 image rate is automatically adjusted.

#### Notes

- The actual frame rate and bit rate may be different according to the image size, the shooting scene, or the network condition.
- When **Adaptive rate control** is set to **On**, the maximum transmission rate will be the values set in **Frame rate** and **Bit rate**.
- When **H.264** is selected and the image size is set to **704 × 480 (4CIF)** (**704 × 576 (4CIF)** for the SNC-RZ50P), **640 × 480 (VGA)**, or **384 × 288**, the frame rate used by the camera to transmit the image will be as follows:
  - SNC-RZ50N: 10 fps or less
  - SNC-RZ50P: 8 fps or less
- When **MPEG4** is selected, the image size is set to **704 × 480 (4CIF)** (**704 × 576 (4CIF)** for the SNC-RZ50P), **640 × 480 (VGA)**, or **384 × 288** and the frame rate is set to **25 fps** or higher, the frame rate may be decreased when the bit rate is more than 512 kbps (256 kbps for 4CIF) or while the object detection function is operating.
- When the camera operation mode is set to **Dual codec** and the image size is set to **704 × 480 (4CIF)** (**704 × 576 (4CIF)** for the SNC-RZ50P), **640 × 480 (VGA)**, or **384 × 288** in **MPEG4 setting**, the maximum frame rate at which the camera can transmit data will be 20 fps.
- When the camera operation mode is set to **Dual codec**, the actual values set in **MPEG4 setting** and **JPEG setting** may not be obtained, due to the limitation in the capacity to manage two video codecs simultaneously. Use the following table as a guide for the settings.

## Capacity to manage two video codecs simultaneously

### SNC-RZ50N

JPEG		MPEG4	
4CIF/VGA/ 384 × 288	15 fps	4CIF/VGA/ 384 × 288	15 fps
4CIF/VGA/ 384 × 288	20 fps	4CIF/VGA/ 384 × 288	10 fps
4CIF/VGA/ 384 × 288	10 fps	QVGA	30 fps
VGA/384 × 288	15 fps	QVGA	20 fps
4CIF	15 fps	QVGA	15 fps
QVGA	30 fps	QVGA	30 fps

### SNC-RZ50P

JPEG		MPEG4	
4CIF/VGA/ 384 × 288	12 fps	4CIF/VGA/ 384 × 288	12 fps
4CIF/VGA/ 384 × 288	16 fps	4CIF/VGA/ 384 × 288	8 fps
4CIF/VGA/ 384 × 288	8 fps	QVGA	25 fps
VGA/384 × 288	12 fps	QVGA	16 fps
4CIF	12 fps	QVGA	12 fps
QVGA	25 fps	QVGA	25 fps


- The object detection function does not operate when **H.264** is selected.
- When **H.264** is selected, you cannot select **Use alarm buffer** in the Alarm sending tab of the FTP client menu and in the Alarm recording tab of the Image memory menu.

## OK/Cancel


See “Buttons common to every menu” on page 31.

## Streaming Tab

Use this tab to set the items for the transmission by unicast or multicast.

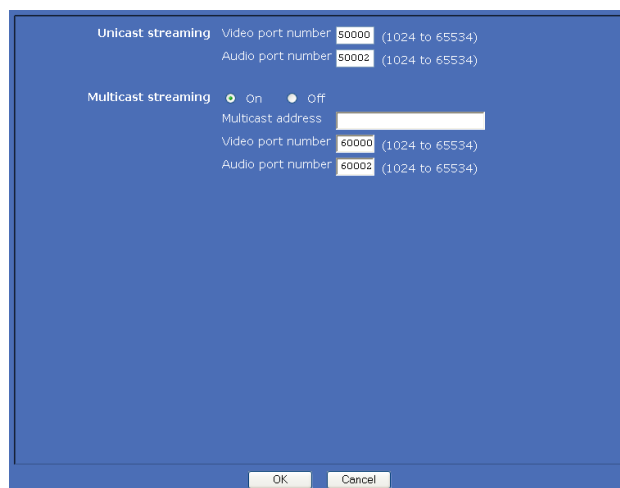

## Unicast streaming

Specify the transmission port numbers of the MPEG4/H.264 video data and audio data to be used when **UDP (Unicast)** is selected with  in the main viewer.

### Video port number

Specify the transmission port number of the MPEG4/H.264 video data. It is initially set to 50000. Specify an even number from 1024 to 65534. Two port numbers (the number specified here and an odd number with 1 added to the specified number) are actually used for video data communication and control.

### Audio port number

Specify the transmission port number of the audio data. It is initially set to 50002. Specify an even number from 1024 to 65534. Two port numbers (the number specified here and an odd number with 1 added to the specified number) are actually used for audio data communication and control.

### Note

Specify different numbers for the video port number and the audio port number.

## Multicast streaming

Set whether the camera uses multicast streaming for MPEG4/H.264 video data and audio data or not. It reduces the transmission load on the camera by making the computer of the same segment network receive the same transmitting data.

Select **On** to allow and **Off** not to allow multicast sending.

When you select **On**, set **Multicast address**, **Video port number** and **Audio port number** properly.

### Multicast address

Type the multicast address used on the Multicast streaming.

### Video port number

Specify transmission port number of the MPEG4/H.264 video data used for the Multicast streaming. It is initially set to 60000. Specify an even number from 1024 to 65534. Two port numbers (the number specified here and an odd number with 1 added to the specified number) are actually used for video data communication and control.

### Audio port number

Specify the audio transmission port number used for the Multicast streaming. It is initially set to 60002. Specify an even number from 1024 to 65534. Two port numbers (the number specified here and an odd number with 1 added to the specified number) are actually used for audio data communication and control.

#### Note

Specify different numbers for the video port number and the audio port number.

### OK/Cancel

See “Buttons common to every menu” on page 31.

## Configuring the Network — Network Menu

When you click **Network** in the Administrator menu, the Network menu appears.

Use this menu to configure the network to connect the camera and the computer.

The Network menu consists of four tabs: **Network**, **Wireless**, **Dynamic IP address notification** and **SSL**.

#### Note

The model on sale in China does not support the SSL function.

### Network Tab

This section provides the menus for connecting the camera through the network cable.

MAC address: 00:00:00:00:00:00

IP address:  Obtain an IP address automatically (DHCP)  Use the following IP address

IP address: 192.168.0.100

Subnet mask: 255.0.0.0

Default gateway:

DNS server:  Obtain DNS server address automatically  Use the following DNS server address

Primary DNS server:

Secondary DNS server:

Host name:

Domain suffix:

HTTP port number:  80  (1024 to 65535)

OK Cancel

### MAC address

Displays the MAC address of the camera.

### IP address

Configure the IP address.

**Obtain an IP address automatically (DHCP):** Select this option when a DHCP server is installed on the network to allow IP address assignment. With this setting, the IP address is assigned automatically.

**Use the following IP address:** Select this option when you set a fixed IP address. With this setting, specify the **IP address**, **Subnet mask** and **Default gateway** manually.

**Note**

When you select **Obtain an IP address automatically (DHCP)**, make sure that a DHCP server is operating on the network.

**IP address**

Type the IP address of the camera.

**Subnet mask**

Type the subnet mask.

**Default gateway**

Type the default gateway.

**DNS server**

Configure the DNS server address.

**Obtain DNS server address automatically:** Select this option to obtain the IP address of DNS server automatically. It can be set only when **Obtain an IP address automatically (DHCP)** is selected in the Network tab.

**Use the following DNS server address:** Select this when you set a fixed address as the IP address of the DNS server. With this setting, specify the addresses on **Primary DNS server** and **Secondary DNS server** manually.

**Note**

When you select **Obtain DNS server address automatically**, make sure that a DHCP server is operating on the network.

**Primary DNS server**

Type the IP address of the primary DNS server.

**Secondary DNS server**

Type the IP address of the secondary DNS server, if necessary.

**Host name**

Type the host name of the camera to be transmitted to the DHCP server. This setting is valid only when **Obtain an IP address automatically (DHCP)** is selected in the Network tab.

**Domain suffix**

Type the domain suffix of the camera to be transmitted to the DHCP server. This setting is valid only when **Obtain an IP address automatically (DHCP)** is selected in the Network tab.

**Note**

The domain suffix is sent to the DHCP server as FQDN (Fully Qualified Domain Suffix) information when **Host name** is set.

**HTTP port number**

Normally select **80**. If you want to use a port number other than 80, select the text box and type a port number between 1024 and 65535.

**Note**

When you have set the **HTTP port number** to a number other than 80 in the Network menu or in the IP Setup Program, access the camera again by typing the IP address of the camera on your Web browser as follows:

Example: when the HTTP port number is set to 8000



**OK/Cancel**

See “Buttons common to every menu” on page 31.

**Wireless Tab — Setting of wireless connection**

Insert the specified wireless card into the CF card slot or PC card slot of the camera, and set the items for connecting to the wireless network.

Before setting, read the operation manual and installation manual supplied with the wireless card together with this guide.

When you use the CF card slot, insert the optional Sony wireless card SNCA-CFW1 or SNCA-CFW5\* in it. When you use the PC card slot, use with the Compact Flash Type II-PCMCIA converting adaptor which is commercially available.

**Verified wireless cards**

- Optional Sony Wireless Card SNCA-CFW1 and SNCA-CFW5\*
- A commercially available CompactFlash type II-PCMCIA adapter

\* SNCA-CFW5 is not available in some countries and areas. For details, contact your authorized Sony dealer.

**Notes**

- Before removing the wireless card from the camera, turn off the power of the camera.

- The throughput of the data transmission/reception via the network cable may decrease when the wireless card is in use.
- If two wireless cards are inserted, the second card is invalid. Also, if the camera is turned on with two cards inserted, only the wireless card inserted in the CF card slot is valid.

## MAC address

Displays the MAC address of the wireless card inserted to the CF card slot or PC card slot.

If a wireless card is not inserted, “00:00:00:00:00:00” is displayed.

## IP address

Configure the IP address for a wireless network.

**Obtain an IP address automatically (DHCP):** Select this option when a DHCP server is installed on the network to allow IP address assignment. With this setting, the IP address is assigned automatically.

**Use the following IP address:** Select this option when you set a fixed IP address. With this setting, specify the **IP address**, **Subnet mask** and **Default gateway** manually.

### Note

When you select **Obtain an IP address automatically (DHCP)**, make sure that a DHCP server is operating on the network.

## IP address

Type the IP address of the camera.

## Subnet mask

Type the subnet mask.

## Default gateway

Type the default gateway.

## DNS server

Configure the DNS server address.

**Obtain DNS server address automatically:** Select this option to obtain the address of DNS server automatically. It can be set only when **Obtain an IP address automatically (DHCP)** is selected in the **Wireless** tab.

**Use the following DNS server address:** Select this option when you set a fixed address as the IP address of DNS server. With this setting, specify the addresses on **Primary DNS server** and **Secondary DNS server** manually.

### Note

When you select **Obtain DNS server address automatically**, make sure that a DHCP server is operating on the network.

## Primary DNS server

Type the IP address of the primary DNS server.

## Secondary DNS server

Type the IP address of the secondary DNS server, if necessary.

## Host name

Type the wireless network host name of the camera to be transmitted to the DHCP server. This setting is valid only when **Obtain an IP address automatically (DHCP)** is selected in the **Wireless** tab.

## Domain suffix

Type the wireless network domain suffix of the camera to be transmitted to the DHCP server. This setting is valid only when **Obtain an IP address automatically (DHCP)** is selected in the **Wireless** tab.

### Note

The domain suffix is sent to the DHCP server as FQDN (Fully Qualified Domain Suffix) information when **Host name** is set.

## Type

Select the network connection type.

**Ad hoc mode:** Select this when connecting to a computer directly. With this setting, specify a wireless channel.

**Infrastructure mode:** Select this when connecting to a computer via an access point or a wireless router.

**Notes**

- The setting of the HTTP port number is common to the setting in the Network tab.
- With **Ad hoc mode**, you cannot select **Use WEP key automatically generated** of **WEP**, or **WPA** or **WPA2** on **Security**.
- When you set Security to **WPA** or **WPA2** and change **Infrastructure mode** to **Ad hoc mode**, **Security** setting is automatically changed to **None**.

**Antenna**

Select one of the following antenna settings when you use the SNCA-CFW1 or SNCA-CFW5 wireless card (optional), or the SNCA-AN1 wireless LAN antenna (optional).

**Internal:** Select this when you perform communications using the antenna built in the wireless card. This setting is suitable for short-range and omnidirectional communications.

**External:** Select this when you perform long-range communications using the SNCA-AN1 wireless LAN antenna connected to the wireless card.

**Diversity:** Select this when you perform both short-range and long-range communications using the SNCA-AN1 wireless LAN antenna connected to the wireless card. The antenna that has higher sensitivity is selected automatically.

**Note**

When you are using SNCA-CFW5 and select **Diversity**, SNCA-AN1 is selected on the transmitting side and an antenna is selected automatically on the receiving side.

**SSID**

Type the ID to identify the wireless network you want to access using up to 32 ASCII characters (alphanumeric). For your security, be sure to change the factory setting.

**Security**

Configure the security for a wireless network.

**None:** Select this option when no security is set.

This setting is not recommended for reasons of protecting your computer from harm.

**Caution**

**WEP:** Select this option when WEP (Wired Equivalent Privacy) security method is used.

**WPA:** Select this option when WPA (Wi-Fi Protected Access) security method is used.

**WPA2:** Select this option when WPA2 security method is used.

**WEP**

Set up this item when **WEP** is selected on **Security**.

**Use WEP key automatically generated**

Checking this box allows you to use an automatically generated WEP key. Uncheck the box when you enter a WEP key manually.

To use the automatically generated WEP key, you need to enable the 802.1X (wireless) function. After checking this box, click **OK** at the bottom of the window. Then the 802.1X function is enabled.

**Note**

For correct operation of the 802.1X function, you need to configure the 802.1X settings, such as certificate setting, appropriately. For details on the 802.1X settings, see “Using the 802.1X Authentication Function — 802.1X Menu” on page 55.

**802.1X**

This button is active when **Use WEP key automatically generated** is selected.

When you click **802.1X**, the 802.1X menu appears, allowing you to configure the 802.1X (wireless) function.

**WEP key**

Type and select the WEP key information. This section is active when **Use WEP key automatically generated** is not selected.

Up to 4 WEP keys can be set in the following manner.

- 1 Select one of the WEP key numbers.
- 2 Type the same information in the **WEP key** and **Retype WEP key** text boxes.  
The length of a WEP key is 40 or 104 bit. A 104-bit WEP key has a higher security level than a 40-bit key.  
You can type the WEP key either in hexadecimal numbers (0 to 9 and A to F) or ASCII characters (alphanumeric). In hexadecimal, type 10 characters for a 40-bit key, or 26 characters for a 104-bit key. In ASCII, type 5 characters for a 40-bit key, or 13 characters for a 104-bit key.  
When **Type** is set to **Infrastructure mode**, the WEP key should be the same as that of the access



point. When **Type** is set to **Ad hoc mode**, the WEP key should be the same as that of the communication client.

## WPA/WPA2

Set up this item when **WPA** or **WPA2** is selected on **Security**.

WPA and WPA2 use TKIP and AES encryption systems. This unit supports TKIP for WPA, and AES for WPA2.

## Authentication

Select the authentication method.

**PSK:** Select for PSK authentication. When this option is selected, **Passphrase** setting is required.

**EAP:** Select for EAP authentication. When this option is selected, enabling the 802.1X function is required. After selecting **EAP**, click **OK** at the bottom of the window. Then the 802.1X (wireless) function is enabled.

### Note

For correct operation of the 802.1X function, you need to configure the 802.1X settings, such as certificate setting, appropriately. For details on the 802.1X settings, see “Using the 802.1X Authentication Function — 802.1X Menu” on page 55.

## 802.1X

This button is active when **EAP** is selected on **Authentication**.

When you click **802.1X**, the 802.1X menu appears, allowing you to configure the 802.1X (wireless) function.

## Passphrase

Set a passphrase when **PSK** is selected on **Authentication**.

Type 8 to 63 ASCII characters (alphanumeric), or up to 64 hexadecimal digits (0 to 9 and A to F).

## Re-type passphrase

To confirm the passphrase, retype the passphrase that you typed in the **Passphrase** box.

## OK/Cancel

See “Buttons common to every menu” on page 31.

## Dynamic IP address notification Tab — Notifying the IP Address

When **Obtain an IP address automatically (DHCP)** is selected in the Network tab or Wireless tab, you can send notification of completion of the network settings using the SMTP or HTTP protocol.

## e-Mail (SMTP) notification

Select **On** to send an e-mail when the DHCP setting is completed.

## SMTP server name

Type the name or IP address of the SMTP server for sending an e-mail, using up to 64 characters.

## Authentication

Select the authentication required when you send an e-mail.

**Off:** Select if no authentication is required when an e-mail is sent.

**On:** Select if authentication is required when an e-mail is sent. Select one of the authentication methods from the following and specify the **POP server name**, **User name** and **Password** as required.

**SMTP:** Select when SMTP authentication is required.

**POP before SMTP:** Select when POP before SMTP authentication is required.

### Note

When you set **Authentication** to **On**, make sure to select either or both **SMTP** or/and **POP before SMTP**.

### POP server name

It is necessary when **POP before SMTP** is selected for **Authentication**.

Type the POP (receiving mail) server name using up to 64 characters. Or type the IP address of the POP server. This setting is necessary when the SMTP server that sends e-mails performs authentication using the POP user account.

### User name, Password

Type the user name and password of the user who owns the mail account using up to 64 characters. This setting is necessary when the SMTP server that sends e-mails performs authentication.

### Recipient e-mail address

Type the recipient e-mail address using up to 64 characters. You can specify only one recipient e-mail address.

### Administrator e-mail address

Type the e-mail address of the camera administrator using up to 64 characters. This is used as the reply address or the address for a system mail from the mail server.

### Subject

Type the subject/title of the e-mail using up to 64 characters.

### Message

Type the text of the e-mail using up to 384 characters. (A line break is equivalent to 2 characters.) You can describe the information of the acquired IP address, etc. using the special tags mentioned below.

### HTTP notification

Select **On** to output a command to the HTTP server when the DHCP setting is completed. Using this function, you can configure a useful system, for example, to view the access log stored in the HTTP server or start an external CGI program.

### URL

Specify the URL to send HTTP requests, using up to 256 characters. The URL is normally written as follows:

`http://ip_address[:port]/path?parameter`

**ip\_address:** Type the IP address or host name of the host to which you want to connect.

**[:port]:** Specify the port number to which you want to connect. If you want to use the established port number 80, you do not need to input this value.

**path:** Type the command.

**parameter:** Type the command parameter if necessary. You can use the special tags mentioned below for the parameters.

### Proxy server name

When you send HTTP requests via a proxy server, type the name or IP address of the proxy server, using up to 64 characters.

### Proxy port number

Specify the port number when you send HTTP requests via the proxy server. Set a port number between 1024 and 65535.

### Method

Select the HTTP method **GET** or **POST**.

### OK/Cancel

See “Buttons common to every menu” on page 31.

### About the special tags

You can use the following five special tags to allow notification of the settings acquired by DHCP, such as an IP address. Type the tags in the parameter section of the URL that you described in the Message field of the HTTP.

#### <IP>

Use this tag to embed the IP address acquired by DHCP in the text or parameter.

#### <HTTPPORT>

Use this tag to embed the specified HTTP server port number in the text or parameters.

#### <MACADDRESS>

Use this tag to embed the MAC address of the interface whose IP address was acquired by DHCP, in the text or parameter.

#### <MODELNAME>

Use this tag to embed the camera's model name in the text or parameter.

#### <SERIAL>

Use this tag to embed the camera's serial number in the text or parameter.

## SSL Tab — Setting the SSL function

You can make settings about the SSL function. The settings make SSL communication possible between client equipment and the camera.


### Note

The model on sale in China does not support the SSL function.


## SSL function

**On:** Select this to use the SSL function. When **Allow HTTP connection for some clients** is selected. Both HTTP and SSL connections are allowed. When **Allow HTTP connection for some clients** is not selected, only SSL connection is allowed.

### When Microsoft Internet Explorer Ver.6.0 is used

When SSL session is established,  appears in the status bar on your web browser.

### When Microsoft Internet Explorer Ver.7.0 is used

When SSL session is more or less established,  appears in the right of the address bar on your web browser.

**Off:** Select this not to use the SSL function. Only HTTP connection is allowed with the camera.

## When you use SSL connection for the first time

When you use SSL connection only with the SSL function **On**, you cannot access the camera if the SSL function does not work properly.

In this case, you must reset the camera to the factory settings. (All settings will be initialized.)


To avoid this, check that SSL connection is possible by following the steps.

- 1 Set the SSL function to **On**, and select **Allow HTTP connection for some clients**.
- 2 Click **OK** to close the main viewer and the setting window.
- 3 Display the main viewer in SSL connection. Refer to “Using the SSL function” on page 15 for connection.
- 4 After checking that SSL connection is possible, cancel **Allow HTTP connection for some clients** selected in step 1.

Even if the setting window or the browser is closed as SSL connection is impossible, http connection is possible as **Allow HTTP connection for some clients** is selected. First check the setting contents of SSL tab in http connection, then check the SSL connection again.

When **Allow HTTP connection for some clients** is not selected, you will not be able to access the camera if SSL connection becomes impossible. In this case, turn on the power of the main unit while pressing the reset switch on the camera so as to initialize. For details, refer to the supplied Installation Manual.

### Note

As SSL connection becomes load for the camera, all images may not be downloaded and  mark may appear when the camera accesses the setting window from the browser. In this case, reload the window. Press F5 key on the keyboard to reload.

## Certificate options

Select an installation mode of the certificate.

**Use an external certificate:** Uses the certificate including the private key information issued by a CA. The PKCS#12 and PEM formats are supported.

**Use the CSR issued from the camera:** Use CSR corresponding to the private key information that is stored in the tamper-resistant chip built in the camera. Only the PEM format is supported in this mode.

To use this mode, first obtain the certificate from the CA by performing “Export certificate request” on page 53.

## Note

Even if the SSL function is set to **On**, it is not active in the following cases:

- When **Use an external certificate** is selected in “Certificate options,” and also when the certificate and the private key password are not set properly.
- When **Use the CSR issued from the camera** is selected in “Certification options,” and also the certificate is not set properly.

### Use the camera’s built-in certificate (For test use):

Uses the certificate that is stored in the tamper-resistant chip built in the camera. The private key information corresponding to the certificate is also stored in the tamper-resistant chip.

You do not need to install an external certificate. However, you cannot execute the existence proof that is one of the SSL functions for the following reasons.

- A prepared value is set for a distinguished name (Common name and so on).
- The certificate is not issued by a trusted CA.

For reasons of security, we recommend using this mode only when there is no problem even if perfect security is not saved.

## Notes

- When **Use the camera’s built-in certificate** is selected, **Security Alert** dialog appears on the SSL connection with a browser. For details, refer to “Using the SSL function” (page 15).
- SSL connection may be impossible due to the type of the certificate installed in the camera. In this case, refer to “How to install the CA certificate” on page 53 and install it.

## Certificates

Import, display or delete the certificate.

### To import the certificate

Click **Browse...** to select the certificate to be imported. Then click **Submit**, and the selected file will be imported to the camera.

## Note

The import process becomes invalid if the selected file is not a certificate or the imported certificate is not allowed.

### To display information of the certificate

When the certificate has been saved in the camera correctly, its information appears on **Status**, **Issuer DN**, **Subject DN**, **Validity Period** and **Extended Key Usage**.

## Status

Shows if the status of the certificate is valid or invalid. There are the following statuses.

**Valid:** The certificate is correctly stored and set.

**Invalid:** The certificate is not correctly stored and set.

Possible causes of Invalid are the following:

- When **Use an external certificate** is selected and the private key password included in the certificate is not specified correctly.
- When **Use an external certificate** is selected and the private key password is specified in spite of the fact that the key pair in the certificate is not encrypted.
- When **Use an external certificate** is selected and the key pair is not included in the certificate.
- When **Use the CSR issued from the camera** is selected and the certificate issued corresponding to **Export certificate request** is not imported in the camera.

## Note

When the certificate to be imported is of PKCS#12 format and the private key password is not set correctly, <Put correct private key password> is displayed in the boxes of **Issuer DN**, **Subject DN**, **Validity Period** and **Extended Key Usage**. Specify the correct private key password to confirm the information of the certificate.

### To delete the certificate

Click **Delete**, and the certificate stored in the camera will be deleted.

## Private key password

Type the password for the private key information included in the certificate using up to 50 characters. This text box is active only when **Certificate options** is set to **Use an external certificate**.

Leave the text box blank if the private key information included in the certificate is not encrypted.

If no private key password is set in the camera, an active text field is displayed and this allows a password to be entered.

If a private key password is already set, it is displayed as an inactive text field.

## Reset

To change the private key password, click this button. The current password is cleared and the password text box becomes active to allow a new password entry.

## Note

Click  at the bottom of the menu if you want to cancel changing the private key password after clicking **Reset**. Doing so restores the other setting items in the Client certificate tab to the previous settings.

## Export certificate request

Exports the certificate request according to the key pair built in the camera.

To export, enter the items required for the certificate request and click **Export**.

Exporting is possible when **Certificate options** is set to **Use the CRS issued from the camera**.

### Note

If you click **Export** when all the setting items in **Export certificate request** are blank, you can export the certificate request with “localhost” specified in **Common name**.

**Country name:** Select the country name from the drop-down list.

**State or Province name:** Type the state or province name using up to 128 alphanumeric characters and symbols.

**Locality name:** Type the locality name using up to 128 alphanumeric characters and symbols.

**Organization name:** Type the organization name using up to 64 alphanumeric characters and symbols.

**Organization unit name:** Type the organization unit name using up to 64 alphanumeric characters and symbols.

**Common name:** Type the organization name using up to 64 alphanumeric characters and symbols.

**Email address:** Type the e-mail address using up to 64 alphanumeric characters and symbols.

### Notes

- / (slash), = (equal sign) and , (comma) cannot be used as symbols.
- The total number of characters in **State or Province name**, **Locality name**, **Organization name**, **Organization unit name**, **Common name** and **Email address** should be as follows:
  - When **Country name** is selected: 218 characters or less
  - When **Country name** is not selected: 220 characters or less

### OK/Cancel

See “Buttons common to every menu” on page 31.


### Note

When you click **OK** after changing SSL setting, close once the main viewer and the setting window.


## How to install the CA certificate

The camera may not be connected because the browser (Internet Explorer) does not display whether the certificate will be accepted or not due to the type of the certificate. In this case, install the CA certificate as follows.


- 1 Save in the PC the certificate of CA which has signed the certificate to be installed in the camera. The extension of the certificate file is normally “.cer.” Double-click this file, then the following **Certificate** dialog appears.

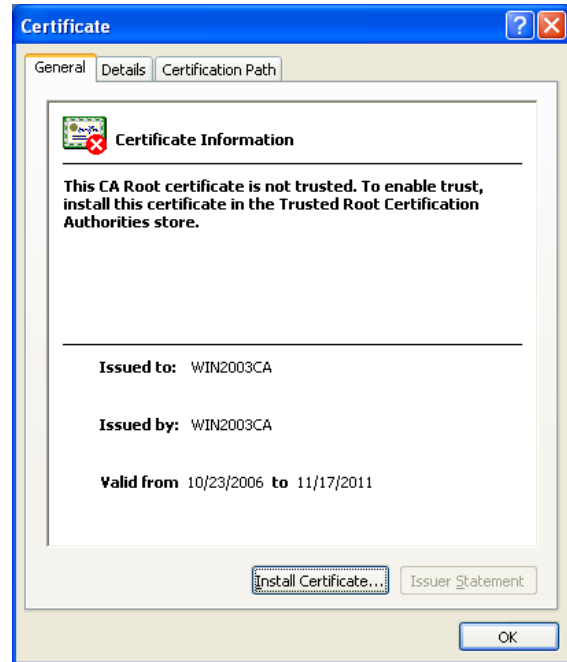


- 2 Click **Installation Certificate... Certificate Import Wizard** appears.

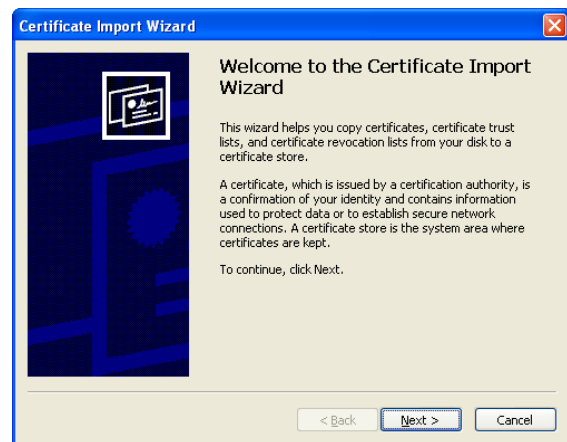

3 Click **Next**.

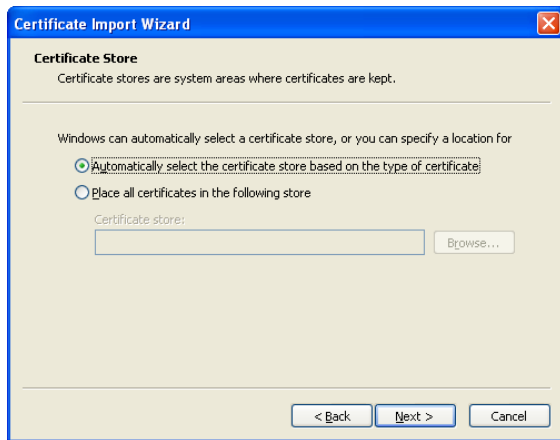


4 Select **Automatically selects the certificate store based on the type of the certificate** and click **Next**. **Completing the Certificate Import Wizard** appears.

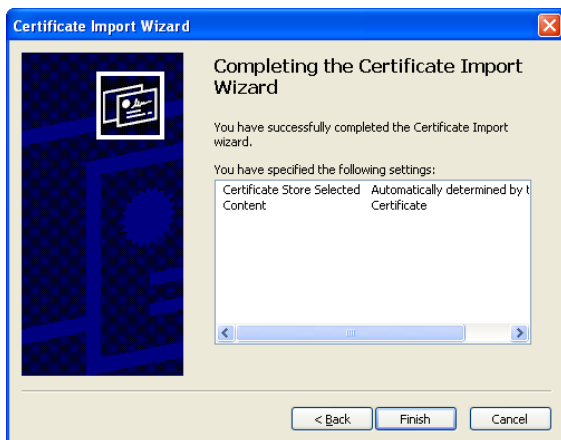

5 Check the contents, then click **Finish**. The CA certificate will be installed.

## To remove the CA certificate which has been installed

1 In Internet Explorer, click in the order corresponding to **Tools, Internet options, Content** tab and **Certificates**. **Certificates** dialog appears.

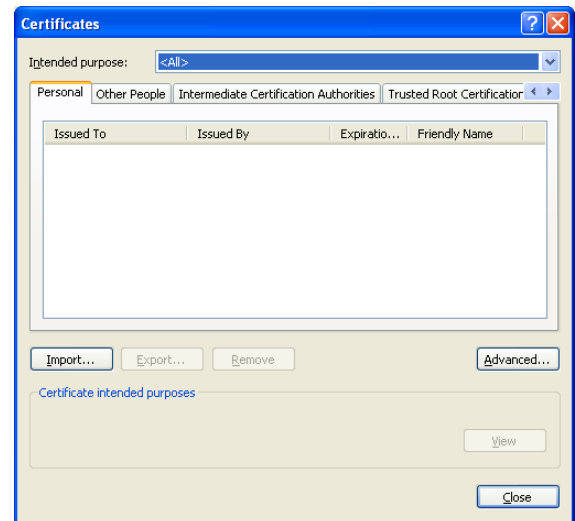

2 Select the certificate you want to remove. The CA certificate is usually stored in **Trusted Root Certification Authorities**.

3 Click **Remove**. **Do you want to delete the certificates?** dialog appears to confirm.

4 Click **Yes**. The certificate will be removed.

There may be a case that a certificate cannot be removed by the steps above due to the type of certificate. Check the installation condition and remove it following the steps below.

### Note

You need to log in as Administrator to perform these steps.

1 Open **Run...** of the Windows menu, then enter **mmc** and click **OK**.

2 Select **File** in the **Console 1** window and **Add/Remove Snap-in...** (when Windows XP Professional is used) **Add/Remove Snap-in...** dialog appears.

3 Click **Add** to display **Add Stand-alone Snap-in** dialog.

You need to follow this step if using Windows XP Professional.

- 4 Select **Certificates** from the list, then click **Add. Certificate Snap-in** is displayed.
- 5 Select **Computer account** as the certificate administrated in this Snap-in, then click **Next**.
- 6 Select **Local Computer** as the computer administrated in this Snap-in, then click **Finish**.
- 7 Close **Add Standalone Snap-in** (for Windows XP Professional only) and **Add/Remove Snap-in...** dialogs.

The items for administrating **Certificates** appears in the **Console Route** window. Confirm the relevant certificate, then remove it.

---

## Using the 802.1X Authentication Function

### — 802.1X Menu

When you click **802.1X** in the Administrator menu, the 802.1X menu appears.

Use this menu to configure the wired or wireless port-based authentication in compliance with the 802.1X standard.

The 802.1X menu consists of three tabs: **Common**, **Client certificate** and **CA certificate**.


#### Note

To use the 802.1X authentication function, you need knowledge of the 802.1X authentication (WPA and WPA2) and digital certificate. To establish an 802.1X network, you need to configure the authenticator, access point, authentication server and other elements. For details on these settings, refer to the manual of the corresponding equipment.

---

### System configuration of 802.1X network

The following figure shows a general system configuration of an 802.1X network.

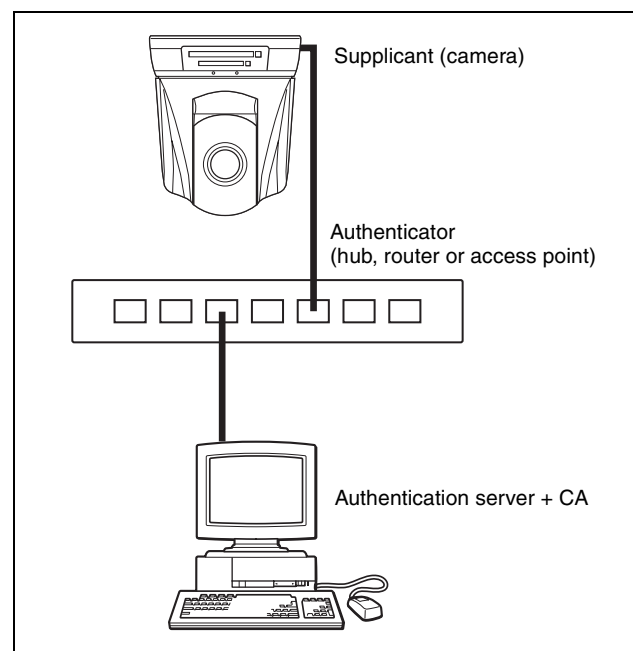

#### Supplicant

A supplicant is a device that connects to the authentication server to join the network. This camera serves as a supplicant in the 802.1X network. The

supplicant can enter the 802.1X network after the appropriate authentication by the authentication server.

### Authenticator

An authenticator forwards certificate request data or response data that the supplicant or authentication server issues to the other party. Normally a hub, router or access point serves as an authenticator.

### Authentication server

An authentication server has a database of connecting users and verifies if the supplicant is a correct user or not. It is also called RADIUS server.


### CA (Certificate Authority)

A CA issues and manages certificates of the authentication server (CA certificates) and user certificates. The CA is essential for certificate-based user authentication. Normally a CA is located inside an authentication server.

#### Note

This camera supports only the EAP-TLS mode in which the supplicant and the server authenticate each other using the certificate. This mode requires a CA that issues the certificate.

## Common Tab – Basic setting of 802.1X authentication function

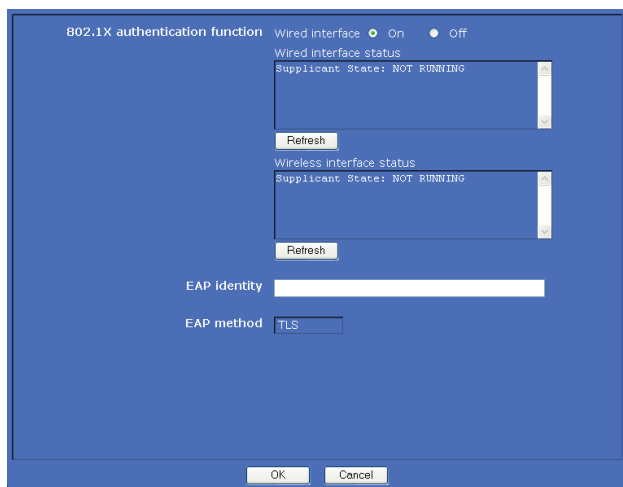

### 802.1X authentication function

This item is used for enabling/disabling the 802.1X authentication function for wired ports. The wired interface status and the wireless interface status can also be checked here.

#### Note

To use the 802.1X authentication function for wireless

networks, set up **Security** in the **Wireless** tab of the **Network** menu. For details, see “Security” on page 48.

### Wired interface

To activate the 802.1X authentication function for wired ports, select **On**.

### Wired interface status

Shows the authentication status of the 802.1X authentication function for wired ports.

Click **Refresh** to update the status.

### Wireless interface status

Shows the authentication status of the 802.1X authentication function for wireless networks.

Click **Refresh** to update the status.

### EAP identity

Type the user name to identify the client in the 802.1X authentication server using 3 to 253 characters.

### EAP method


Shows the authentication method used with the authentication server. It is fixed as this camera supports only the TLS method.

### OK/Cancel

See “Buttons common to every menu” on page 31.

## Client certificate Tab

You can import a client certificate to the camera or export a certificate request.

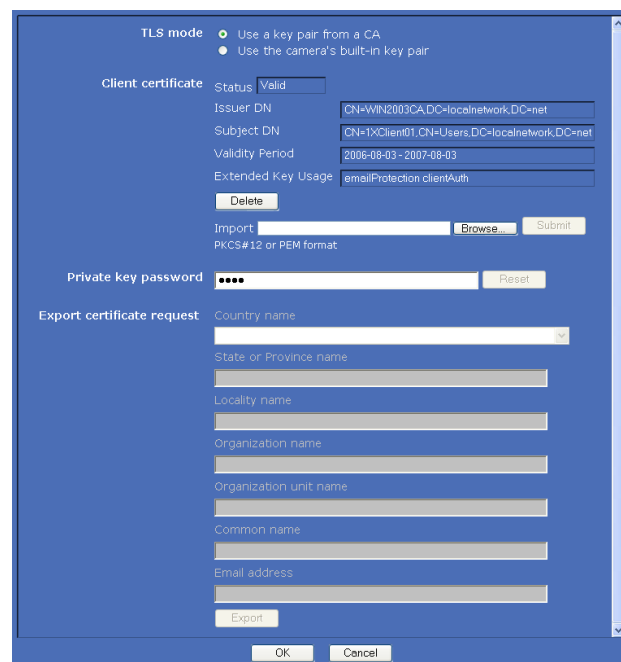



## TLS mode

Select the TLS mode.

The EAP-TLS authentication performs certificate-based authentication. It requires private key information consisting of a key pair for the client certificate to store in the camera. The TLS mode allows two modes according to the acquirer of the key pair.

**Use a key pair from a CA:** Uses the certificate including the private key information issued by a CA. The PKCS#12 and PEM formats are supported.

**Use the camera's built-in key pair:** Uses the private key information that is stored in the tamper-resistant chip built in the camera. This mode is safety because the private key information is not carried out at the time of issuing the certificate request or importing the certificate. Only the PEM format is supported in this mode.

To use this mode, first obtain the certificate from the CA by performing **Export certificate request** on page 57.

## Client certificate request

Import, display or delete the client certificate.

### To import the client certificate

Click **Browse...** to select the client certificate to be imported.

Then click **Submit**, and the selected file will be imported to the camera.

#### Note

The import process becomes invalid if the selected file is not a client certificate or the imported client certificate is not allowed.

### To display the information of the client certificate

When the client certificate has been saved in the camera correctly, its information appears on **Status**, **Issuer DN**, **Subject DN**, **Validity Period** and **Extended Key Usage**.

**Status:** Shows if the status of the client certificate is valid or invalid.

**Valid** means the client certificate is correctly stored and set.

**Invalid** means the client certificate is not correctly stored and set.

Possible causes of **Invalid** are the following:

- When **Use a key pair from a CA** is selected and the private key password included in the client certificate is not specified correctly
- When **Use a key pair from a CA** is selected and the private key password is specified in spite of the

fact that the key pair in the client certificate is not encrypted.

- When **Use a key pair from a CA** is selected and the key pair is not included in the client certificate.
- When **Use the camera's built-in key pair** is selected and the client certificate issued corresponding to **Export certificate request** is not imported in the camera.

#### Note

When the client certificate to be imported is of PKCS#12 format and the private key password is not set correctly, "<Put correct private key password>" is displayed in the boxes of **Issuer DN**, **Subject DN**, **Validity Period** and **Extended Key Usage**. Specify the correct private key password to confirm the information of the certificate.

### To delete the client certificate

Click **Delete**, and the client certificate stored in the camera will be deleted.

## Private key password

Type the password for the private key information included in the client certificate using up to 50 characters. This text box is active only when **TLS mode** is set to **Use a key pair from a CA**.

Leave the text box blank if the private key information included in the client certificate is not encrypted.

If no private key password is set in the camera, the text box is active to allow entering of a password.

If a private key password is already set, it is displayed with turned letters.

### Reset

To change the private key password, click this button. The current password is cleared and the password text box is active to allow a new password entry.

#### Note

Click  at the bottom of the menu if you want to cancel changing the private key password after clicking **Reset**. Doing so restores the other setting items in the Client certificate tab to the previous settings.

## Export certificate request

Exports the certificate request according to the key pair built in the camera.

To export, enter the items required for the certificate request and click **Export**.

Exporting is possible when **TLS mode** is set to **Use the camera's built-in key pair**.

## Note

If you click **Export** when all the setting items in **Export certificate request** are blank, the certificate request is exported with “localhost” specified in **Common name**.

**Country name:** Select the country name from the drop-down list.

**State or Province name:** Type the state or province name using up to 128 alphanumeric characters and symbols.

**Locality name:** Type the locality name using up to 128 alphanumeric characters and symbols.

**Organization name:** Type the organization name using up to 64 alphanumeric characters and symbols.

**Organization unit name:** Type the organization unit name using up to 64 alphanumeric characters and symbols.

**Common name:** Type the organization name using up to 64 alphanumeric characters and symbols.

**Email address:** Type the e-mail address using up to 64 alphanumeric characters and symbols.

## Notes

- / (slash), = (equal sign) and , (comma) cannot be used as symbols.
- The total number of characters in **State or Province name**, **Locality name**, **Organization name**, **Organization unit name**, **Common name** and **Email address** should be as follows:
  - When **Country name** is selected: 218 characters or less
  - When **Country name** is not selected: 220 characters or less

## OK/Cancel

See “Buttons common to every menu” on page 31.

## CA certificate Tab

You can import a trusted CA certificate (server certificate or route certificate) to the camera. Up to four certificates from trusted CAs can be imported to the camera. Only the PEM format is supported.

The screenshot displays a web interface for managing CA certificates. It features four sections, each for a 'Trusted CA certificate' (numbered 1 to 4). Each section contains the following fields: 'Issuer DN', 'Subject DN', 'Validity Period', and 'Extended Key Usage'. Below these fields are 'Delete', 'Import', 'Browse...', and 'Submit' buttons. The first entry (Trusted CA certificate 1) is populated with the following values: Issuer DN: CN=WIN2003CA,DC=localnetwork,DC=net; Subject DN: CN=WIN2003CA,DC=localnetwork,DC=net; Validity Period: 2006-12-10-2007-12-10; Extended Key Usage: <none>. The other three entries are currently blank.

### To import the CA certificate

Click **Browse...** to select the CA certificate to be imported.

Then click **Submit**, and the selected file will be imported to the camera.

## Note

Import process becomes invalid if the selected file is not a CA certificate.

### To display the information of the CA certificate

When the CA certificate has been saved in the camera correctly, its information appears on **Issuer DN**, **Subject DN**, **Validity Period** and **Extended Key Usage**.

### To delete the CA certificate

Click **Delete**, and the CA certificate stored in the camera will be deleted.

## Setting the 802.1X authentication function – Example of Windows Server 2003

This section explains how to configure the authentication server and CA using Microsoft Windows Server 2003.

### Note

As this section describes authentication based on the user interface in English on Windows Server 2003, the UI terminology and page configuration may be different depending on the version of the Operating System or Service Pack and patch update status.

### Before setting

Perform the following settings before configuring an 802.1X network.

#### Active Directory (domain controller)

The following setting example is based on the assumption that the Active Directory has been configured.

#### Windows IAS configuration

To add the IAS (Internet Authentication Service), perform the following steps:

- 1 Configure **Remote access/VPN server** in **Manage Your Server** of Windows Server 2003.
- 2 Open **Add or Remove Programs** from **Control Panel** of Windows menu.
- 3 Install **Internet Authentication Service** in **Add/Remove Windows Components**.

#### CA configuration

To configure the CA, perform the following steps:

- 1 Open **Add or Remove Programs** from **Control Panel** of Windows menu.
- 2 Select **Add/Remove Windows Components**.
- 3 Add **Certificate Services** in the Component menu.
- 4 Select **Enterprise root CA** on **CA Type**, and proceed to next.
- 5 Type the name of CA on **Common Name for this CA**, and configure the CA.

## Creating a security group for Active Directory

- 1 Open **Active Directory Users and Computers** from **Administrative Tools** of Windows menu.
- 2 Select **Users** of the domain with which you want to perform 802.1X connection.
- 3 Select **New** from the context menu, then select **Group** and configure the group for 802.1X connection.  
For example, the group “Wired\_802.1X\_Group” is assumed for explanation purposes.

## Configuring the Internet Authentication Service

- 1 Open **Internet Authentication Service** from **Administrative Tools** of Windows menu.
- 2 Click **Register Server in Active Directory** on the operation menu.
- 3 Read the displayed precautions carefully and click **OK** to accept them.

Then, continue to configure the EAP-TLS policy.

- 4 Select **Remote Access Policy** and right-click.
- 5 Select **New** from the context menu, and select **Remote Access Policy** to open the “New Remote Access Policy Wizard.”
- 6 Select **Set up a custom policy**.
- 7 Set the following items:

**Policy name:** Type “Allow 802.1X Access” as an example.

**Policy conditions:** Click **Add** and add the following items:

- NAS Port-Type: Ethernet, Wireless-IEEE802.11, Wireless-Other and Virtual (VPN)
- Windows-Groups: Wired\_802.1X\_Group

**Permissions:** Select **Grant remote access permission**.

**Edit Profile:**

- Dial-in Constraints tab: Specify the session time out period during which the client is allowed to be connected, as required.
- Authentication tab: Delete checks from all the boxes. Click **EAP Method** and add **Smart Card or other certificates**.

Then, continue to configure the RADIUS client.

- 8 Select **RADIUS Clients** and right-click.
- 9 Select **New RADIUS Client** from the context menu.
- 10 Set the following items:
  - Friendly name:** Type “authenticator” as an example.
  - Client address (IP or DNS):** IP address of the authenticator
  - Client-Vender:** RADIUS Standard
  - Shared secret:** Specify the shared secret to be set in the authenticator.

## Adding a user

- 1 Open **Active Directory Users and Computers** from **Administrative Tools** of Windows menu.
- 2 Select **Users** of the domain with which you want to add a user and right-click.
- 3 Select **New** from the context menu, then select **User**.
- 4 Set the following items to configure a new user:
  - For example, the log-on user name “1XClient” is assumed for explanation purposes.
  - First name:** 1XClient
  - User logon name:** 1XClient@<domain name>
  - Password:** Specify a password. Then select **Password never expires** in account options.
- 5 Select the user to be added and right-click.
- 6 Select **Properties** from the context menu.
- 7 Set the following items:
  - Dial-in tab:** Select **Allow access** in **Remote Access Permission (Dial-in or VPN)**
  - Member Of tab:** Add “Wired\_802.1X\_Group.”

The preparations for configuring a 802.1X network are now completed.

Proceed to issue the certificate to be imported to the camera.

## Issuing the CA certificate


Prepare a Windows client PC (called “client PC” hereafter) to temporarily store the certificate, and configure so that the client PC and Windows Server 2003 computer can be connected through the network.

- 1 Start Internet Explorer on the client PC.
- 2 Type the CA’s URL in the address bar, and click **Go To**.

The CA’s URL is normally as follows:

http: //<address of the CA>/CertSrv/

The “Microsoft Certificate Services” page opens.

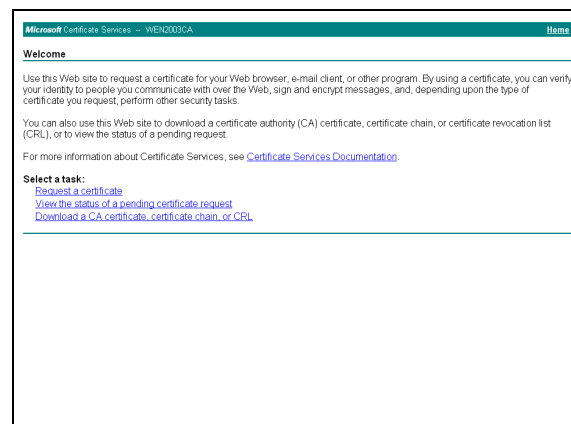

### Note

If the Microsoft Certificate Service page does not appear using the URL above, check the following:

- Is the service of Web site enabled on Internet Information Service (IIS)?
- Is Certificate Services enabled?
- Does the firewall or antivirus software setting on the client PC block connection?
- Are the network configuration and Internet Explorer setting on the client PC correct?

- 3 When Internet Explorer prompts entering the log-in user and password, type the user name as follows. Example: when the user name is “1XClient” and the domain name “localnetwork.net”

1XClient@localnetwork.net

- 4 Click **Download a CA certificate, certificate chain, or CRL**.
- 5 Select **Base 64** in **Encoding method** and click **Download CA certificate**. The “File Download” dialog opens.
- 6 Specify the file storage location and save the CA certificate.

After saving the CA certificate, import it to the camera. Then the CA certificate import procedure is completed.


## Downloading the client certificate

The procedure of client certificate download differs depending on the TLS mode of the camera. This section explains the procedures for each mode.

For the TLS mode, see **TLS mode** in the Client certificate tab on page 57.

**When “Use a key pair from a CA” is selected**

- 1 Start Internet Explorer on the client PC and type the CA’s URL in the address bar.  
The CA’s URL is normally as follows:  
http://<address of the CA>/CertSrv/
- 2 Click **Go To**.
- 3 Type the log-in user name and password correctly, and the “Microsoft Certificate Services” page opens.
- 4 Click **Request a certificate, advanced certificate request** and **Create and submit a request to this CA** in sequence.
- 5 Set the following items.

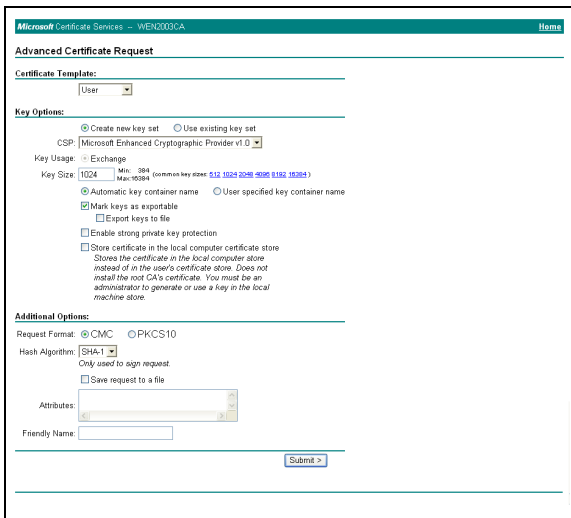

**Certificate Template:** User  
**Key Options:** Create new key set  
 – CSP: Microsoft Enhanced Cryptographic Provider v1.0  
 – Key Size: 1024  
 – Check **Mark keys as exportable**.  
**Additional Options:** Select **SHA-1** for **Hash Algorithm**.

- 6 Click **Submit**.  
Message “The certificate you requested was issued to you.” appears.
- 7 Click **Install this certificate**, to install the certificate in the certificate store on the client PC.
- 8 Click **Internet Options, Content and Certificates** of Internet Explorer in sequence.  
The new client certificate is displayed in the Personal tab.

- 9 Select the installed certificate and click **Export...**  
The “Certificate Export Wizard” opens.
- 10 Click **Next** and select as follows.  
**Do you want to export the private key with the certificate?:** Select **Yes, export the private key**.  
**Select the format you want to use:** Select **Personal Information Exchange – PKCS#12(PFX)**.  
**Password:** Specify the private key password.  
**File to export:** Specify the name of the file to be exported.


The certificate is now exported. Import the exported file to the camera as the camera’s client certificate. For details, see “To import the client certificate” in the Client certificate tab on page 57.

**When “Use the camera’s built-in key pair” is selected**

To use this mode, first download the certificate request from the camera.  
For details, see “To import the client certificate” in the Client certificate tab on page 57.

- 1 Start Internet Explorer on the client PC and type the CA’s URL in the address bar.  
The CA’s URL is normally as follows:  
http://<address of the CA>/CertSrv/
- 2 Click **Go To**.
- 3 Type the log-in user name and password correctly, and the “Microsoft Certificate Services” page opens.
- 4 Click **Request a certificate, advanced certificate request** and **Submit a certificate request by using a base-64-encoded CMC or PKCS #10 file, or submit a renewal request by using a base-64-encoded PKCS #7 file** in sequence.  
The “Submit a Certificate Request or Renewal Request” page opens.

- Paste the contents of the certificate request exported from the camera in the **Saved Request** text box.

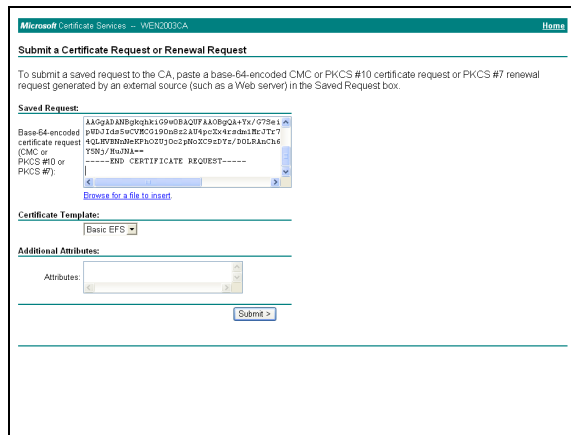

- Set **Certificate Template** to **User** and click **Submit**.  
Message “The certificate you requested was issued to you.” appears.
- Select **Base 64 encoded** and click **Download certificate**.  
The certificate is now saved. Import the saved file to the camera as the camera’s client certificate. For details, see “To import the client certificate” in the Client certificate tab on page 57.

**Note**

The certificate saved in the procedure above has the same file name as the default file name for saving the CA certificate (certnew.cer).  
Be careful not to overwrite the file on the client PC.

## Setting the User — User Menu

When you click **User** in the Administrator menu, the User menu appears. Use this menu to set the user names and passwords of Administrator and up to 9 kinds of users (User 1 to User 9), and the access right of each user.



### Administrator

Specify **User name**, **Password** and **Re-type password**.

### User 1 to 9

Specify **User name**, **Password**, **Re-type password**, **FTP**, **Audio** and **Viewer mode** for each user ID.

#### User name

Type a user name between 5 and 16 characters.

#### Password

Type a password between 5 and 16 characters.

#### Re-type password

To confirm the password, retype the password that you typed in the **Password** box.

#### FTP

Set whether this user is allowed to log in to an FTP server or not. Check the box if the user is allowed to log in to an FTP server.

#### Audio

Select whether audio output to a speaker connected to the line output jack of the camera is allowed or not by using the SNC audio upload tool stored in the supplied CD-ROM. Check this box to allow audio output.

### Note

To output audio using the SNC audio upload tool, set **Audio upload** to **Enable** in the Common tab of the Camera menu (page 40).

### Viewer mode

When the user is authenticated for logging in the main viewer, select the viewer mode to be displayed after authentication.

**Full:** The user can operate all functions in this mode.

**Pan/Tilt:** In addition to the **Light** mode, the user can operate pan/tilt/zoom.

**Preset position:** In addition to the **Light** mode, the user can perform the camera's preset position settings.

**Light:** In addition to the **View** mode, the user can select the image size of the main viewer, control digital zoom, and capture a still image.

**View:** The user can only monitor the camera image.

For the functions available for each viewer mode, see "Administrator and User" on page 18.

### Viewer authentication

Set whether the user is authenticated or not when the main viewer is displayed.

**On:** The main viewer is displayed in accordance with the viewer mode of the authenticated user.

**Off:** Select the viewer mode of the main viewer which is displayed without authentication from **Full**, **Pan/Tilt**, **Preset position**, **Light** or **View**.

### OK/Cancel

See "Buttons common to every menu" on page 31.

## Setting the Security — Security Menu

When you click **Security** in the Administrator menu, the Security menu appears.

Use this menu to limit the computers that can access the camera.

### Security function

To activate the security function, select **On**.

### Default policy

Select the basic policy of the limit from **Allow** and **Deny** for the computers specified in the Network address/Subnet 1 to Network address/Subnet 10 menus below.

### Network address/Subnet 1 to Network address/Subnet 10

Type the network addresses and subnet mask values that you want to allow or deny access to the camera.

You can specify up to 10 network addresses and subnet mask values. For a subnet mask, type 8 to 32.

Select **Allow** or **Deny** from the drop-down list on the right for each network address/subnet mask.

### Tip

The subnet mask value represents the bit number from the left of the network address.

For example, the subnet mask value for "255.255.255.0" is 24.

If you set **192.168.0.0/24** and **Allow**, you can allow access from computers having an IP address between "192.168.0.0" and "192.168.0.255".

### Note

You can access the camera even from a computer having an IP address whose access right is set to **Deny**, if you

enter the user name and password set for the **Administrator** boxes in the User menu.

### OK/Cancel

See “Buttons common to every menu” on page 31.


## Saving the Camera Position and Action — Preset position Menu

When you click **Preset position** in the Administrator menu, the Preset position menu appears. Use this menu to save camera’s pan, tilt and zoom positions and set tours (programmed action of the camera).

The Preset position menu consists of 2 tabs: **Position** and **Tour**.

### Position Tab — Saving pan/tilt/zoom position

You can set up to 16 camera positions (pan, tilt and zoom positions).

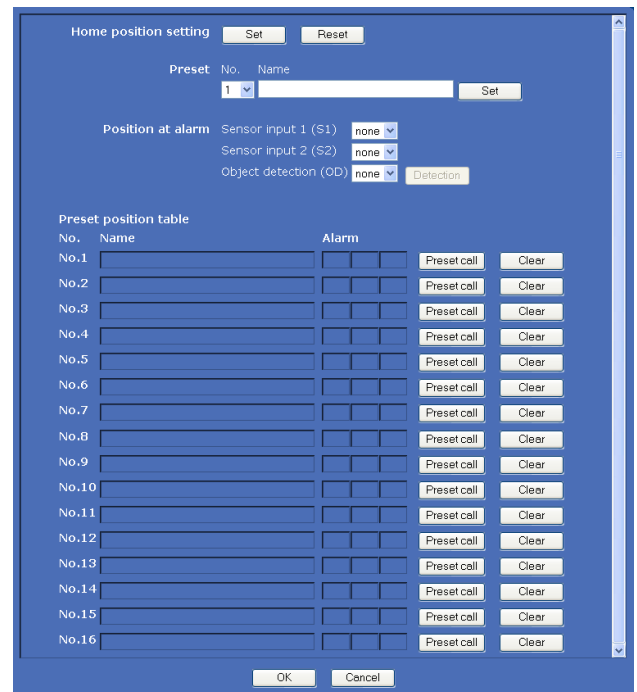

### Home position setting

Set the current camera position as the home position.

### Set

Click to save the current pan, tilt and zoom positions as the home position. To move the camera to the home position, click  in the control panel (page 23).

### Reset

Click to reset the home position to the factory-set position.



**Note**

When you limit the camera movement area with the **Angle setting** of SNC panorama creator (page 104), set the camera home position after setting the camera movement area.

If you set the camera home position before setting the camera movement area, the camera moves to the set home position even if the set position is outside of the movement area.

**Preset**

Configure and save preset positions.

**No.**

Select a preset number from **1** to **16** from the drop-down list.

**Name**

Type the preset position name of the selected preset number using up to 32 characters.

**Note**

If you intend to display the preset position name as an overlay, please use single-byte alphanumeric characters only.

**Set**

Click to save the current camera position to the selected preset number.

To save a preset position, operate as follows:

- 1** Move the camera to the position to be saved while you are checking the image with the main viewer.
- 2** Select a preset number for saving, and type the preset position name.
- 3** Click the **Set** button.  
The camera position is saved.

**Note**

When you limit the camera movement area with the **Angle setting** of SNC panorama creator (page 104), set the preset position after setting the camera movement area.

If you set the preset position before setting the camera movement area, the camera moves to the set preset position even if the set position is outside of the movement area.

**Position at alarm**

The camera can synchronize the preset position with Sensor input 1 or 2 or with the object detection function. If an alarm is detected by the sensor input or the object detection function, the camera automatically moves to the corresponding preset position.

If you do not want to synchronize with any preset number, select **none**.

**Sensor input 1 (S1)**

Select a preset position to synchronize with the alarm from Sensor input 1.

**Sensor input 2 (S2)**

Select a preset position to synchronize with the alarm from Sensor input 2.

**Object detection (OD)**

Select a preset position to synchronize with the alarm from the object detection.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 84).

**Note**

In the case where the synchronized preset position is specified, the alarm event that happens when the camera moves to the preset position will be invalid.

**Preset position table**

Lists the preset positions and alarms assigned for each position currently saved in the camera.

You can move the camera to the preset position by clicking **Preset call**, or delete the preset position data by clicking **Clear**.

**No.**

Shows the preset number.

**Name**

Shows the name of the preset position assigned to each preset number.

**Alarm**

Shows the alarm(s) synchronized with each preset position. **S1**, **S2** and **OD** represent Sensor input 1, Sensor input 2 and Object detection respectively.

**Preset call**

Click to move the camera to the preset position.

**Clear**

Click to delete the preset position data.

**OK/Cancel**


See “Buttons common to every menu” on page 31.

**Note**

The **OK/Cancel** can be effective in the operation of **Position at alarm** with this tab.

## Tour Tab — Setting a tour

Up to 16 positions can be programmed, and the camera moves to the programmed positions sequentially (Tour). Up to five programs can be set as Tours A to E.

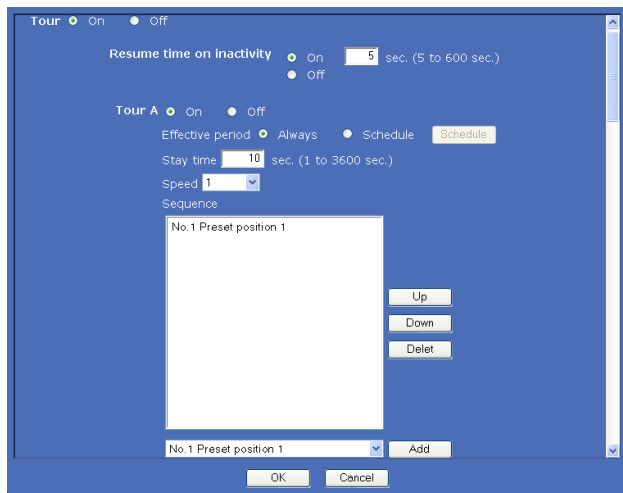

### Tour

Select **On** to enable the tour function.

### Resume time on inactivity

This item becomes active when **Tour** is set to **On**. With this item, you can select whether you restart or stop the tour after it has stopped by manual pan, tilt or zoom operation or by camera movement to the preset position triggered by an alarm.

**On:** Specify the wait time before the tour restarts, between 5 and 600 seconds. The tour restarts automatically after the specified time has elapsed.

**Off:** The tour does not restart.

### Tour A to Tour E

Configure Tour A to Tour E respectively. Each tour setting consists of 5 items: **On/Off**, **Effective period**, **Stay time**, **Speed** and **Sequence**.

**On:** The tour operates.

**Off:** The tour does not operate.

### Effective period

Select the period during which the tour is activated.

**Always:** The tour can be activated any time.

**Schedule:** The tour is activated according to the schedule you have set. Click **Schedule**, and the menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82.)

### Note

You cannot set tours if the effective periods overlap each other.

### Stay time

Type a period of time during which the camera is to stay at each preset position, between **1** and **3600** seconds.

### Speed

Select the speed of camera movement between **1** and **23**, or **Fastest** from the drop-down list. The camera moves faster with a higher number setting. The fastest speed is obtained with **Fastest**.

### Sequence

Set the sequence of the tour.

The preset positions saved using the Position tab are displayed in the drop-down list at the bottom.

Select the preset position from the drop-down list, then click **Add**. The selected preset position is added in the **Sequence** list. Repeat this procedure to specify the preset positions in sequence.

If you specified an unnecessary preset position, click to select it in the list and click then **Delete**.

To change the order in the list, click to select the preset position and then click **Up** or **Down**.

### Note

The tour cannot be set to **On** if no preset position is added in the **Sequence** list.

### OK/Cancel

See “Buttons common to every menu” on page 31.


# Sending an Image via E-mail — e-Mail (SMTP) Menu

When you click **e-Mail (SMTP)** in the Administrator menu, the e-Mail (SMTP) menu appears.

Using e-Mail (SMTP) function, you can send an e-mail with attached image file that has been shot linked with an external sensor input or with the built-in object detection function. The image file can also be sent periodically.

The e-Mail (SMTP) menu consists of three tabs: **Common**, **Alarm sending** and **Periodical sending**.

## Common Tab — Setting the e-Mail (SMTP) Function

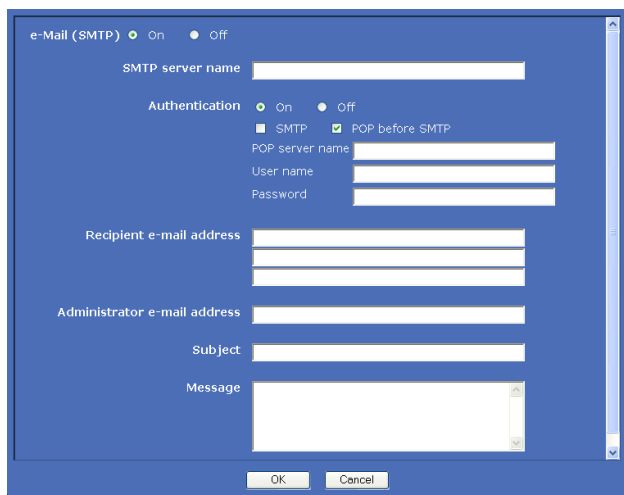

### e-Mail (SMTP)

Select **On** when you use the e-Mail (SMTP) function.

#### Notes

- You cannot send an audio file by using the e-mail sending function.
- The frame rate and operability on the main viewer may be reduced while a file is being transmitted by the e-Mail (SMTP) function.

### SMTP server name

Type the SMTP server name using up to 64 characters, or the IP address of the SMTP server.

### Authentication

Select the authentication required when you send an e-mail.

**Off:** Select if no authentication is required when an e-mail is sent.

**On:** Select if authentication is required when an e-mail is sent. Select one of the authentication methods from the following and specify the **POP server name**, **User name** and **Password** as required.

**SMTP:** Select when SMTP authentication is required.

**POP before SMTP:** Select when POP before SMTP authentication is required.

#### Note

When you set **Authentication** to **On**, be sure to select either or both **SMTP** or/and **POP before SMTP**.

### POP server name

It is necessary when **POP before SMTP** is selected for **Authentication**.

Type the POP (receiving mail) server name using up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server that sends e-mails performs authentication using the POP user account.

### User name, Password

Type the user name and password of the user who owns the mail account using up to 64 characters. This setting is necessary when the SMTP server that sends e-mails performs authentication.

### Recipient e-mail address

Type the recipient e-mail address using up to 64 characters.

You can specify up to three recipient e-mail addresses.

### Administrator e-mail address

Type the Administrator e-mail address using up to 64 characters.

This address is used for reply e-mails and sending system messages from the mail server.

### Subject

Type the subject/title of the e-mail using up to 64 characters.

When **Alarm sending** of the Alarm sending tab is set to **On**, an e-mail sent in response to the alarm detection will indicate the type of alarm in the subject. **S1** is added for sensor input 1 detection, **S2** is added for sensor input 2 detection, **MD** is added for moving object detection and **UD** is added for unattended object detection.

### Message


Type the text of the e-mail using up to 384 characters. (A line break is equivalent to 2 characters.)

### OK/Cancel

See “Buttons common to every menu” on page 31.

## Alarm sending Tab — Setting the e-mail sending mode when detecting the alarm

Set to send an e-mail linked with alarm detection by the external sensor input or by the built-in object detection function.

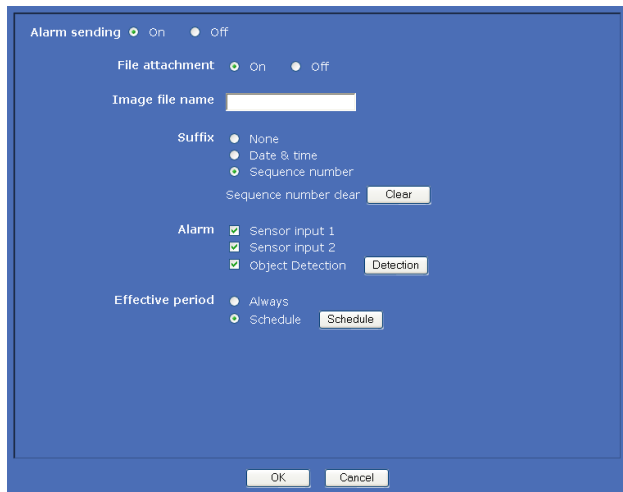

### Alarm sending

Select **On** to set sending an e-mail linked with alarm detection.

### File attachment

Set whether an image file (JPEG file) is to be attached to the e-mail or not.

When **On** is selected, the image file made using the settings below is attached. When **Off** is selected, only the message is sent.

### Image file name

Type the file name you want to assign to the image to be attached to an e-mail. You can use up to 10 alphanumeric characters, - (hyphen) and \_ (underscore) for naming.

### Suffix

Select a suffix to be added to the file name.

**None:** No suffix is added. The image file name is assigned to the image to be sent via e-mail.

**Date & time:** The date & time suffix is added to the image file name.

The date/time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus adding 14-digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 are added to the image file name.

### Sequence number clear

Click **Clear** to reset the **Sequence number** suffix to 1.

### Alarm

Select the alarm to be linked with e-mail notification.

**Sensor input 1:** The external sensor that is connected to sensor input 1 of the camera I/O port.

**Sensor input 2:** The external sensor that is connected to sensor input 2 of the camera I/O port.

**Object detection:** The alarm detected by the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 84).

### Note

In the case that the synchronized preset position is specified in **Position at alarm** in the Preset position menu, an alarm event that happens when the camera moves to the preset position will be invalid.

### Effective period

Set the period during which the alarm detection is effective.

**Always:** The alarm detection is always effective.

**Schedule:** You can specify the period during which the alarm detection is effective.


Click **Schedule** and the menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

### OK/Cancel

See “Buttons common to every menu” on page 31.

## Periodical sending Tab — Setting the periodical e-mail sending mode

You can set to send e-mails periodically.

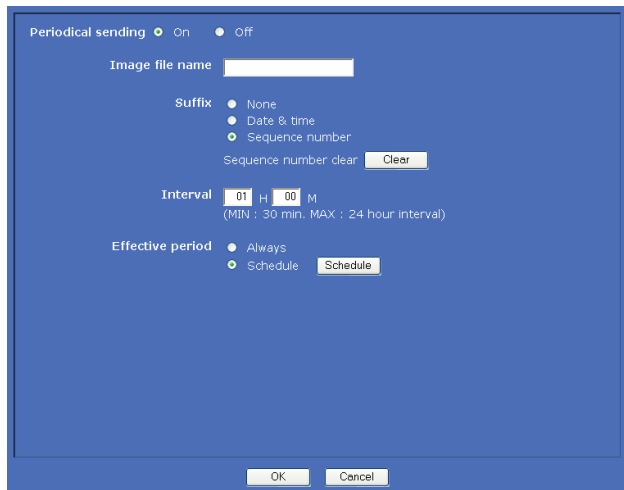

### Periodical sending

Select **On** when you want to use periodical e-mail sending.

### Image file name

Type the file name of the image attached to the e-mail using up to 10 alphanumeric characters, - (hyphen) and \_ (under score).

The actual image file name will be the specified image file name with a suffix and the extension .jpg.

### Suffix

Select a suffix to be added to the file name used when the e-mail is sent.

**None:** The name of the sent file will be the image file name.

**Date & time:** The date & time suffix is added to the image file name.

The date & time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus adding a 14-digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 are added to the image file name.

### Sequence number clear

Click **Clear** to reset the **Sequence number** suffix to 1.

### Interval

Type the interval at which you want to send an e-mail periodically. You can set the hour (H) and minutes (M) between 30 minutes and 24 hours (one day).

### Effective period

Set the period during which periodical sending will be effective.

**Always:** Periodical sending is always effective.

**Schedule:** You can specify the period during which periodical sending is effective.

Click **Schedule** and the menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

### OK/Cancel

See “Buttons common to every menu” on page 31.

# Sending Images to FTP Server

## — FTP client Menu

When you click **FTP client** in the Administrator menu, the FTP client menu appears.

Use this menu to set up for capturing and sending still images to an FTP server. Using FTP client function, you can send an image and audio file that has been shot and recorded linked with the external sensor input or with the built-in object detection function to an FTP server. The image file can also be sent periodically.

The FTP client menu consists of three tabs: **Common**, **Alarm sending** and **Periodical sending**.

## Common Tab — Setting the FTP client function

### FTP client function

To activate the FTP client function, select **On**.

#### Note

The frame rate and operability on the main viewer may be reduced while a file is being transmitted by the FTP client function.

### FTP server name

Type either the FTP server name to upload still images using up to 64 characters, or the IP address of the FTP server.

### User name

Type the user name for the FTP server using up to 64 characters.

### Password

Type the password for the FTP server using up to 64 characters.

### Re-type password

To confirm the password, type the same characters as you typed in the **Password** box.

### Passive mode

Set whether you use the passive mode of FTP server or not when connecting to the FTP server. Select **On** to connect to the FTP server using the passive mode.

### OK/Cancel

See “Buttons common to every menu” on page 31.

## Alarm sending Tab — Setting the FTP client action when detecting the alarm

Set to forward an image and audio file to the specified FTP server linked with alarm detection by the external sensor input or by the built-in object detection function.

### Alarm sending

Select **On** to send the image and audio file to the FTP server linked with alarm detection.

### Remote path

Type the path to the destination using up to 64 characters.

### Image file name

Type the file name you want to assign to the images when sending to the FTP server. You can use up to 10 alphanumeric characters, - (hyphen) and \_ (underscore) for naming.

## Suffix

Select a suffix to be added to the file name.

**Date & time:** The date & time suffix is added to the image file name.

The date/time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus adding a 14-digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and an consecutive 2 digits number are added to the image file name.

### Tip

A consecutive number added to **Date & time** and **Sequence number** is used to identify each of multiple files created with consecutive alarm events.

## Sequence number clear

Click **Clear** to reset the **Sequence number** suffix to 1.

## Alarm

Select the alarm to be linked with file forwarding to the FTP server.

**Sensor input 1:** The external sensor that is connected to sensor input 1 of the camera I/O port.

**Sensor input 2:** The external sensor that is connected to sensor input 2 of the camera I/O port.

**Object detection:** The alarm detected by the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 84).

### Note

In the case that the synchronized preset position is specified in **Position at alarm** in the Preset position menu, an alarm event that happens when the camera moves to the preset position will be invalid.

## Effective period

Set the period during which the alarm detection is effective.

**Always:** The alarm detection is always effective.

**Schedule:** You can specify the period during which the alarm detection is effective.

Click **Schedule** and the menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

## Alarm buffer

Select **Use alarm buffer** when you are going to forward the image/audio of before and after alarm detection (pre-alarm, post-alarm).

If you do not select the alarm buffer, only the image at the moment of the alarm detection is forwarded.

Click **Alarm buffer** to display the Alarm buffer menu. For details, see “Setting the Alarm Buffer — Alarm buffer Menu” on page 83.

### Note

This setting becomes invalid and a still image is recorded if **H.264** is selected in the Video codec tab of the Camera menu.

## OK/Cancel

See “Buttons common to every menu” on page 31.

## Periodical sending Tab — Setting the periodical FTP client activity

You can set to send image files (JPEG files) to an FTP server periodically.

## Periodical sending

Select **On** when you want to use periodical sending.

## Remote path

Type the remote path using up to 64 characters.

## Image file name

Type the file name of the image sent to the FTP server using up to 10 alphanumeric characters, - (hyphen) and \_ (under score).

The actual image file name will be the specified image file name with a suffix and the extension .jpg.

**Note**

You cannot send the audio file using the periodical sending of the FTP client function.

**Suffix**

Select a suffix to be added to the file name sent to the FTP server.

**None:** The name of the sent file will be the image file name.

**Date & time:** The date & time suffix is added to the image file name.  
 The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus adding a 14-digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 are added to the image file name.

**Sequence number clear**

Click **Clear** to reset the **Sequence number** suffix to 1.

**Mode**

Select the periodical sending mode.

**Periodical mode:** An image file is sent periodically according to the specified **Interval** and **Effective period**.

**Tour mode:** An image file is sent each time the camera is moved to a preset position during the tour.

**Interval**

Type the interval at which you want to send images to the FTP server periodically. You can set the hour (H), minutes (M) and seconds (S) between 1 second and 24 hours (one day).

**Note**

The actual interval may be longer than the set value, depending on the image size, image quality setting, bit rate and the network environments.

**Effective period**

Set the period during which the periodical sending is effective.

**Always:** The periodical sending is always effective.

**Schedule:** You can specify the period during which the periodical sending is effective.

Click **Schedule** and the menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

**OK/Cancel**

See “Buttons common to every menu” on page 31.



# Recording Images in Memory

## — Image memory Menu

When you click **Image memory** in the Administrator menu, the Image memory menu appears.

By using the image memory function, you can record the image and audio file, which has been shot being linked with the external sensor input or with the built-in object detection function, in the built-in memory (about 18 MB), or in the ATA memory card (not supplied) or CF memory card (not supplied) inserted in the camera. The image file can also be recorded periodically.

The recorded image and audio files can be found or downloaded to the computer using the FTP server function. (See “Downloading Images from the Camera — FTP server Menu” on page 77.)


The Image memory menu consists of three tabs: **Common**, **Alarm recording** and **Periodical recording**.

For the verified cards, contact your authorized Sony dealer.

### Notes

- The image and audio files recorded in the built-in memory are deleted when the power of the camera is turned off or the **Selected root directory** setting is changed.
- The frame rate and operability on the main viewer may be reduced during image storage.
- Set **Image memory** to **Off** when you remove the ATA memory card or CF memory card from the camera or turn off the power of the camera with the ATA memory card or CF memory card inserted.
- When you remove or insert a card, wait at least 10 seconds.
- Before using an ATA memory card or CF memory card, format it using the computer, or using **Format ATA memory card** or **Format CF memory card** in the Initialize tab of the System menu (page 37).

## Common Tab — Setting the image memory function



### Image memory

To use the image memory function, select **On**.

### Selected root directory

Select a memory in which you want to save an image. The current memory space is displayed on the right.

**Built-in memory:** Built-in memory of this camera

**ATA memory card:** ATA memory card inserted into the PC card slot of the camera.

**CF memory card:** CF memory card inserted into the CF card slot of the camera.

### Notes

- The image and audio files recorded in the built-in memory are deleted when the **Selected root directory** setting is changed.
- When **Selected root directory** is set to an option other than **Built-in memory**, “empty” is displayed in the memory space box and you cannot access the built-in memory.

### Overwrite

Select **On** to overwrite the file or not when there is insufficient memory space to record the image in the built-in memory, ATA memory card or CF memory card.

**On:** Overwrite is enabled and old files will be overwritten in the order of date.

**Off:** Overwrite is prohibited. No recording will be performed.

### Capacity warning

Select **On** to send a warning mail to the Administrator when the memory space of the built-in memory, ATA memory card or CF memory card is low or the memory

is full. Select **Off** if you do not want to send a warning mail.

**Note**

When **Overwrite** is set to **On**, a warning mail is not sent to the Administrator.

**SMTP server name**

Type the name of the SMTP server for sending an e-mail, using up to 64 characters.

Otherwise type the IP address of the SMTP mail server.

**Authentication**

Select the authentication required when you send an e-mail.

**Off:** Select if no authentication is required when an e-mail is sent.

**On:** Select if authentication is required when an e-mail is sent.

Select one of the authentication methods from the following and specify the **POP server name**, **User name** and **Password** as required.

**SMTP:** Select when SMTP authentication is required.

**POP before SMTP:** Select when POP before SMTP authentication is required.

**Note**

When you set **Authentication** to **On**, be sure to select either or both **SMTP** or/and **POP before SMTP**.

**POP server name**

This is necessary when **POP before SMTP** is selected for **Authentication**.

Type a POP (receiving mail) server name using up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server that sends e-mails performs authentication using the POP user account.

**User name, Password**

Type the user name and the password of the user who owns the e-mail account. This setting is necessary when the SMTP server that sends e-mails performs authentication.

**Administrator e-mail address**


Type the e-mail address of the recipient of a warning mail (e-mail address of the camera Administrator), using up to 64 characters.

**OK/Cancel**

See “Buttons common to every menu” on page 31.

**Alarm recording Tab — Setting the Image memory function when detecting the alarm**

You can set to record the image and audio file to the memory linked with the external sensor input or with the built-in object detection function.

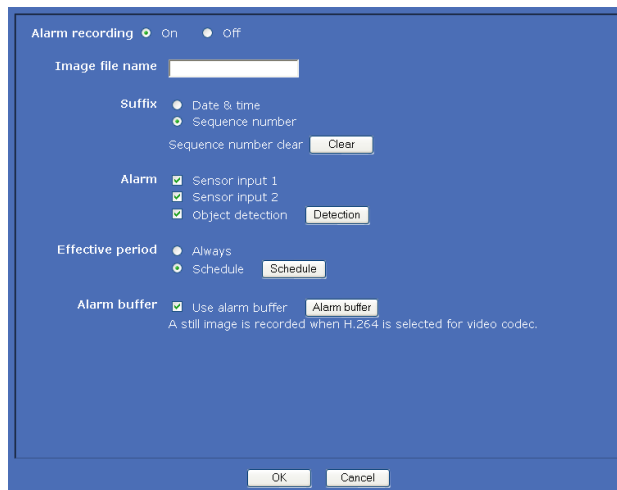

**Alarm recording**

Select **On** to record the image and audio file in the built-in memory, ATA memory card or CF memory card, linked with alarm detection.

**Image file name**

Type the file name you want to assign to the images to be recorded. You can use up to 10 alphanumeric characters, - (hyphen) and \_ (underscore) for naming.

**Suffix**

Select a suffix to be added to the file name.

**Date & time:** The Date & time suffix is added to the image file name.

The Date & time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits) and consecutive number (2 digits), thus adding a 14-digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and an consecutive 2 digits number is added to the image file name.

**Tip**

A consecutive number added to **Date & time** and **Sequence number** is used to identify each of the multiple files created with consecutive alarm events.

## Sequence number clear

Click **Clear** to reset the **Sequence number** suffix to 1.

## Alarm

Select the alarm to be linked with the recording of image and audio files.

**Sensor input 1:** The external sensor that is connected to sensor input 1 of the camera I/O port.

**Sensor input 2:** The external sensor that is connected to sensor input 2 of the camera I/O port.

**Object detection:** The alarm by the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 84).

### Note

In the case that the synchronized preset position is specified in **Position at alarm** in the Preset position menu, the alarm event that happens when the camera moves to the preset position will be invalid.

## Effective period

Set the period during which alarm detection is effective.

**Always:** The alarm detection is always effective.

**Schedule:** You can specify the period during which alarm detection is effective.

Click **Schedule** and the setting menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

## Alarm buffer

Select **Use alarm buffer** when you record the image/audio of before and after alarm detection (pre-alarm, post-alarm).

If you do not select the alarm buffer, only the image at the moment of the alarm detection is recorded.

Click **Alarm buffer** to display the Alarm buffer menu. For details, see “Setting the Alarm Buffer — Alarm buffer Menu” on page 83.

### Note


This setting becomes invalid and a still image is recorded if **H.264** is selected in the Video codec tab of the Camera menu.

## OK/Cancel

See “Buttons common to every menu” on page 31.

## Periodical recording Tab — Setting the periodical recording mode

You can set to record the image file (JPEG file) in the built-in memory, ATA memory card or CF memory card periodically.

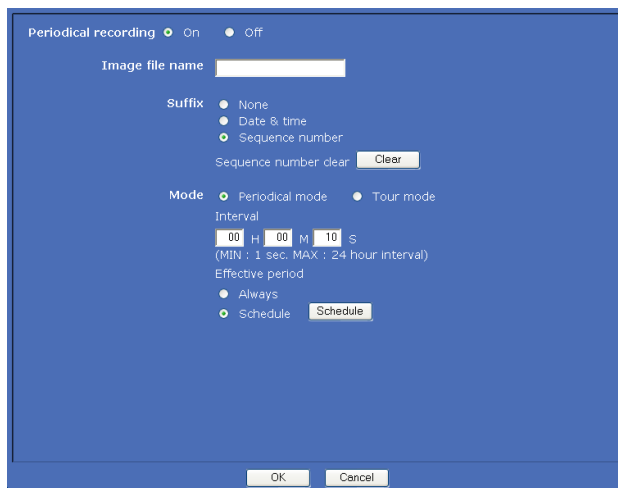

## Periodical recording

Select **On** when you want to use periodical recording.

## Image file name

Type the file name of the image to be recorded to the memory using up to 10 alphanumeric characters, - (hyphen) and \_ (under score).

The actual image file name will be the specified image file name with the a suffix and the extension .jpg.

### Note

You cannot record the audio file using the periodical recording function.

## Suffix

Select a suffix to be added to the file name.

**None:** The recording file name will be the image file name.

**Date & time:** The date & time suffix is added to the image file name.

The date/time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus adding a 14-digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 are added to the image file name.

## Sequence number clear

Click **Clear** to reset the **Sequence number** suffix to 1.

## Mode

Select the periodical recording mode.

**Periodical mode:** An image file is recorded periodically according to the specified **Interval** and **Effective period**.

**Tour mode:** An image file is recorded when the camera is moved to each preset position during the tour.

## Interval

Type the interval at which you want to record an image in the memory periodically. You can set the hour (H), minutes (M) and seconds (S) between 1 second and 24 hours (one day).

### Note

The actual interval may be longer than the set value depending on the image size, image quality, bit rate, or recording media.

## Effective period

Set the period during which the periodical recording is effective.

**Always:** The periodical recording is always effective.

**Schedule:** You can specify the period during which the periodical recording is effective.


Click **Schedule** and the menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

## OK/Cancel

See “Buttons common to every menu” on page 31.

## Folder structure of image memory

When the image memory function is used, the images are recorded with the following tree structure of folder.

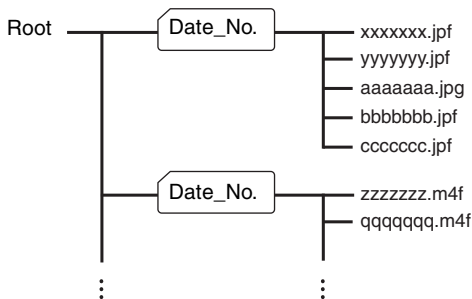

A  represents a folder created automatically. The Date\_No. folder has a 11-digit name consisting of the last two digits of the year (2 digits), month (2 digits), day (2 digits), underscore and sequence number (4 digits).

In the built-in memory, one folder automatically created can store image files of about 1 MB. If the size of the

image files exceeds that value, a new folder is created automatically to continue recording.

### Note

In the ATA memory card or CF memory card, the folder size varies depending on the capacity of the ATA memory card or CF memory card.

## About the extension of a file

A file to be recorded/sent using the image memory function or the FTP client function has one of the following three extensions depending on the video mode setting and the recording/sending settings of the camera.

**.m4f:** A file of this type is created when **Use alarm buffer** is selected in the Alarm recording or Alarm sending tab and **MPEG4** is selected on **Codec** in the Alarm buffer menu. The file may include audio data depending on the microphone setting of the camera.

**.jpf:** A file of this type is created when **Use alarm buffer** is selected in the Alarm recording or Alarm sending tab and **JPEG** is selected on **Codec** in the Alarm buffer menu. The file may include audio data depending on the microphone setting of the camera.

**.jpg:** A file of this type is created when **Use alarm buffer** is not selected in the Alarm recording or Alarm sending tab or when a periodical sending or periodical recording is performed.


The SNC video player (page 99) allows playing of “.m4f” and “.jpf” files.

# Downloading Images from the Camera — FTP server Menu

## OK/Cancel

See “Buttons common to every menu” on page 31.

When you click **FTP server** in the Administrator menu, the FTP server menu appears. Use this menu to set up for the FTP server function that finds a specified image and audio file stored in the built-in memory (about 18 MB), or in the ATA memory card (not supplied) or “CF memory card” (not supplied) inserted in the camera. or downloads a file from the camera.

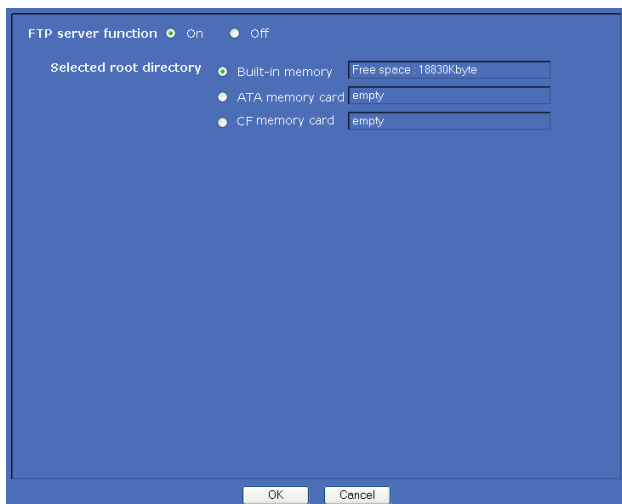

### FTP server function

To activate the FTP server function, select **On**.

### Selected root directory

Select the memory that contains the file you want to download.

The current memory space is displayed on the right.

**Built-in memory:** Built-in memory of this camera or downloads a file from the camera

**ATA memory card:** ATA memory card inserted into the PC card slot of the camera.

**CF memory card:** CF memory card inserted into the CF card slot of the camera.

### Notes

- When **Selected root directory** is set to an option other than **Built-in memory** in the Common tab of the Image memory menu (page 73), “empty” is displayed in the memory space box and you cannot access the built-in memory.
- The frame rate and operability on the main viewer may be reduced when you logged in to the FTP server of this unit using the FTP client software installed in the computer.

# Setting the Alarm Output

## — Alarm output Menu

When you click **Alarm output** in the Administrator menu, the Alarm output menu appears.


You can perform setting in this menu to control the alarm output of the I/O port on the rear of the camera linked to the alarm detection, the timer and the Day/Night function.

The Alarm output menu consists of two tabs: **Alarm out 1** and **Alarm out 2**.

### Tip

For the connection of peripheral devices to the alarm output of the I/O port, see the supplied Installation Manual.

## Alarm out 1, 2 Tab

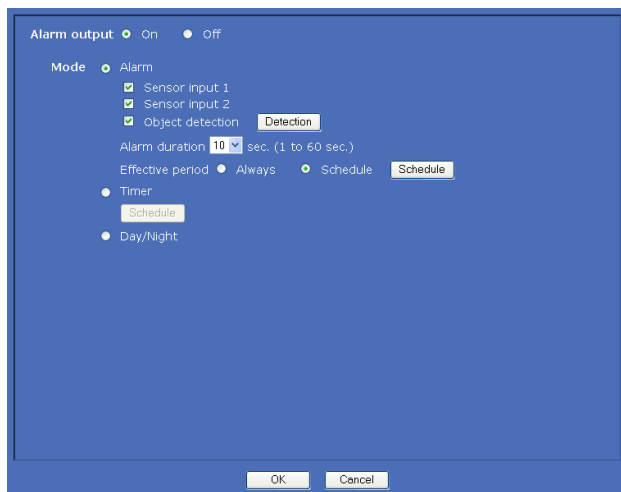

### Alarm output

To activate the alarm output function, select **On**.

### Mode

Select the mode of the alarm output function.

**Alarm:** Controls alarm output by synchronizing it with an external sensor input or the built-in object detection function.

When **Alarm** is selected, the items **Sensor input 1**, **Sensor input 2**, **Object detection**, **Alarm duration** and **Effective period** become active.

**Timer:** Controls alarm output using the timer.

Click **Schedule** and the menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

**Day/Night:** Controls the alarm output linked to the day/night function.

### Sensor input 1

Select this option when you link the alarm output to an external sensor that is connected to sensor input 1 of the camera I/O port.

### Sensor input 2

Select this option when you link the alarm output to an external sensor that is connected to sensor input 2 of the camera I/O port.

### Object detection

Select this option when you link the alarm output to the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 84).

### Note

In the case that the synchronized preset position is specified in **Position at alarm** in the Preset position menu, the alarm event that happens when the camera moves to the preset position will be invalid.

### Alarm duration

Select the duration for which the alarm output is short-circuited between 1 and 60 sec.

### Effective period

This item becomes active when **Mode** is set to **Alarm**. Set the period during which the alarm detection is effective.

**Always:** The alarm detection is always effective.

**Schedule:** You can specify the period during which alarm detection is effective.

Click **Schedule** and the menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

### OK/Cancel

See “Buttons common to every menu” on page 31.

# Outputting Audio Linked to Alarm Detection

## — Voice alert Menu

Click **Voice alert** in the Administrator menu to display the Voice alert menu.

Use this menu to set the voice alert function to output audio from the line output jack of the camera when an alarm is detected by the sensor input or object detection function.

You can output the audio from the speaker connected to the camera in synchronization with an alarm event triggered by the sensor input or the object detection function.


The Voice alert menu consists of 3 tabs: **Voice alert 1**, **Voice alert 2** and **Voice alert 3**. You can configure an individual audio file on each tab.

### Note

Before using the voice alert function, you need to save the audio file to the camera using the SNC audio upload tool stored in the supplied CD-ROM.

For the use of the SNC audio upload tool, see page 94.

## Voice alert 1, 2, 3 Tab

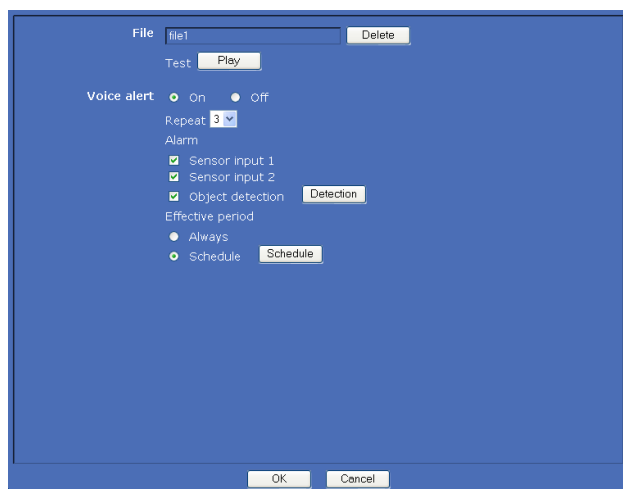

### File

Displays the name of the audio file saved in the camera. “Not uploaded” is displayed dimly if no audio file is saved.

To delete the audio file saved in the camera, click **Delete**.

### Note

Before deleting the audio file, set **Voice alert** to **Off**.

### Test

When the audio file is saved in the camera, you can check it by playing it back.

Click **Play** to play back the audio file once.

### Voice alert

To use the voice alert function linked with the sensor input or the object detection function, select **On**.

### Repeat

Select playback repeat time from **1** to **3**.

### Alarm

Select the alarm to be linked with the voice alert function.

**Sensor input 1:** The external sensor that is connected to sensor input 1 of camera I/O port.

**Sensor input 2:** The external sensor that is connected to sensor input 2 of camera I/O port.

**Object detection:** The alarm detected by the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 84).

### Notes

- If voice alert is activated linked with a different alarm event while another voice alert is going on, the first voice alert is canceled and the second one is output.
- If two or three audio files are set to be output simultaneously linked with the same alarm event, the priority is given in the order **Voice alert 1, 2 and 3**.
- In the case where a preset position is specified in **Position at alarm** in the Preset position menu, the alarm event that happens when the camera moves to the preset position will be invalid.

### Effective period

Set the period during which the alarm detection is effective.

**Always:** The alarm detection is always effective.

**Schedule:** You can specify the period during which the alarm detection is effective.


Click **Schedule**, and the menu for the effective period is displayed. (“Setting the Schedule — Schedule Menu” on page 82)

### OK/Cancel

See “Buttons common to every menu” on page 31.

# Setting the Operations from the Viewer — Trigger Menu


Click **Trigger** in the Administrator menu to display the Trigger menu.

In this menu, you will select the activities that can be performed when  is clicked on the main viewer.




## e-Mail (SMTP)

Checking this box allows you to select **e-Mail** from the trigger drop-down list in the main viewer.


By selecting **e-Mail** and clicking , a still image of the moment you click is captured, and your e-mail with the image file attached is sent to the specified mail address.

When you click **e-Mail (SMTP)**, the **Trigger-e-Mail (SMTP)** menu is displayed. You can set the necessary options here. The setting options and setting procedures are the same as those of the e-Mail (SMTP) menu (page 67).

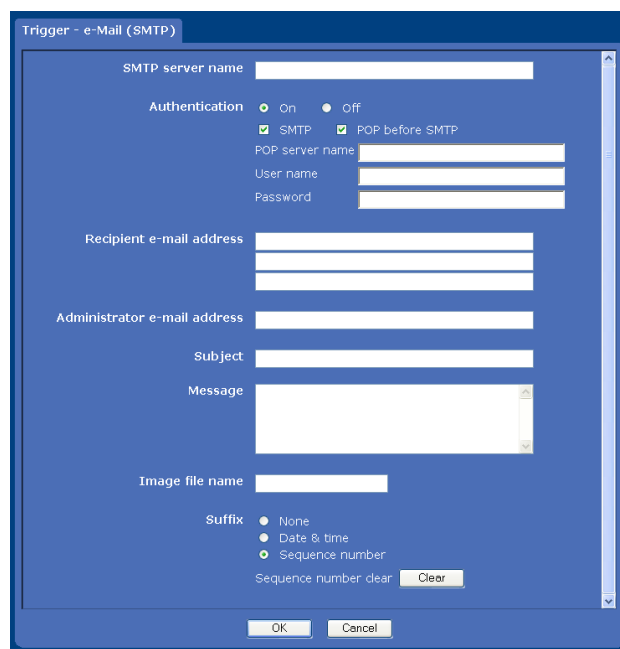


## FTP client

Checking this box allows you to select **FTP** from the trigger drop-down list in the main viewer.

By selecting **FTP** and clicking , a still image of the moment you click is captured, and the image file is sent to the FTP server.


When you click **FTP client**, the **Trigger-FTP client** menu is displayed. You can set the necessary options here. The setting options and setting procedures are the same as those of the FTP client menu (page 70).

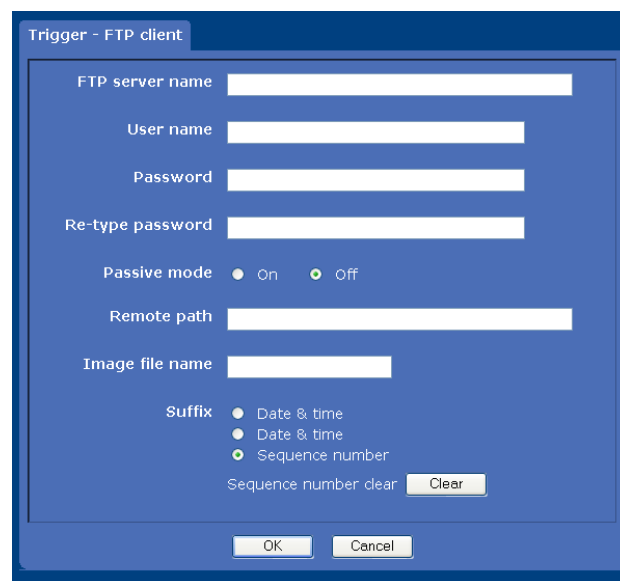

## Image memory


Checking this box allows you to select **Image memory** from the trigger drop-down list in the main viewer.




from the trigger drop-down list in the main viewer. By selecting **Image memory** and clicking , a still image of the moment you click is captured, and the image file is recorded in the built-in memory, ATA memory card (not supplied) or CF memory card (not supplied).

For the verified cards, contact your authorized Sony dealer.

When you click **Image memory**, the **Trigger-Image memory** menu is displayed. You can set the necessary options here. The setting options and setting procedures are the same as those of the Image memory menu (page 73).

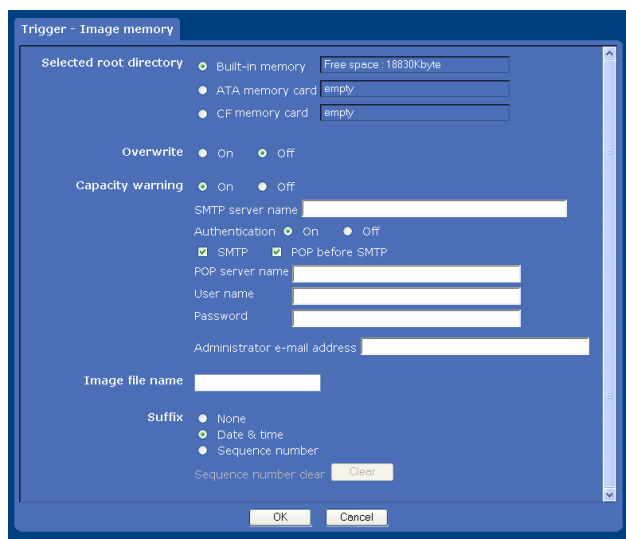


## Alarm output 1, 2

Checking this box allows you to select **Alarm output 1** or **Alarm output 2** from the trigger drop-down list in the main viewer. You can control the alarm output by selecting **Alarm output 1** or **Alarm output 2** and clicking .

Select the alarm output control mode from **Toggle** or **Timer**.


**Toggle:** Each time you click , On (short circuit) or Off (open) is switched.

**Timer:** When you click , the alarm output is switched to On (short circuit), and will automatically switched to Off (open) after the time specified in **Duration** has elapsed.


### Duration

When **Timer** is selected, specify the time for which the alarm output remains short circuited, from 1 to 300 seconds.


## Day/Night

Checking this box allows you to select **Day/Night** from the trigger drop-down list in the main viewer. You can control On (night mode) or Off (day mode) of the day/night function by selecting **Day/Night** and clicking .


When you click the **Day/Night** button, the **Trigger-Day/Night** menu is displayed. You can set the necessary options here. The setting options and setting procedures are the same as those in the Day/Night tab of the Camera menu (page 41).

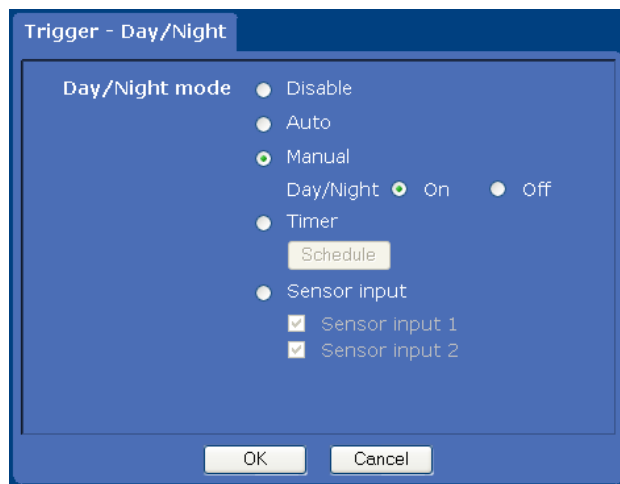

### Note

The day/night function is invalid when **Day/Night mode** is set to **Disable** or **Auto** in the **Trigger-Day/Night** menu, even if you click .

## Voice alert 1, 2, 3

Checking this box allows you to select **Voice alert 1**, **Voice alert 2** or **Voice alert 3** from the trigger drop-down list in the main viewer. You can output audio from the audio file saved in the camera by selecting **Voice alert 1**, **2** or **3** and clicking .

### File

Displays the name of the audio file saved in the camera. “Not uploaded” is displayed dimly if no audio file is saved.

### OK/Cancel

See “Buttons common to every menu” on page 31.

# Setting the Schedule

## — Schedule Menu

When you click **Schedule** in the Administrator menu, the Schedule menu appears.

The Schedule menu consists of seven tabs.

This is the same menu as the Schedule menu that is displayed when you click **Schedule** to set the **Effective period** in the following menus.

**Day/Night:** **Schedule** in the Day/Night tab of the Camera menu

**Preset position:** **Schedule** in the Tour tab of the Preset position menu

**e-Mail:** **Schedule** in the Alarm sending or Periodical sending tab of the e-Mail (SMTP) menu

**FTP:** **Schedule** in the Alarm sending or Periodical sending tab of the FTP client menu

**Image memory:** **Schedule** in the Alarm recording or Periodical recording tab of the Image memory menu

**Alarm out:** **Schedule** in the Alarm out 1 or Alarm out 2 tab of the Alarm output menu

**Voice alert:** **Schedule** in the Voice alert 1, 2 or 3 tab of the Voice alert menu

Example: When setting e-Mail (SMTP) (Periodical sending) in the Schedule menu



### Use the same time schedule every day

When this item is checked, the same **Start time** and **End time** are applied to all days. In that case, the **Start time** and **End time** of the day from **Mon** (Monday) to **Sun** (Sunday) cannot be input.

### Mon (Monday) to Sun (Sunday)

The time period on the right of the checked day is the effective period of the schedule.

### Start time, End time

Specify the start time and the end time.

### OK/Cancel


See “Buttons common to every menu” on page 31.

# Setting the Alarm Buffer

## — Alarm buffer Menu

When you click **Alarm buffer** in the Administrator menu, the Alarm buffer menu appears.

You can set the Pre-alarm image and audio (the image and audio before the alarm detection) and the Post - alarm image and audio. These can be set when **Alarm sending** of FTP client menu or **Alarm recording** of Image memory menu is set to **On**, besides when **Use alarm buffer** is selected.

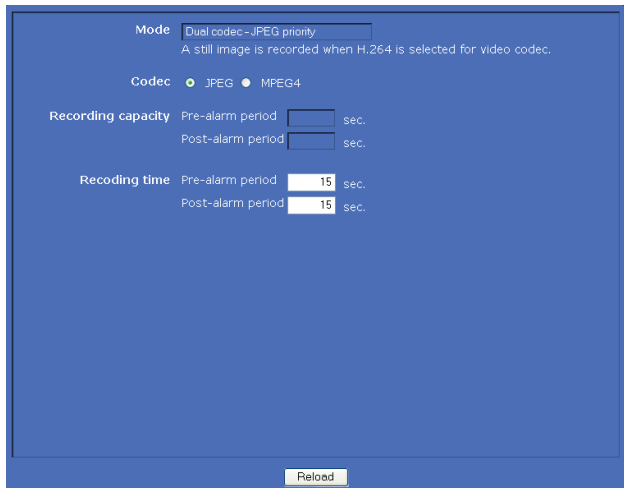

### Mode

Displays the video codec selected in the Video codec tab of the Camera menu.

#### Note

You cannot set the alarm buffer when **H.264** is selected in the Video codec tab of the Camera menu.

### Codec

Only the currently available codec(s) are active. Select the video codec to be used for the alarm buffer.

#### Note

When **Dual codec** is selected in the Video codec tab of the Camera menu and if you select here a video codec different from the priority video codec specified for **Dual codec**, the bit rate and frame rate for sending/recording via the alarm buffer may be lower than the set values.

### Recording capacity

Displays the maximum recording capacity of the alarm buffer in the present camera setting of the video mode, image size, bit rate and frame rate.

**Pre-alarm period:** Displays the maximum recording capacity of image/audio before alarm detection.

**Post-alarm period:** Displays the maximum recording capacity of image/audio after alarm detection.

### Recording time

Set the recording time for the Pre-alarm image/audio and Post alarm image/audio.

**Pre-alarm period:** Type the recording time of the image/audio before alarm detection.

**Post-alarm period:** Type the recording time of the image/audio after alarm detection.

#### Note

The value of **Recording capacity** differs depending on the image size and image quality settings in the Camera menu.

### OK/Cancel

See “Buttons common to every menu” on page 31.

# Setting the Object Detection Function

## — Object detection Menu

When you click **Object detection** in the Administrator menu, the Object detection menu appears.

Using this menu, you can set the conditions for activating the built-in “Moving object detection” and the “Unattended object detection” functions. Moving object detection detects moving objects in the camera image and outputs an alarm. Unattended object detection detects difference between the previously shot background image and the image being shot currently and outputs an alarm when the difference continues recognized for more than the specified period. The Object detection menu consists of three tabs: **Common**, **Unattended object setting** and **Configuration**.

**Note**

When the SSL function is used, the Common tab of the Object detection menu cannot be set.


### What is unattended object detection?

The unattended object detection function of this unit compares the reference background image with the current image to detect an unattended object. The unit can perform “Abandoned object detection” of an object that did not exist and appears now as an unattended object. The unit can also perform “Removed object detection” of an object that existed before and now has disappeared as an unattended object.


#### Abandoned object detection

The camera first stores in memory the background image for reference. If an object that did not exist before appears on the background and stops, the camera detects the object as an unattended object. If the unattended object stays in camera image for more than the specified time, it is marked with a green frame and an alarm linked to unattended object detection is output. you can activate alarm sending of the FTP client function, alarm recording of the image memory function and playback of an audio file in synchronization with the alarm.


**Background image**

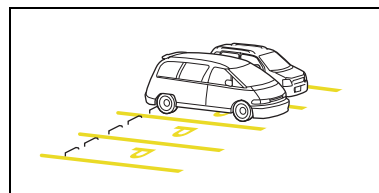

**A car appears in the foreground.**

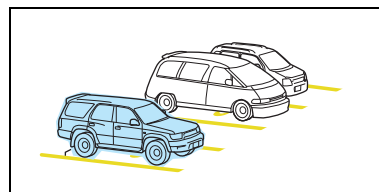


**After the detection time, the car in the foreground is detected as an unattended object.**

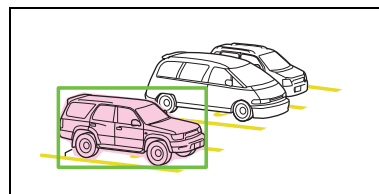


#### Removed object detection

The camera first stores in memory the background image for reference. If an object that existed before moves and disappears, the camera detects the location where the object existed as an unattended object. If there are no changes in the unattended object (location) for more than the specified time, that location is marked with a green frame and an alarm linked to unattended object detection is output. You can activate alarm sending of the FTP client function, alarm recording of the image memory function and playback of an audio file in synchronization with the alarm.


**Background image**

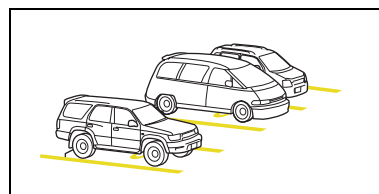

The car in the foreground moves out.

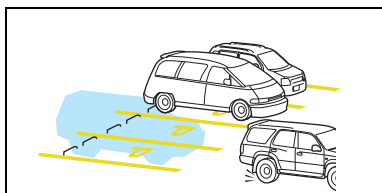

After the detection time, the location where the car was parked is detected as an unattended object.

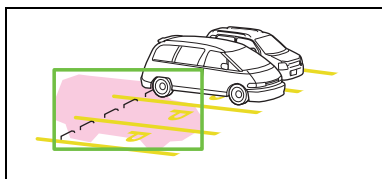


#### Notes

- You can view an MPEG4 image only in the main viewer during the setting of the object detection when **Dual codec** is selected in the Video codec tab.
- The object detection function does not operate when **H.264** is selected in the Video codec tab.
- The unattended object detection may not work correctly if the brightness of a scene changes significantly, for example, when you shoot an outdoor scene continuously from day to night.
- Unattended object detection may not work correctly if the image is of flat scene such as a monochrome wall or floor.
- Before actual use, perform an operation test and confirm that the object detection function works correctly.

#### When the Object detection menu is displayed for the first time

When you click **Object detection**, “Security Warning” is displayed.

When you click **Yes**, ActiveX control is installed and the Object detection menu is displayed.

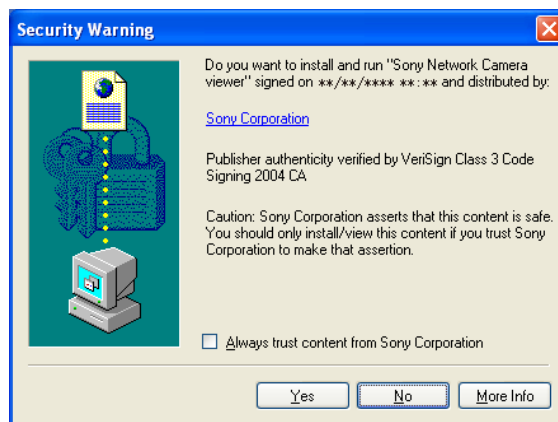

#### Notes


- If **Automatic configuration** is enabled in the Local Area Network (LAN) settings of Internet Explorer, the image may not be displayed. In that case, disable **Automatic configuration** and set the Proxy server manually. For the setting of the Proxy server, consult your network administrator.
- When you install ActiveX control, you should be logged in to the computer as Administrator.
- When you are using Windows XP Service Pack 2 or later, or Windows Vista, the information bar or “Security Warning” may appear as you click **Object detection**. For details, see “Installing ActiveX Control” in “When using Windows XP Service Pack 2 or later” on page 10 or “Installing ActiveX Control” in “When using Windows Vista” on page 12.

#### Common Tab

Use this tab to select moving object detection or unattended object detection, and set the conditions for detection while observing a camera image. You can perform the settings for each of up to 16 preset positions and the current position.

This is the same menu as that displayed when you click **Detection** on Alarm sending of the e-Mail (SMTP)

menu, or on Alarm recording of the Image memory menu.

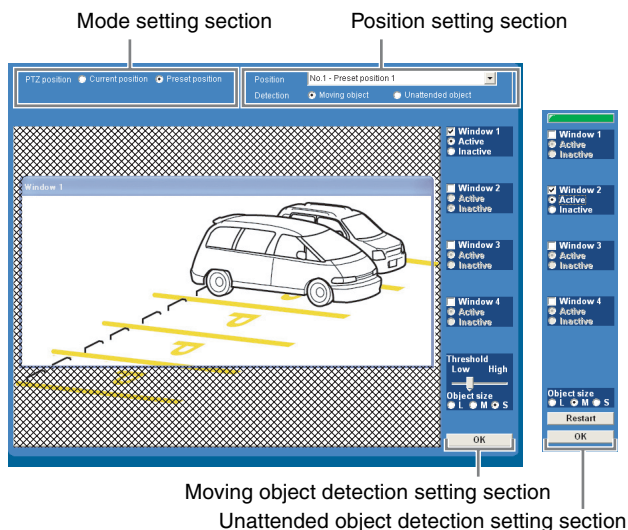

**Moving object:** Select when you want to perform moving object detection. When this option is selected, the moving object setting menu appears. See “Setting items for moving object detection” on page 86.


**Unattended object:** Select when you want to perform unattended object detection. When this option is selected, the unattended object setting menu appears. See “Setting items for unattended object detection” on page 88.

## Setting items for moving object detection

The following setting items appear when **Detection** is set to **Moving object**.

### Monitor display

Set the active/inactive window while monitoring a moving image.

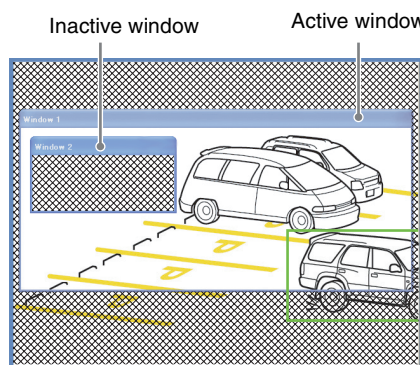

### Notes

- The image displayed on the monitor display has low resolution.
- The colors and green frames shown in the monitor display are not displayed on the image files that are sent or recorded linked to the object detection function.

## Mode setting section

### PTZ position

Select whether object detection is performed under the individual conditions for each preset position or always under the same conditions.

**Current position:** Regardless of the camera position, object detection always works under the same conditions.

**Preset position:** You can set object detection for each preset position. When **Preset position** is selected, an object will not be detected if the camera is not directed to the preset position.

### Note

You cannot select **Preset position** if no preset position is stored in the Position tab of the Preset position menu.

## Position setting section

### Position

Select the preset position you want to set from the drop-down list. The camera automatically moves to the selected preset position.

### Note

This item is disabled when **PTZ position** is set to **Current position**.

### Detection

Select either moving object detection or unattended object detection for the selected position.

## Window1 to Window4 check boxes



When you check a check box, the corresponding window (active or inactive window) appears on the monitor display. You can change the position and size of the window.

**Active:** To use the window as an active area in which moving object detection is performed.

**Inactive:** To use the window as an inactive area in which any moving object is ignored. Select **Inactive** to set an inactive area inside an active window.

**Note**

You cannot set all four windows as **Inactive** windows. Be sure to set one or more windows as **Active** window(s).

**Threshold setting slider bar**



Set the threshold level of moving object detection that is common to all the windows.

The threshold level is used to judge whether or not there has been any motion in the camera image. When the motion of an object on the monitor screen has exceeded the threshold level, the camera judges that there has been a motion and a green frame is shown. An alarm is output when a green frame is added to the object displayed in one of the active windows.

**Object size**



Select the minimum size of a detectable object from **L** (Large), **M** (Medium) and **S** (Small).

 
Each option represents the corresponding size below:

- L:** 64 × 64 dots
- M:** 32 × 32 dots
- S:** 8 × 8 dots

**Tip**

The monitor display is 640 × 480 dots. Size **L** is 1/10 the width of the monitor display.

**OK button**

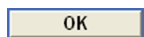

Click to send the set values to the camera and confirm the settings.

**Note**

Although the display on the monitor quickly responds to the setting being performed as you change the size of a window or a setting, you need to click the **OK** button to confirm the setting. The setting will be cancelled if you do not click the **OK** button.

**To set the moving object detection function**

Set the moving object detection function as follows:

**1** Set the PTZ position.

Select **Preset position** for **PTZ position** when you activate moving object detection linked with a preset position. Select **Current position** when you activate this function regardless of the camera position.

**2** Select the camera position where you want to activate the detection function.  
When you select **Preset position** for **PTZ position**, select the desired preset position from the **Position** drop-down list, and the camera will move to the selected preset position automatically.

**3** Select **Moving object** for **Detection**.  
The setting items for moving object detection appear.

**4** Check the **Window 1** check box.  
The **Window 1** frame appears on the monitor display.

**5** Adjust the position and size of **Window 1**.  
Drag **Window 1** to move it and change its size.

**6** Set the active or inactive windows.  
Select **Active** to set **Window 1** as an active area, or **Inactive** to set it as an inactive area.

**Note**

If an active window and inactive window overlap, the overlapped portion will be regarded as an inactive area.

When the two windows overlap, the inactive window is displayed over the active window on the monitor screen. If the active window is hidden by an inactive window and its position or size cannot be changed, temporarily change the active window to an inactive window and change the position and size. After changing, reset it as an active window.

**7** Set the function for **Window 2** to **Window 4**.  
Repeat steps 4 to 6 for each window.

**8** Select the object size for **Object size**.  
Select a larger size if a small noise may be detected as a motion by mistake.

**9** Adjust the **Threshold** setting slide bar to set the threshold level at which the camera executes detection.

Adjust the detection level while observing the monitor screen and actually shooting a moving object.

**10** Click **OK**.  
The moving object detection settings are confirmed.

### Note

Be sure to click the **OK** button to confirm the settings. The setting will be cancelled if you do not click the **OK** button.


- When **Preset position** is selected for **PTZ position**, perform settings for other preset positions. Repeat steps 2 to 10 for each preset position.

## Setting items for unattended object detection

The following setting items appear when **Detection** is set to **Unattended object**.

### Monitor display

Set the active/inactive window while monitoring a moving image.

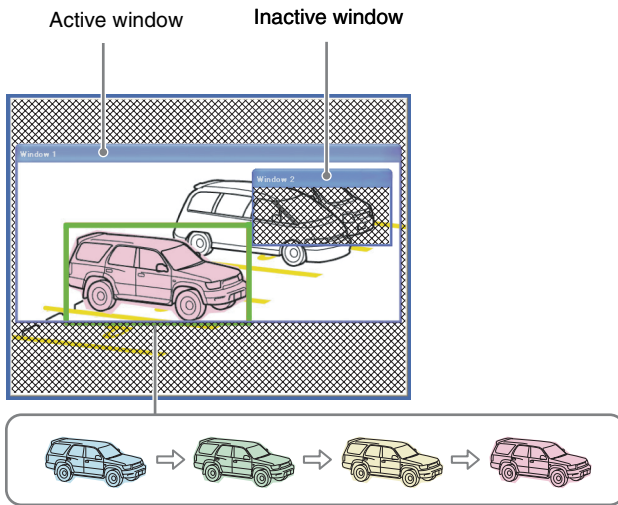


When a prospective unattended object is detected on the monitor display, it will be colored. The object's color will be changed from blue to green, yellow, and red in sequence, as the possibility of it being an unattended object increases. This change of color shows that unattended object detection is in progress. When the camera finally regards the object as an unattended object, a green frame is displayed.

### Notes

 - The colors and green frames shown in the monitor display to indicate prospective unattended objects are not displayed on the image files that are sent or recorded linked to the object detection function.
- The image displayed on the monitor display has low resolution.

### Status lamp

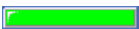

Displays whether or not unattended object detection is operating.

**Gray:** Unattended object detection is not operating because it is in the process of acquiring the background image. When unattended object detection starts, it acquires the background image. Unattended objects are not detected during this period.

**Green:** Unattended object detection is operating because the background image has been acquired.

### Window1 to Window4 check boxes



When you check the check box, the corresponding window (active or inactive window) appears on the monitor display. You can change the position and size of the window.

**Active:** To use the window as an active window in which unattended object detection is performed.

**Inactive:** To use the window as an inactive window in which any unattended object is ignored. Select **Inactive** to set an inactive area inside an active window.

### Note

You cannot set all four windows as **Inactive** windows. Be sure to set one or more windows as **Active** window(s).

### Object size



Select the minimum size of the detectable unattended object from **L** (Large), **M** (Medium) and **S** (Small). Each option represents the corresponding size below:

**L:** 64 × 64 dots

**M:** 32 × 32 dots

**S:** 8 × 8 dots

### Tip

The monitor display is 640 × 480 dots. Size **L** is 1/10 the width of the monitor display.

 
### Restart button

Restart

Click this button to initialize the unattended object detection function. A new background image will be acquired from the current image.



## OK button

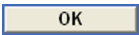

Click to send the set values to the camera and confirm the settings.

### Notes

- Unattended object detection does not operate until the status lamp turns green.
- Although the display on the monitor quickly responds to the setting being performed as you change the size of a window or a setting, you need to click the **OK** button to confirm the setting. The setting will be cancelled if you do not click the **OK** button.

## To set the unattended object detection function

Set the unattended object detection function as follows:

- 1 Set the PTZ position.  
Select **Preset position** for **PTZ position** when you activate unattended object detection linked with a preset position. Select **Current position** when you activate it regardless of the camera position.
- 2 Select the camera position where you want to activate detection.  
When you select **Preset position** for **PTZ position**, select the desired preset position from the **Position** drop-down list, and the camera will move to the selected preset position automatically.
- 3 Select **Unattended object on Detection**.  
The setting items for unattended object detection appear.
- 4 Wait until the status lamp turns green.  
When the status lamp is gray, the camera is in the process of acquiring a background image. Unattended object detection does not work during this period.  
The status lamp turns green when the background image has been acquired.

### Note

When you acquire a background image, use an image with as little motion as possible. If you use an image with a lot of motion, it will take a long time to complete acquiring of the background image.

- 5 Check the **Window 1** check box.  
The **Window 1** frame appears on the monitor display.

- 6 Adjust the position and size of **Window 1**.  
Drag **Window 1** to move it and change its size.
- 7 Set the active or inactive windows.  
Select **Active** to set **Window 1** as an active area, or **Inactive** to set it as an inactive area.

### Note

If an active window and inactive window overlap, the overlapped portion will be regarded as an inactive area.

When the two windows overlap, the inactive window is displayed over the active window on the monitor screen. If the active window is hidden by an inactive window and its position or size cannot be changed, temporarily change the active window to an inactive window and change the position and size. After changing, reset it as an active window.

- 8 Set the function for **Window 2** to **Window 4**.  
Repeat steps 5 to 7 for each window.
- 9 Select the object size for **Object size**.  
Select a larger size if a small noise may be detected as an object by mistake.
- 10 Check whether an unattended object is detected properly.  
Place an object in the window and confirm that unattended object detection works correctly. The object regarded as an unattended object is marked with a green frame.

### Note

It may take a long time until an unattended object is detected, depending on the image being shot.

- 11 Click **OK**.  
The unattended object detection settings are confirmed.

### Note

Be sure to click the **OK** button to confirm the settings. The setting will be cancelled if you do not click the **OK** button.

- 12 When **Preset position** is selected for **PTZ position**, perform settings for other preset positions.  
Repeat steps 2 to 11 for each preset position.
- 13 Set **Detection time**, **Alarm interval** and **Release time** in the Unattended object setting tab.

## Unattended object setting Tab

Use this tab to set the alarm time for unattended object detection.



### Time setting

Unattended object detection requires the following three kinds of time settings.

#### Detection time

Set the period of time from when an object appears in an active window and stops or when an object in an active window disappears until the point when that object is regarded as an unattended object. An alarm will be output if the specified period has elapsed.

You can set the time between 40 seconds and 12 hours.

#### Note

If **Stay time** for the tour function specified in the Preset position menu (page 66) is shorter than **Detection time**, the camera will move to the next preset position before the object is regarded as an unattended object.

#### Alarm interval

You can repeat the alarm output in an interval of the preset time after an object has been regarded as an unattended object.

If you set **Alarm interval** to 5 minutes, for example, so that an alarm will be output every 5 minutes repeatedly after an unattended object is detected.

You can set the time between 1 and 6 hours.

#### Release time

Set the period of time required when the object once regarded as an unattended object is regarded as a background.

An alarm will no longer be output if the specified period has elapsed as the object once regarded as an unattended object is regarded as a background.

You can set the time between 1 and 12 hours.

#### Note

Set **Release time** to a larger value than **Detection time**.

### OK/Cancel

See “Buttons common to every menu” on page 31.

## Configuration Tab



### Setting list

Lists the settings for each position: **Moving object detection**, **Unattended object detection**, **None**.


#### Note

If you select **Moving object** or **Unattended object** in the Common tab when no window is set to **Active**, **None** is displayed in the list.

# Transmitting with External Equipment Using the External Serial Terminal — Serial Menu

When you click **Serial** in the Administrator menu, the Serial menu is displayed.

Using this menu, you can input data into the camera from the computer via a network and output them to the external serial interface to control a peripheral device. You can also input data from a peripheral device via an external serial interface and output them to the computer via a network.

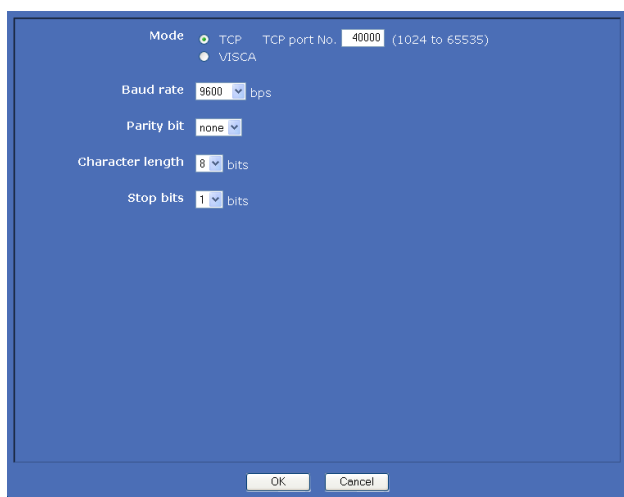

## Mode

Select the mode of data transmission/reception via a network: TCP port or VISCA protocol.

**TCP:** Select when you use the TCP port to input and output data through the external serial interface. Using this method, you can easily check data communications through the serial port by DOS command “telnet [host name] [port number].” When **TCP** is selected, **TCP port No.** box becomes active. Type the port number corresponding to the TCP port. Specify a port number (1024 to 65535) other than established port numbers.

**VISCA:** Select when you control the camera with VISCA protocol. As for the command list of VISCA protocol, refer to the dealer of your camera or Sony professional products service counter nearby.

## Notes

- When you execute serial control with VISCA protocol, match the transmission setting with the connected controller.

- This camera does not correspond to the daisy chain connection of a VISCA device. Use the camera and the controller one-on-one.

## Baud rate

Select a baud rate that corresponds to the peripheral device of serial interface. Selectable baud rates are shown below.

38400, 19200, 9600, 4800, 2400, 1200 (bps)

## Parity bit

Select a parity that corresponds to the peripheral device of serial interface from among **none**, **odd** or **even**.

## Character length

Select the character length that corresponds to the peripheral device connected to the serial interface from **7** or **8** (bits).

## Stop bits

Select the stop bit that corresponds to the peripheral device connected to the serial interface from **1** or **2** (bits).

## OK/Cancel

See “Buttons common to every menu” on page 31.

This section explains how to use the application software and commands, including the supplied CD-ROM.

## Using the Supplied IP Setup Program

Explains the functions except those of the Network tab in the IP Setup Program.

To install the IP Setup Program, to assign an IP address and to set the network, see “Assigning the IP Address to the Camera” on page 8 in “Preparation”.

### Notes

- The IP Setup Program may not operate correctly if you use a personal firewall or antivirus software in your computer. In that case, disable the software or assign an IP address to the camera using another method. For example, see “Assigning the IP Address to the Camera Using ARP Commands” on page 109.
- If you are using Windows XP Service Pack 2 or later, or Windows Vista, disable the Windows Firewall function. Otherwise the IP Setup Program will not operate correctly. For the setting, see “Configuring Windows Firewall” in “When using Windows XP Service Pack 2 or later” on page 10 or “Configuring Windows Firewall” in “When using Windows Vista” on page 12.

## Starting the IP Setup Program

Select **Program** from the Start menu of Windows, then select **Program, IP Setup Program** and **IP Setup Program** in sequence.

The IP Setup Program starts.

Network tab appears. The IP Setup Program detects cameras connected to the local network and lists them on the Network tab window.

When you are using Windows Vista, message “User Account Control – An unidentified program wants access to your computer” may appear. In this case, click **Allow**.


## Bandwidth control Tab

You can set the communication bandwidth for the JPEG image.

### Note

The bandwidth cannot be controlled for the **MPEG4** or **H.264** image.

- 1 Click the Bandwidth control tab to display the bandwidth setting window. The current bandwidth is displayed in **Current bandwidth**.

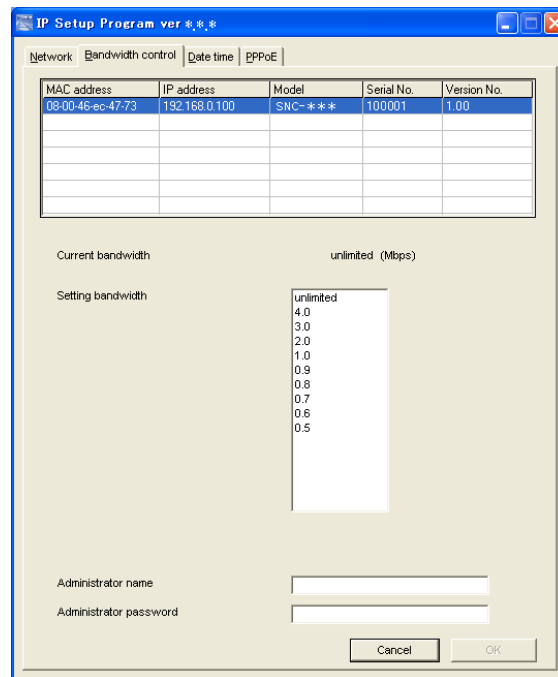


- 2 Click to select the camera to set the bandwidth from the list box.
- 3 Click to select the desired bandwidth from the **Setting bandwidth** list box.
- 4 Type the **Administrator name** and **Administrator password** in each box. The factory settings of both items are “admin.”
- 5 Click **OK**. If “Setting OK” is displayed, the bandwidth setting is completed.

## Date time Tab

You can set the date and time on the camera.

- 1 Click the Date time tab to display the date/time setting window.

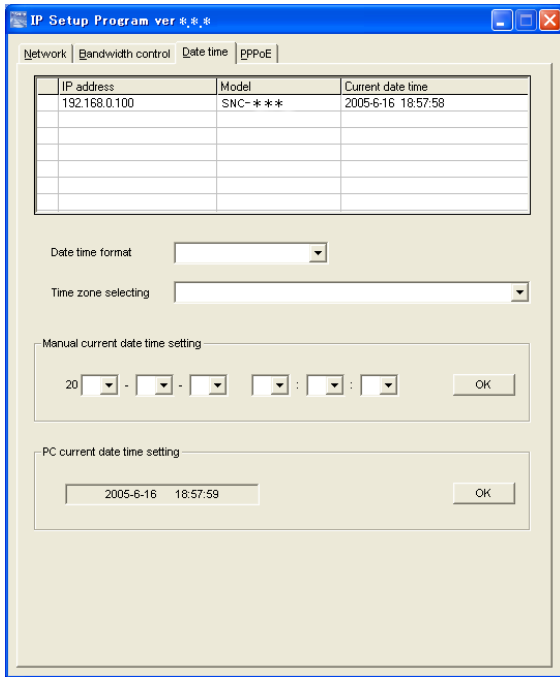

- 2 Click to select the camera that you want to set the date and time for.

You can select multiple cameras and set the date and time simultaneously.

- 3 Select the date/time format from the **Date time format** drop-down list.
- 4 Select the area where the camera is installed from the **Time zone selecting** drop-down list.
- 5 Set the date and time.

You can set the date and time in two ways.

### Manual current date time setting

Set the current date and time on the **Manual current date time setting** boxes, and click **OK**. The setting boxes are for the year (last two digits), month, date, hour, minutes and seconds from left to right.

### PC current date time setting

The date and time set on the computer is displayed in the **PC current date time setting** box. Click **OK** on the right to set the camera's date and time to coincide with the displayed computer's date and time.

## Note

Due to network properties, there may be a slight difference between the displayed computer's date and time and those set on the camera.

## Rebooting the Camera

Click **Reboot** on the Network tab to reboot the camera. It will take about two minutes to start again.

# Using the SNC audio upload tool — Transmitting Audio to Camera

The supplied SNC audio upload tool allows you to transmit sound from the computer to the camera. This section explains the setup and operations of the SNC audio upload tool.

The SNC audio upload tool supports the following audio data to be transmitted.

Audio CODEC	Transmission rate
G711 (μ-LAW)	64 kbps
G.726	40 kbps
G.726	32 kbps
G.726	24 kbps
G.726	16 kbps

## Notes

- Only one user can transmit sound to the camera. Meanwhile, another user will not be able to transmit sound to the camera.
- SSL connection is established in the following cases.
  - Even when the certificate was not issued by a trust worthy certification authority
  - Even when the certificate is invalid
  - Even when the common name in the certificate is invalid
- Even if any Internet Explorer is set up, the Certificate Revocation List are not checked.
- The model on sale in China does not support the SSL function.

## Installing the SNC audio upload tool

- 1 Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser. If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista, pop-up “AutoPlay” may appear. For details, “Installing software” in “When using Windows Vista” on page 12.

- 2 Click the **Setup** icon of **SNC audio upload tool**. The “File Download” dialog opens.

When you are using Windows XP Service Pack 2 or later, or Windows Vista, a message regarding the active contents may appear. For details, see “Installing software” in “When using Windows XP Service Pack 2 or later” on page 10 or “Installing software” in “When using Windows Vista” on page 12.


- 3 Click **Open**.

## Note

If you click “Save this program to disk” on the “File Download” dialog, you cannot install the tool correctly. Delete the downloaded file, and click the **Setup** icon again.

- 4 Install the SNC audio upload tool following the wizard displayed. If the Software License Agreement is displayed, read it carefully and accept the agreement to continue with the installation.

## Connecting the Camera to the Computer

- 1 Connect a speaker to the  (line output) jack on the camera.
- 2 Connect a microphone to the microphone input jack on the computer.

## Note

If the microphone input jack of the computer is not set correctly, no sound is transmitted from the computer and nothing is output from the speaker connected to the camera. Set the microphone input jack from the control panel of Windows.

## On Windows XP

- 1 Select **Sounds and Audio Device** from Control Panel.
- 2 Click **Volume** in the **Sound Recording** section on the Audio tab. The Recording Control window opens.
- 3 Check **Select** in the **Microphone** section.

## On Windows Vista

There are no settings regarding the microphone jack. If recording cannot be made, connect a microphone device to the computer and check that the recording device operates correctly, as follows.


- 1 Select **Sound** from Control Panel.
- 2 Open the Recording tab and check that Windows has recognized the hardware correctly.

## Using the SNC audio upload tool

When you start the SNC audio upload tool, the Setting tab is displayed.

### Setting tab

Use this menu to set the camera to transmit audio from a computer or upload an audio file.

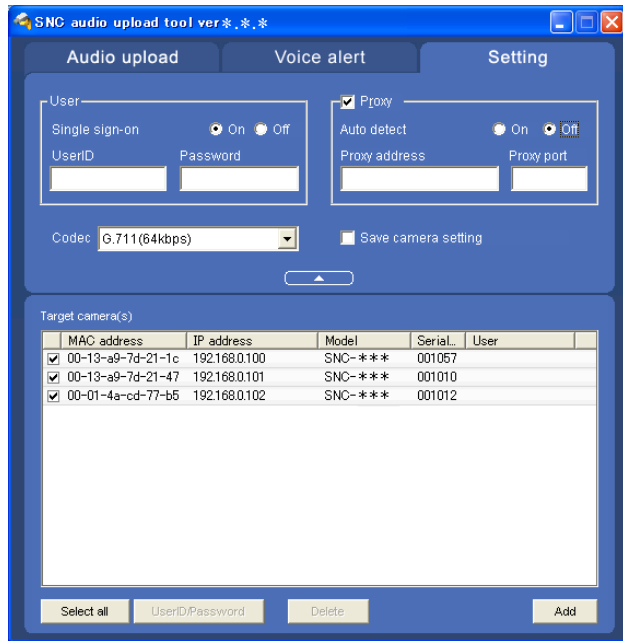

### User

Set the **User ID** and **Password** for the administrator. The factory setting of the User ID for the Administrator is “admin,” and the Password is “admin.”

**Single sign-on:** Select **On** to use the same user ID and same password for all the cameras. Select **Off** to set the user ID and password individually for each camera.

For the setting with **Off**, see “User ID/Password” on page 96.

**User ID:** This item can be set when **Single sign-on** is set to **On**. The user ID specified here is applicable to all cameras.

**Password:** This item can be set when **Single sign-on** is set to **On**. The administrator password specified here is applicable to all cameras.

### Proxy

Check this box when you use a proxy server for communications. When it is not checked, direct communications with the camera is performed.

**Auto detect:** Select **On** to obtain the proxy setting automatically from Internet Explorer.

**Proxy address:** Type the IP address or host name of the proxy server.

**Proxy port:** Type the port number used for communications with the proxy server.

### Note

The Proxy setting is applicable to all cameras. You cannot use individual proxy settings for each camera.

### Codec

Select the audio mode (Codec) from the drop-down list.

### Save camera setting

Check this box to store the current settings and camera list in the Setting tab. The same settings will be recalled when the camera is rebooted.



Click this button to hide the camera list. Click it again to display the camera list.

### Target camera(s) (Camera list)

When the SNC audio upload tool starts, it automatically detects Sony network cameras connected to the local network and displays them in the camera list. Up to 256 cameras can be displayed in the list.

Select the check box on the left of the row to enable audio transmission and audio file uploading for that camera. You can then enable these functions simultaneously for multiple cameras.

### Notes

- If you are using Windows XP Service Pack 2 or later, or Windows Vista, disable the Windows Firewall function. Otherwise the camera list may not be displayed automatically. For details, see “Configuring Windows Firewall” in “When using Windows XP Service Pack 2 or later” on page 10 or “Configuring Windows Firewall” in “When using Windows Vista” on page 12.
- The SNC audio upload tool cannot detect the cameras that are connected to the local network after the program has started.
- The SNC audio upload tool cannot detect the network cameras that are not equipped with the audio feature.

**Camera select checkbox:** The check box is located on the left end of the row. Select this check box to enable audio transmission and audio file uploading for that camera.

**MAC address:** Displays the MAC address of the network camera.

**IP address:** Displays the IP address of the network camera. “DHCP” is shown at the end of the IP address when the IP address is obtained with a DHCP server.

**Model:** Displays the model name of the network camera.

**Serial:** Displays the serial number of the network camera.

**User:** Displays the specified user ID and password. The password is shown with turned letters.

### Select all


Click to select all the cameras in the camera list. This is usable when you delete all the cameras from the list or specify the same user ID and password for all the cameras,

### User ID/Password

Use this item when you specify the user ID and password to communicate with the selected camera(s) only.

Select the camera(s) from the camera list and click this button, and the following dialog opens.

Type the user ID and password for the administrator and click **OK**.

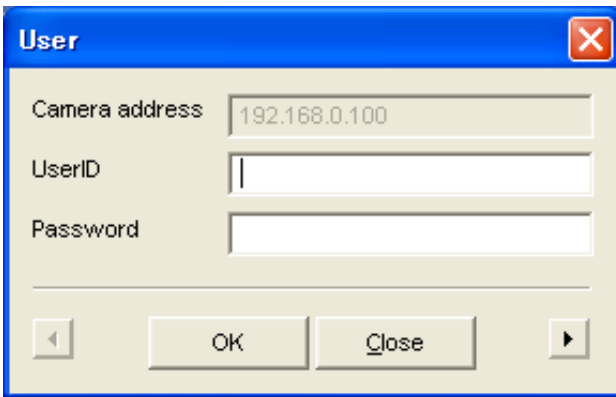


### Note

If you select multiple cameras from the camera list, the same user ID and password are set for all the selected cameras. The factory settings of both items are “admin.”

### Add

Use this item when you add a new network camera to the camera list manually. Click this button, and the following dialog opens.

Type the IP address and port number for the camera to be added and click **OK**.

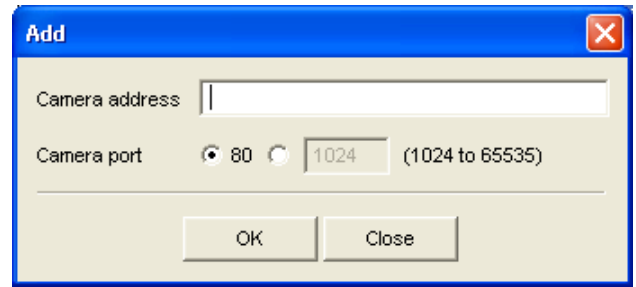

### Notes

- An error dialog appears if the specified IP address already exists in the camera list, is assigned for a device other than the network camera, or does not exist in the network.
- You cannot add new cameras if the maximum of 256 cameras has been displayed in the camera list.

### Delete

Click this button to delete the selected camera(s) from the camera list.


### Note on switching the tab

If an error occurs when you switch from the Setting tab to the Audio upload tab or the Voice alert tab, the camera is shown in red. In this case, check the camera settings and the user ID and password settings.

### Audio upload tab

Use this menu to transmit audio from the computer to the camera. You can transmit audio to multiple cameras displayed in the camera list simultaneously.

Before transmitting, set **Audio upload** to **Enable** on the Common tab of the Camera menu.

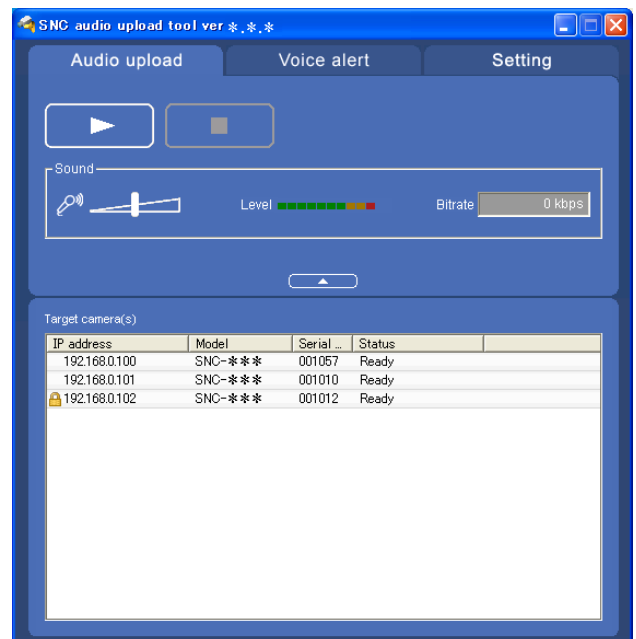




### ▶ (start) / ■ (stop)


Click ▶ (start) to start audio transmission. The transmission speed is displayed in the Bitrate box during transmission. You can adjust the microphone volume and enable/disable the muting, if necessary. To stop the audio transmission, click ■ (stop).

#### Notes

- Audio transmission stops if you switch the tab during the transmission.
- Audio may be interrupted when the IP address is changed if **Obtain an IP address automatically (DHCP)** is set on **IP address** in the Network menu.
- Audio may be interrupted if you transmit it to many cameras simultaneously.

### Sound adjustment and indicators

Adjust the microphone input volume by moving the  slider bar. You can adjust the volume even during transmission.

Click  to enable/disable sound muting. The microphone input volume is displayed at the Level. The transmission rate is displayed in the Bitrate box.




Click this button to hide the camera list. Click it again to display the camera list.

### Target camera(s) (Camera list)

Displays the cameras selected with the camera select checkbox of the camera list in the Setting tab.

The list shows the information and status of the selected cameras.

**IP address:** Displays the IP address of the network camera. “DHCP” is shown at the end of the IP address when the IP address is obtained with a DHCP server.

SSL connection is enabled if you set SSL function to “ON” in the SSL tab of the Network menu. SSL connection is established even when “Allow HTTP connection for some clients” is checked.  mark appears on the left side of IP address of “Target camera(s)” in this tool when SSL connection is established. (The model on sale in China does not support the SSL function.)

**Model:** Displays the model name of the network camera.

**Serial:** Displays the serial number of the network camera.

**Status:** Displays the current status of the camera.

**Ready:** The camera is ready for connection.


**Connected:** The camera connection is successful.

**Fault:** The camera connection is unsuccessful.

**Sending:** Audio data being transmitted

### Voice alert tab

Use this menu to record the sound through the microphone connected to the computer and upload the recorded audio file to the camera. You can upload the audio file to multiple cameras selected from the camera list simultaneously.

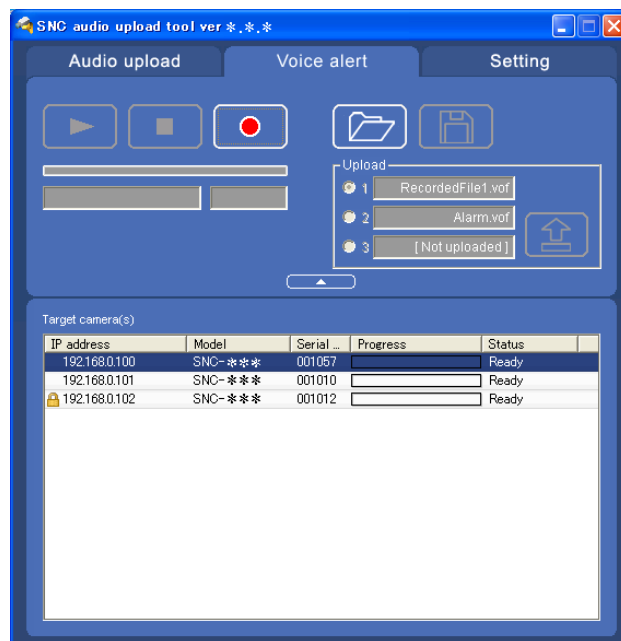

### (playback)

To start playback, open the recorded file or another audio file and click this icon.

You can check the recorded sound or the contents of the selected audio file. During playback, the progress bar shows playback progress.

### (stop)

Click to stop recording or playback.

When you click it during recording, recording stops, and you can review the recorded sound or upload the recording to the camera.

When you click it during playback, playback stops and the progress bar display returns to the start position.

### (recording)

Click to start recording of the sound input to the computer microphone. The maximum recording time is 30 seconds.


The codec specified in the Setting tab is used for the recording.

The recorded file is displayed as “RecordedFile.vof.”

#### Notes

- Recording or playback stops if you switch the tab during recording or playback.
- The recorded file is not stored in the computer.

## Recording/playback progress bar

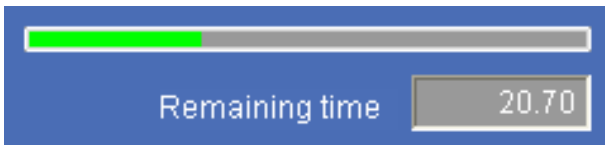

You can check recording or playback progress with this bar.

During recording, the right end of the bar represents 30 seconds and the remaining recording time is displayed below the bar.

During playback, the maximum time of the bar depends on the recorded time.

### (file open)

Click to select a previously saved audio file. You can play the selected audio file or upload it to the camera.

### (save)

Click to save the recorded audio file to the computer.


## Voice alert number select



Specify the voice alert number to which you want to upload the audio file. For example, select **1** when uploading to voice alert 1.

The name of the uploaded audio file is displayed to the right of the number.

“Not uploaded” is displayed if no audio file is uploaded to the camera.

The audio file name will be “RecordedFile” + “Voice alert number” + “.vof” if you upload an audio file recorded using  and not stored in the computer.

### Notes

- The voice alert number select is disabled if the camera specified in the Setting tab has old-version software.
- The audio file name for the camera selected in the camera list is displayed here. To check the uploaded file name, click on the camera in the camera list.
- The audio file is uploaded to the same voice alert number on all the cameras in the camera list. If the camera has old-version software, the audio file is automatically uploaded to voice alert number 1.

### (upload)

Click to upload the recorded or selected audio file to the camera specified in the Setting tab. Only one audio file can be uploaded to the camera at a time.

### Note

Uploading a new audio file overwrites the audio file previously uploaded to the camera.




Click this button to hide the camera list. Click it again to display the camera list.

## Target camera(s) (Camera list)

Displays the cameras selected with the camera select checkbox of the camera list in the Setting tab.

The list shows the information and status of the selected cameras.

**IP address:** Displays the IP address of the network camera. “DHCP” is shown at the end of the IP address when the IP address is obtained with a DHCP server.

SSL connection is enabled if you set SSL function to “ON” in the SSL tab of the Network menu. SSL connection is established even when “Allow HTTP connection for some clients” is checked.  mark appears on the left side of IP address of “Target camera(s)” in this tool when SSL connection is established. (The model on sale in China does not support the SSL function.)

**Model:** Displays the model name of the network camera.

**Serial:** Displays the serial number of the network camera.

**Progress:** Displays the progress of audio file transmission.

**Status:** Displays the current status of the camera.

**Ready:** The camera is ready for connection.

**Inquiry:** The camera information is being asked for.

**No func:** The camera does not support the Voice alert function.

**Uploading:** The audio file is being uploaded.

**Fault:** The audio file uploading is unsuccessful.




**No Privilege:** The camera is not authorized to upload audio files.

**Succeeded:** The audio file uploading is successful.




## Uploading the recorded audio file to the camera

### Tip



Before operating, create an audio file and set the camera for audio uploading. Set the camera using the Setting tab.

- 1 Click  (recording) in the Voice alert tab to start recording.
- 2 Click  (stop) to stop recording. Recording will stop automatically in 30 seconds.
- 3 Select the voice alert number.
- 4 Click  (upload) to transmit the audio file to the camera.

### Saving the recorded audio file to the computer

- 1 Click  (recording) in the Voice alert tab to start recording.
- 2 Click  (stop) to stop recording. Recording will stop automatically in 30 seconds.
- 3 Click  (save). The **Save as** dialog appears. Type the file name and save it.

### Uploading the saved audio file to the camera

- 1 Click  (file open) in the Voice alert tab and select the audio file to be uploaded.
- 2 Select the voice alert number.
- 3 Click  (upload) to transmit the audio file to the camera.

---

## Using the SNC video player — Playing Video/Audio File Recorded with Camera

The supplied SNC video player allows you to play video/audio data recorded with the camera on your computer.

This section explains the setup and operations of the SNC video player.

---

### Installing the SNC video player

- 1 Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser. If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista, pop-up “AutoPlay” may appear. For details, “Installing software” in “When using Windows Vista” on page 12.

- 2 Click the **Setup** icon of **SNC video player**. The “File Download” dialog opens.

When you are using Windows XP Service Pack 2 or later, or Windows Vista, a message regarding the active contents may appear. For details, see “Installing software” in “When using Windows XP Service Pack 2 or later” on page 10 or “Installing software” in “When using Windows Vista” on page 12.

- 3 Click **Open**.

#### Note

If you click “Save this program to disk” on the “File Download” dialog, you cannot install the player correctly.

Delete the downloaded file, and click the **Setup** icon again.


- 4 Install the SNC video player following the wizard displayed. If the Software License Agreement is displayed, read it carefully and accept the agreement to continue installation.


# Using the SNC video player

1 Start the SNC video player.



2 Click the  (browse) icon. The Select File dialog opens.

3 Select the file you want to play. Click  on the top of the screen, and file information dialog appears.

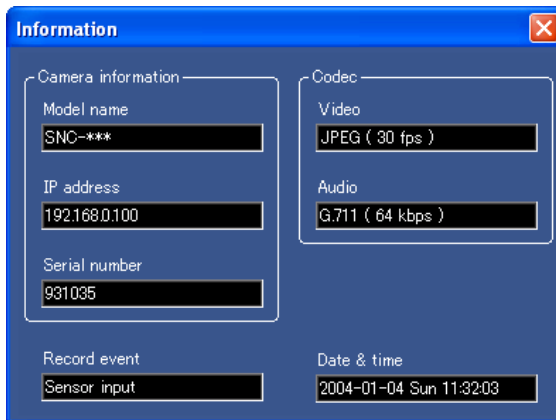

## File dialog

**Model name:** Model name of the camera with which the file is recorded.

**IP address:** IP address of the camera with which the file is recorded.

**Serial number:** Serial number of the camera with which the file is recorded.


**Video:** Video Codec

**Audio:** Audio Codec

**Record event:** Type of event used for the recording: **Sensor input** or **Motion detection**.


**Date&time:** Recording date and time


## Playing a video/audio file

Click  (start) to start playing from the beginning of the selected file.

To freeze the movie temporarily, click  (pause).

Click  again to restart playing from the frozen point.

To stop playing, click  (stop).


To restart playing from the beginning, click  (start) again.


Play stops when the file is played to the end.

## Playing from a specified point

Move the slide bar below the image display, and playback will start from the position of the slide bar.


## Adjusting the sound

Adjust the playing sound volume by moving the  slide bar. Move it to the left end for the minimum volume, and to the right end for the maximum volume.


 
 
 
Click  (speaker) to enable/disable the sound muting.


When sound muting is on, no sound is heard even if you move the slide bar.

## Saving an image

 Click  (capture) icon during playing or pause and the captured image is displayed in a pop-up dialog. To save the image, click **Save** on the dialog. You can specify the destination to which the image is to be stored and select the JPEG or Bitmap format.

## Changing the view size

Click , , ,  to change the view size. The monitor is displayed by the view size as you selected.

When you click , the original size of image is displayed.

 **2** is available only for 640 × 480 (VGA) size or less.

The selected view size button flips.

# Using the SNC panorama creator

## — Creating a Panorama Image

The supplied SNC panorama creator allows you to create a panorama image to be displayed on the main viewer.

Using the panorama image, you can move the camera to the desired position simply by clicking on the image. This section explains the setup and operations of the SNC panorama creator.

### Note

The SNC panorama creator does not support SSL connection. When the SSL function (page 51) is set to **On** and **HTTP connection for some clients** is not selected, the SNC panorama creator can not be used. To use the SNC panorama creator, set the SSL function to **On** and select the **HTTP connection for some clients**, or set the SSL function to **Off**. (The model on sale in China does not support the SSL function.)

## Installing the SNC panorama creator

- 1 Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser. If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista, pop-up “AutoPlay” may appear. For details, “Installing software” in “When using Windows Vista” on page 12.

- 2 Click the **Setup** icon of **SNC panorama creator**. The “File Download” dialog opens.

When you are using Windows XP Service Pack 2 or later, or Windows Vista, a message regarding the active contents may appear. For details, see “Installing software” in “When using Windows XP Service Pack 2 or later” on page 10 or “Installing software” in “When using Windows Vista” on page 12.

- 3 Click **Open**.

### Note

If you click “Save this program to disk” on the “File Download” dialog, you cannot install the creator correctly. Delete the downloaded file, and click the **Setup** icon again.

- 4 Install the SNC panorama creator following the wizard displayed. If the Software License Agreement is displayed, read it carefully and accept the agreement to continue installation.

## Using the SNC panorama creator

The SNC panorama creator consists of the Main tab to create a panorama image and the Setting tab to prepare for connection to the camera.


When you start the SNC panorama creator, the Setting tab is displayed.

### Note

Before creating a panorama image, check the setting position and the E. flip setting of the Common tab in the Camera menu with the viewer.

## Setting tab

Before creating a panorama image, set the following items in the Setting tab to allow connection to the camera.

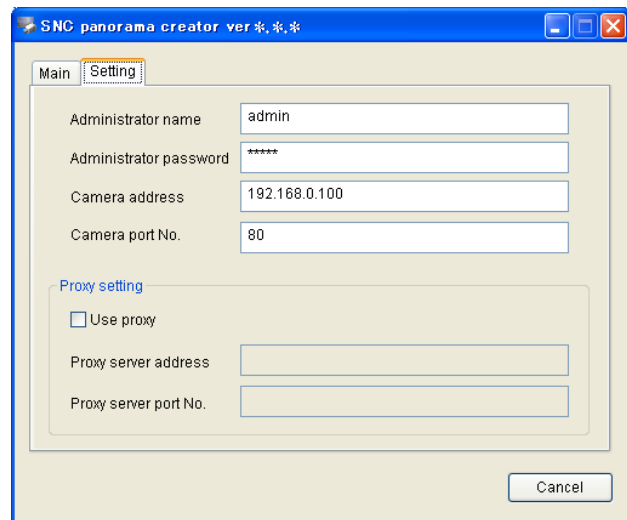

**Administrator name:** Type the ID of the administrator of the camera to be connected.

**Administrator password:** Type the password of the administrator of the camera to be connected.

### Tip

The factory settings of both items are “admin.”

**Camera address:** Type the IP address or host name of the camera to be connected.

**Camera port No.:** Type the port number of the camera to be connected.


When you use a proxy server for camera connection, check the **Use proxy** check box and set the following items.

**Proxy server address:** Type the IP address or host name of the proxy server.

**Proxy server port No.:** Type the port number of the proxy server.

Preparations for connecting to the camera are now completed.

## Main tab

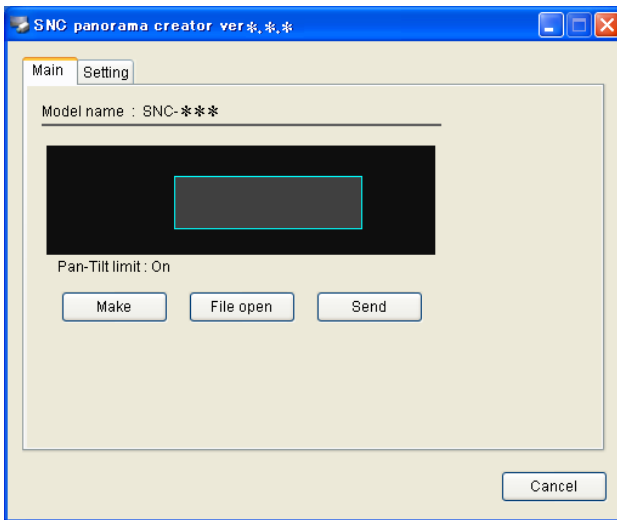

## Viewer

The created panorama image is displayed in the upper viewer.

## Angle setting

Specify the camera movement area on the panorama image.

Drag the mouse to draw a rectangle within which the camera movement is limited. You can enlarge, reduce or move the created rectangle. To erase the rectangle, right-click the mouse.

### Notes

- The home position of the factory setting is set to the center of the viewer. When you set the camera movement area without changing the factory-set home position, the center position of the set camera movement area is set as the camera home position.
- The edges of the panorama image may not be displayed correctly when the camera is zoomed in.

## Make

Starts shooting to create a panorama image (a complete 360-degree panorama image). It takes about two minutes to create a complete panorama image.

### Note

The exposure and white balance settings are fixed while a panorama image is being created. To create a clear panorama image, set **Exposure mode** to **Full auto** and **White balance** to **Auto** in the Camera menu and point the camera to the main subject before starting shooting.

## File open

Allows use of a Bitmap or JPEG image file in spite of a panorama image.

### Note

The size of the image in the file should be 320 × 90 pixels (horizontal/vertical). Other image sizes are not supported.

## Send

Transmits a panorama image converted into a JPEG file to the camera.

---

## Creating and transmitting a panorama image

- 1 Click **Make** on the Main tab to start shooting. A panorama image will be created in about two minutes.

### Note

Do not perform settings of the camera or move the camera during shooting.

- 2 Specify the camera movement area by dragging the mouse to draw a rectangle on the panorama image. The specified camera movement area will be effective when the panorama image is saved in the camera.

- 3 Click **Send** to transmit the panorama image to the camera. The panorama image is saved in the camera.

You can use the saved panorama image when you control panning and tilting from the main viewer.

---

## Saving a custom image to the camera

You can save a custom image to the camera in spite of the panorama image shot by the camera.

Prepare the image to conform to the following requirements:

- File format: JPEG or Bitmap
- Image size: 320 × 90 pixels (horizontal/vertical)

The camera does not support use of images that do not conform to the above conditions.

- 1** Click **File open** on the Main tab.  
The File dialog opens.
- 2** Select the image you have prepared.
- 3** Specify the camera movement area by dragging the mouse to draw a rectangle on the panorama image. The specified camera movement area will be effective when the panorama image is saved in the camera.
- 4** Click **Send** to transmit the prepared image to the camera.  
The image is saved in the camera.

You can use the saved image when you control panning and tilting from the main viewer.

#### Tip

The panorama image is the still image converted from the image taken when you were going to create a panorama image with “SNC panorama creator”. When the camera is moved or when the layout around the camera is changed, create the panorama image again.

---

## Using the SNC privacy masking tool — Masking a Camera Image

The supplied SNC privacy masking tool allows you to mask parts of the camera image to be transmitted.

#### Notes

- Before setting for the privacy masking, check the setting position and the E. flip setting of the Common tab in the Camera menu with the viewer.
- The SNC privacy masking tool does not support SSL connection. When the SSL function (page 51) is set to **On** and **HTTP connection for some clients** is not selected, the SNC privacy masking tool can not be used.  
To use the SNC privacy masking tool, set the SSL function to **On** and select the **HTTP connection for some clients**, or set the SSL function to **Off**. (The model on sale in China does not support the SSL function.)

---

## Installing the SNC privacy masking tool

- 1** Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser.  
If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista, pop-up “AutoPlay” may appear. For details, “Installing software” in “When using Windows Vista” on page 12.

- 2** Click the **Setup** icon of **SNC privacy masking tool**.  
The “File Download” dialog opens.

When you are using Windows XP Service Pack 2 or later, or Windows Vista, a message regarding the active contents may appear. For details, see “Installing software” in “When using Windows XP Service Pack 2 or later” on page 10 or “Installing software” in “When using Windows Vista” on page 12.

- 3** Click Open.

### Note

If you click “Save this program to disk” on the “File Download” dialog, you cannot install the program correctly. Delete the downloaded file, and click the **Setup** icon again.

- 4 Install the SNC privacy masking tool following the wizard displayed.  
If the Software License Agreement is displayed, read it carefully and accept the agreement to continue installation.


## Using the SNC privacy masking tool

The SNC privacy masking tool consists of the Main tab to set the privacy mask positions and the Setting tab to prepare for connection to the camera.

When you start the SNC privacy masking tool, the Setting tab is displayed.

### Setting tab

Before creating a privacy mask, set the following items in the Setting tab to allow connection to the camera.

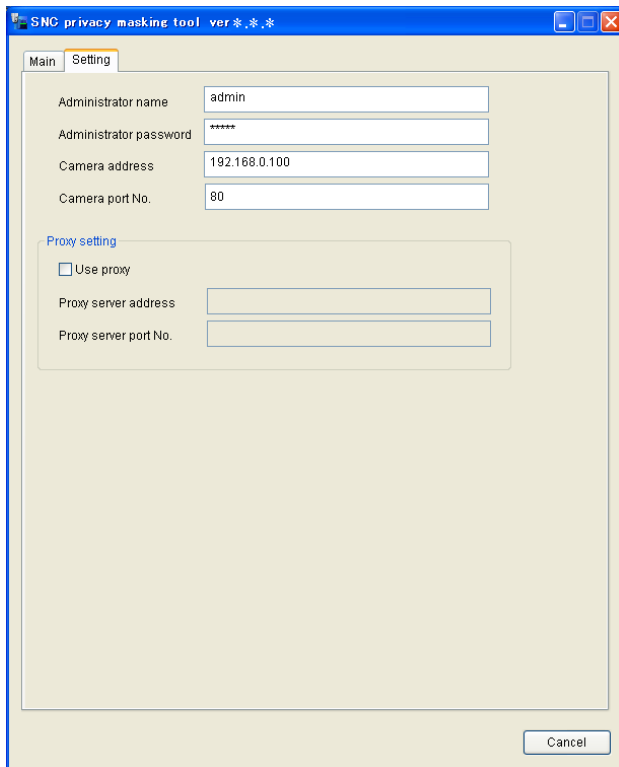

**Administrator name:** Type the ID of the administrator of the camera to be connected.

**Administrator password:** Type the password of the administrator of the camera to be connected.

### Tip

The factory settings of both items are “admin.”

**Camera address:** Type the IP address or host name of the camera to be connected.

**Camera port No.:** Type the port number of the camera to be connected.

When you use a proxy server for camera connection, check the Use proxy check box and set the following items.


**Proxy server address:** Type the IP address or host name of the proxy server.

**Proxy server port No.:** Type the port number of the proxy server.

Preparations for connecting to the camera are now completed.

### Main tab

Set the privacy mask.

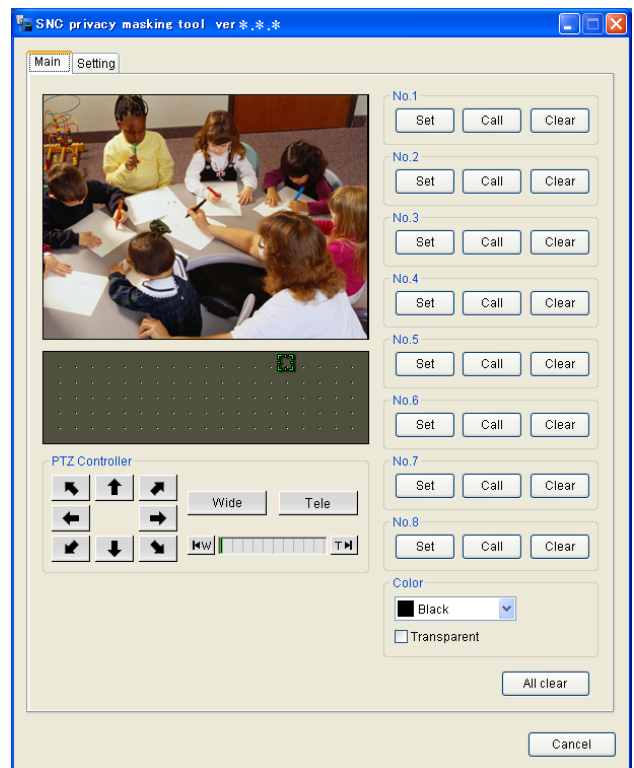

### Note

If the video codec of the camera is set to **H.264**, the Main tab window is not displayed even if you click on the **Main** tab.

In this case, select **JPEG** or **MPEG4** in **Mode** of the Camera menu (page 42) and operate again.



## Viewer

A live image of the camera is displayed. You can specify the position of the privacy mask in this area. If you click on the image, the camera moves so that the clicked point goes to the center of the image.

### Panorama image area

The panorama image created with the supplied SNC panorama creator is displayed. The positions of the registered privacy masks are shown with numbers in this area. If you click on the panorama image, the camera moves to the clicked point.

#### Note

The default image is shown when no panorama image has been created.



### PTZ Controller (control panel)

Allows you to pan, tilt and zoom the camera.


#### Pan/tilt control


Click the arrow button of the direction in which you want to move the camera. Keep it pressed to move the camera continuously.

#### Zoom control

Click  to zoom out, and click  to zoom in. Zooming continues while the button remains pressed.

The current zoom status is shown on the zoom bar. The left end is the WIDE end, and the right end is the TELE end.

Click  to move the zoom to the WIDE end.

Click  to move the zoom to the TELE end.

### Privacy mask setting section (No.1 to No.8)

Allows you to set, call or delete the privacy mask. You can set up to eight privacy masks and the mask color.

**Set:** Register the area specified on the viewer as a privacy mask area.

Click **Set** and the portion of the viewer image is masked with the privacy mask. The color of the privacy mask is that selected with the **Color** drop-down list.

#### Notes

- When using the privacy mask function, set **Stabilizer** to **Off**. (page 39)
- If the mask area is close to the bottom end of the image, the background at the bottom may be seen.

**Call:** Click to face the camera to the privacy mask position.

#### Tip

The privacy mask positions are shown with numbers in the panorama image area.

**Clear:** Click to delete the privacy mask.

#### Color

Specify the color of privacy masks. The color is common to every privacy mask.

If you select **Transparent**, a background is seen through.

The selectable colors are as follows:

**Black, White, Gray, Red, Green, Blue, Cyan, Yellow, Magenta**

**All clear:** Click to delete all the privacy masks simultaneously.

---

## Setting a privacy mask

To set a privacy mask in a favorite position, operate as follows:

- 1 Move the camera to the position you want to set a privacy mask using the control panel in the Main tab.
- 2 Click the point where you want to set the privacy mask on the viewer. The clicked point goes to the center of the image.
- 3 Specify the privacy mask area by dragging the mouse on the viewer. The privacy mask area is a rectangle that is symmetrical with respect to the center of the viewer.
- 4 Select the color of the mask from the **Color** drop-down list.

#### Note

The color is common to every privacy mask. The color last selected is applied.

- 5 Select the desired privacy mask number in the privacy mask setting section and click **Set** of the corresponding number. The mask is displayed on the viewer.


#### Note

The mask cannot be set on the viewer by clicking **Set**, if the camera is tilted beyond +70°.


## Privacy mask setting range

The setting range of the privacy mask is limited as follows:

**Pan angle:** No limit

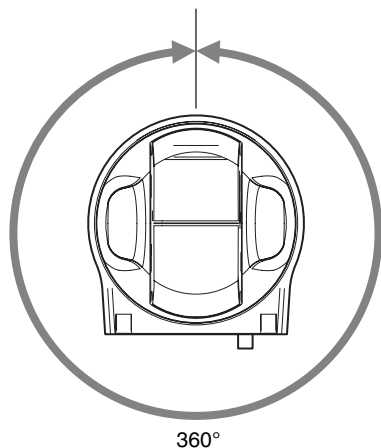

**Tilt angle:** 0° to +70°

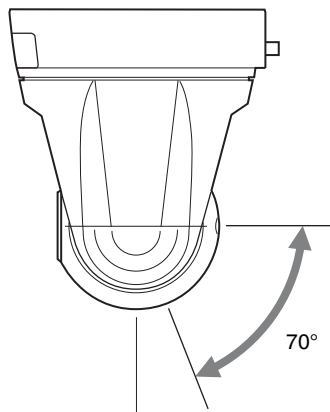

### Note

The privacy mask area is a rectangle that is specified with respect to the center of the camera image. The privacy mask may not be set in areas close to the end of pan/tilt operation.

## Using the Custom Homepage Installer

The supplied Custom Homepage Installer allows you to store the homepage that you have created in the camera and watch it.

### Note

The Custom Homepage Installer does not support SSL connection. When the SSL function (page 51) is set to **On** and **HTTP connection for some clients** is not selected, the Custom Homepage Installer can not be used.

To use the Custom Homepage Installer, set the SSL function to **On** and select the **HTTP connection for some clients**, or set the SSL function to **Off**. (The model on sale in China does not support the SSL function.)

### Notes on creating the homepage

When you are creating the homepage, note the following points.

- The file name should be typed using up to 24 characters including the extension.
- The file size of the homepage should be 2.0 MB or less.
- To see the created homepage, set the **Homepage** in the System menu.

## Uploading the homepage to the camera using the Custom Homepage Installer

- 1** Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser. If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista, pop-up "AutoPlay" may appear. For details, "Installing software" in "When using Windows Vista" on page 12.

- 2** Click the **Start** icon of **Custom Homepage Installer**. The "File Download" dialog opens.


When you are using Windows XP Service Pack 2 or later, or Windows Vista, a message regarding the active contents may appear. For details, see "Installing software" in "When using Windows XP Service Pack 2 or later" on page 10 or "Installing

software” in “When using Windows Vista” on page 12.

### 3 Click **Open**.

The installer starts and notes are displayed.

When you are using Windows Vista, message “User Account Control – An unidentified program wants access to your computer” may appear. In this case, click **Allow**.

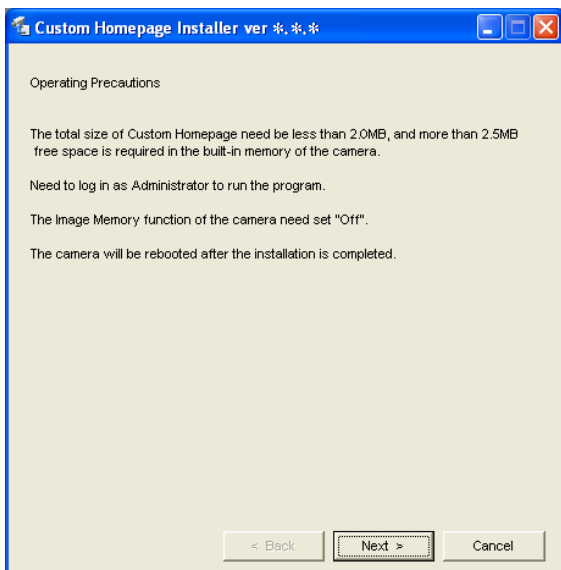


#### Note


If you click “Save this program to disk” on the “File Download” dialog, the CustomHomepageInstaller.exe file will be saved on the computer. Double-click the saved file to start it.

### 4 Read the notes carefully, and click **Next**.

The Software License Agreement is displayed.

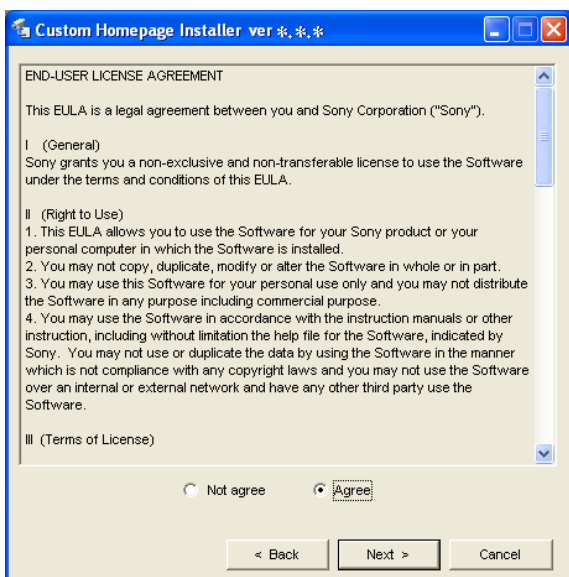

### 5 Read the agreement carefully, select **Agree** if you accept it, then click **Next**.

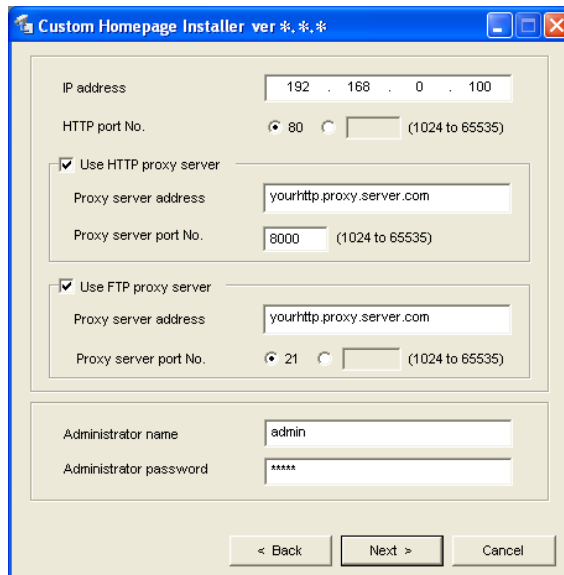

### 6 Type the IP address of the camera to be uploaded in the IP address box.

### 7 Specify the HTTP port No. of the camera. Initial HTTP port No. is set to 80.

### 8 When you use a proxy server, set the following: For the proxy server of your environments, consult your network administrator.

#### When using an HTTP proxy server:

Select **Use HTTP proxy server**, and type your settings in the Proxy server address and Proxy server port No. boxes.

#### When using an FTP proxy server:


Select **Use FTP proxy server**, and type your settings in the Proxy server address and Proxy server port No. boxes.


#### Note


If you cannot establish communications with the camera using the proxy server being used, connect the camera to the local network and run the installer without using the proxy server.

### 9 Type the Administrator name and Administrator password of the camera to be uploaded. The factory settings of both items are “admin.”

**10** Confirm that all items are correct, then click **Next**.

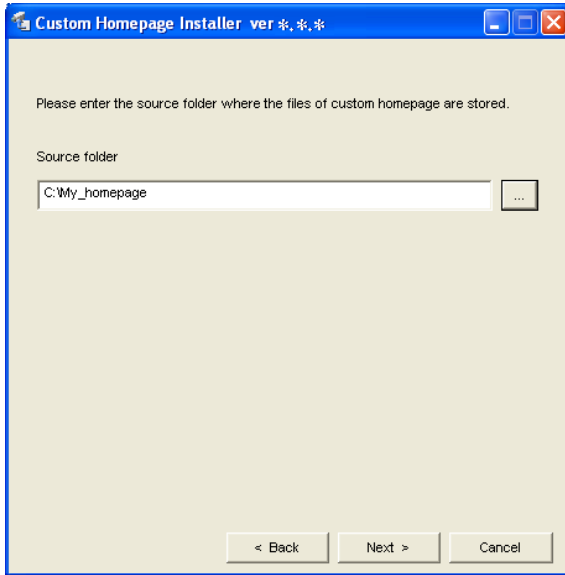


**11** Type the path for the folder in which your homepage is stored in the Source folder box, or click  to select the folder, and then click **Next**.

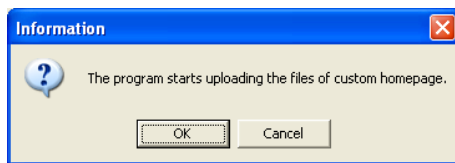


**12** Click **OK**.  
Uploading of the homepage file starts.

**Note**

Do not turn off the camera until the camera is rebooted after uploading the homepage file.

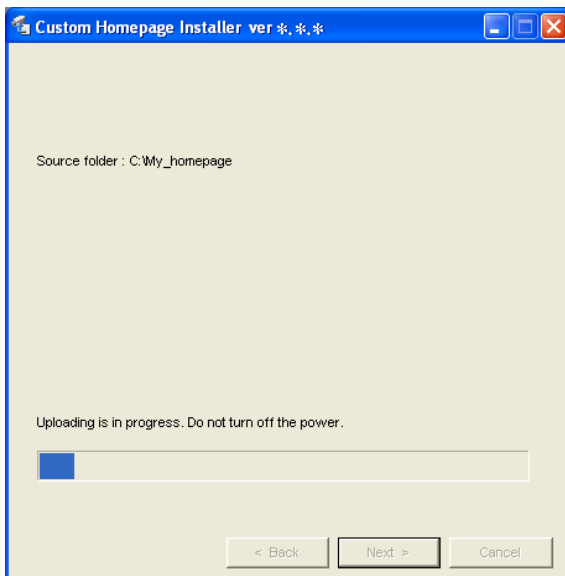

The following page will appear after a while.

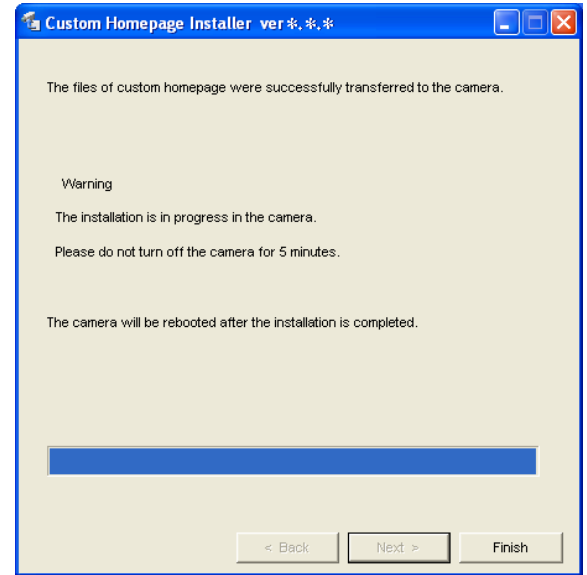

After displaying this page, the camera will be adjusted and rebooted automatically in five minutes.

**13** Click **Finish** to exit the program.

If not, set the same network address on the computer and the camera.

# Assigning the IP Address to the Camera Using ARP Commands

This section explains how to assign an IP address to the camera using ARP (Address Resolution Protocol) commands without using the supplied IP Setup Program.

## Note

When you turn on the camera, execute the ARP and PING commands within 5 minutes. Also when you restart the camera, execute the operation within 5 minutes.

- 1 Open the command prompt on the computer.
- 2 Enter the IP address and the MAC address of the camera to assign a new IP address, using the following ARP commands.

```
arp -s <Camera's IP address> <Camera's MAC address>  
ping -t <Camera's IP address>
```

Example:

```
arp -s 192.168.0.100 08-00-46-21-00-00  
ping -t 192.168.0.100
```

- 3 When the following line is displayed on the command prompt, hold down **Ctrl** and press **C**. The display stops.

```
Reply from 192.168.0.100:bytes=32 time...
```

You will normally receive a reply after about 5 repetitions of "Request time out."

- 4 Wait until the execution of PING finishes, then input the following code.

```
arp -d 192.168.0.100
```

## Note

If you do not receive a reply, check the following:

- Did you enter the ARP commands within 5 minutes after it was turned on?  
If not, turn off the camera and restart the operation.
- Is the NETWORK indicator on the camera flashing?  
If the indicator goes off, the network connection has a problem. Connect the network correctly.
- Did you enter the IP address previously used for another device?  
Assign a new IP address to the camera.
- Do the computer and the camera have the same network address?

# Using the SNMP

This unit supports SNMP (Simple Network Management Protocol). You can read MIB-2 objects using software such as SNMP manager software. This unit also supports the coldStart trap which occurs when the power is turned on or the unit restarts, and the Authentication failure trap which informs of an illegal access using SNMP.

Using CGI commands, you can set community name and access limitation, host to send traps, and some MIB-2 objects. To allow these settings, you need authentication by the camera administrator.

## 1. Inquiry Commands

You can check the SNMP Agent settings using the following CGI commands.

```
<Method>
  GET, POST
<Command>

  http://ip_adr/snmpdconf/inquiry.cgi?inqjs=snmp
  (JavaScript parameter format)

  http://ip_adr/snmpdconf/inquiry.cgi?inq=snmp
  (standard format)
```

With the above inquiry, you can obtain the following setting information. The following explains the setting information using the inqjs=snmp (JavaScript parameter) format.

```
var sysDescr="SNC-RZ50"           ...①
var sysObjectID="1.3.6.1.4.1.122.8501" ...②
var sysLocation=""               ...③
var sysContact=""               ...④
var sysName=""                   ...⑤
var snmpEnableAuthenTraps="1"    ...⑥
var community="public,0.0.0.0,read,1" ...⑦
var community="private,192.168.0.101,read,2" ...⑧
var trap="public,192.168.0.101.1" ...⑨
```

- ① describes the case of “mib-2.system.sysDescr.0”. You cannot change this parameter.
- ② describes the case of “mib-2.system.sysObjectID.0”. You cannot change this parameter.
- ③ describes the case of “mib-2.system.sysLocation.0”. This field is used to describe information on the location of this camera. Nothing is set at the factory.

- ④ describes the case of “mib-2.system.sysContact.0”. This field is used to describe the information on administrator of this camera. Nothing is set at the factory.
- ⑤ describes the case of “mib-2.system.sysName.0”. This field is used to describe administration node of this camera. Nothing is set at the factory.
- ⑥ describes the case of “mib-2.snmpEnableAuthenTraps.0”. This example shows when “1” (enable) is set. With this setting, a trap occurs when there is an Authentication failure. When “2” (disable) is set, no Authentication failure trap occurs.
- ⑦ describes the community attributes. This example shows the identification number “ID=1”, the community name public, and enables read from any IP address (0.0.0.0).
- ⑧ describes the community attributes, similarly to ⑦. This example shows the identification number ID=2, the community name “private”, and enables “read” by the SNMP request packet from the host “192.168.0.101”.
- ⑨ describes the attributes to send a trap. This example shows the identification number “ID=1”, the community name “public”, and enables sending of traps to the host having the IP address “192.168.0.101”.

## 2. Setting Commands

The unit supports the following setting commands of SNMP.

```
<Method>
  GET, POST
<Command>

  http://ip_adr/snmpdconf/snmpdconf.cgi?
  <parameter>=<value>&<parameter>=...&...
```

First, perform the settings of the following parameters.

- 1) sysLocation=<string>  
Set the case of “mib-2.system.sysLocation.0” in the <string> position. The maximum length of <string> is 255 characters.
- 2) sysContact=<string>  
Set the case of “mib-2.system.sysContact.0” in the <string> position. The maximum length of <string> is 255 characters.

- 3) `sysName=<string>`  
Set the case of “mib-2.system.sysName.0” in the <string> position. The maximum length of <string> is 255 characters.
- 4) `enaAuthTraps=<value>`  
Set the case value of “mib-2.snmp.snmp EnableAuthenTraps.0” in the <string> position. Type “1” (enable) or “2” (disable) in the <value> position.
- 5) `community=<ID>,r,<communityName>,<IpAddressString>`  
Set the community attributes. <ID> describes the setting identification number (1 to 8)  
<communityName> describes the community name to be set, and <IpAddressString> describes the IP address of the host you allow access (0.0.0.0 for any host).

**Example:** To allow reading by any host in the “private” community and having the ID number “2”.  
`community=2,r,private,0.0.0.0`

- 6) `trap=<ID>,<communityName>,<IpAddressString>`  
Set the attributes send traps to. <ID> describes the setting identification number (1 to 8), <communityName> describes the community name to send traps to, and <IpAddressString> describes the IP address of the host to send traps to.

**Example:** To specify the destination of traps as the public community and the ID number “1”.  
`trap=1,public,192.168.0.101`

- 7) `delcommunity=<ID>`  
This parameter is used to delete the previous community setting. <ID> describes the community setting identification number (1 to 8).
- 8) `deltrap=<ID>`  
This parameter is used to delete the previous setting of the host to send traps to. <ID> describes the trap setting identification number (1 to 8).

When you have finished changing the SNMP setting information using the above parameters 1) to 8), check the changed settings using an inquiry commands. If the changed settings are OK, restart the SNMP using the following CGI command.

### SNMP restart command

<Method>

GET, POST


<Command>

`http://ip_adr/snmpdconf/snmpdconf.cgi?snmpd=restart`


## When You Discard the Camera

For environmental reasons, take out the lithium battery from the camera and discard it appropriately.

- 1 Remove the four screws illustrated below and detach the bottom panel.

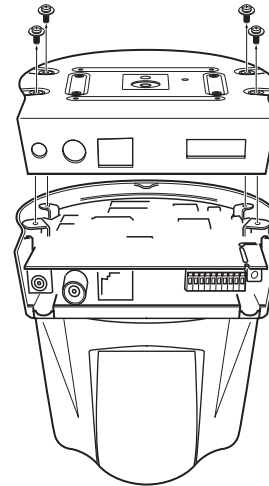

- 2 Hold the board on which the lithium battery is attached using long-nose pliers. Then, bend it in the direction of the arrow illustrated below to detach the battery.

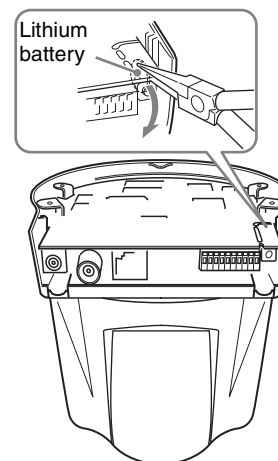

### WARNING (for service personnel only)

There is danger of explosion if batteries are mishandled. Dispose of batteries properly in accordance with the manufacturer’s instructions and all applicable local regulations.

Others

---

# Glossary

## ActiveX control

A component program object that can be used with web pages or other application programs. The technology for creating ActiveX control is part of software developed by Microsoft.

## AES

Abbreviation for Advanced Encryption Standard. This is the next-generation of encryption standard adopted by the U.S. government.

## ARP commands

The commands for checking the entry of the IP address and MAC address in a host computer, or for updating them.

## Bandwidth control

To limit the amount of transmitted data.

## Bit rate

The rate at which data bits are transmitted.

## CA (Certificate Authority)

A private authority that issues and controls digital certificates to be used for authentication regarding network access.

## Capture

To display the audio and video digital data from the video equipment on a computer.

## Codec

Software/hardware for coding/decoding video and audio data.

## Common name

A URL to be typed in the browser when you access a website employing SSL (Secure Sockets Layer) protocol with the security function. Access is successful after the URL of the website is verified as matching the server's common name.

## Contrast

The difference in tone between the lightest and darkest portions of the image.

## Default gateway

Device that can be used to access the other network.

## DHCP server

Abbreviation for Dynamic Host Configuration Protocol server. The IP address of a terminal without an individual IP address can be automatically distributed by the Dynamic Host Configuration Protocol (DHCP). The DHCP server assigns the IP addresses to the terminals.

## Digital certificate

An electronic certificate that a CA (Certificate Authority) attests that a public key to cancel a secret code is issued by an authentic publisher.

## Digital zoom

Zooming in/out function of an image without using an optical zooming function.

## DNS server

Abbreviation for Domain Name System server. As an IP address required for connecting to the device on an IP network is numerical and difficult to remember, the Domain Name System was established. A domain name is alphabetic and is easier to remember. When a client computer uses a domain name to connect to another computer, it asks a DNS server to translate the name into the corresponding IP address. Then the client computer can obtain the IP address of the computer to be connected.

## EAP method

Abbreviation for Extensible Authentication Protocol. This is a protocol extended from PPP (Point-to-Point Protocol) and having an authentication function.

## EAP-TLS authentication

TLS is an authentication protocol of the EAP methods using Transport Layer Security. By using digital certificates and other methods, EAP-TLS prevents data falsification, eavesdropping and spoofing.

## Frame rate

The number of frames of a moving image that can be transmitted per a second.

## FTP client

Software to be used for accessing the FTP server.

## FTP server

A server to be used to transfer files via a network.

## HTTP port

A port used to communicate between the web server and the web client such as a web browser.



## **H.264**

One of the image compression formats. The standard written by the JVT (Joint Video Team), joint organization for standardization composed of ISO and ITU-T. H.264 is capable of transmitting video data at a higher compression rate than that of MPEG4.

## **IP address**

Abbreviation for Internet Protocol Address. An individual IP address is basically assigned to each piece of equipment connected to the Internet.

## **Java applet**

A program written in Java language that can be used in the Web browser.

## **Java Virtual Machine**

Software that transfers the Java applet's byte code to the native code of your system to execute it.

## **JPEG**

Abbreviation for Joint Photographic Expert Group. The still image compression technology or standards of the ISO (International Organization for Standardization) and ITU-T. Popularly used as image compression format on the Internet, etc.

## **MAC address**

A network address that uniquely identifies each LAN card.

## **MPEG4**

Abbreviation for Moving Picture Experts Group4. One of the MPEG standards for image compression format aiming to transmit images at a high compression rate with lower picture quality.

## **Multicast**

The class D IP address assigned between 224.0.0.0 and 239.255.255.255. Using this IP address enables you to transmit the same data to multiple equipment.

## **Network address**

The portion that identifies the local network (subnet) in an IP address.

## **Network bandwidth**

Bit rate that can be used for networking.

## **NTP server**

Network time server that transmits and receives time information over the networks.

## **Passive mode**

The mode whereby a client FTP allows TCP connection for data transmission to the FTP server.

## **POP server**

A server for storing incoming e-mail until you have read it.

## **Primary DNS server**

One of the DNS servers that can first reply to a request by connected devices or other DNS servers.

## **Proxy server**

A server or software that acts as an intermediary between a local network and the Internet so that it can connect to the Internet in place of a computer on a local network.

## **PSK**

Abbreviation for Pre-Shared Key. This is a shared key to make an encryption key, used with TKIP in WPA encryption standard. PSK sometimes means an authentication system using a key previously shared.

## **RADIUS client**

RADIUS (Remote Authentication Dial-in User Service) is an authentication and accounting protocol managing network access, and a RADIUS client is a party that accesses the network.

In Internet connecting service, a Network Access Server (NAS) such as that for dial-up and broadband access server is a RADIUS client. In a wireless LAN system, a wireless LAN access point is a RADIUS client.

## **Saturation**

The degree to which the color is pure.

## **Secondary DNS Server**

Subsidiary DNS server used when a primary DNS server cannot be used.

## **Shared secret**

A character string to be used for mutual authentication between RADIUS server and RADIUS client.

## **Sharpness**

The degree to which the boundary of two portions is clearly distinguished.

## **SMTP server**

A server for sending or relaying e-mail messages between servers.

## **SNMP**

A protocol for monitoring and managing network devices.

## **SSL**

Abbreviation for Secure Sockets Layer. This is a protocol developed by Netscape Communications Corporation to be used for communications of encrypted data on the Internet.

## **Subnet mask**

32-bit stream used to distinguish the subnet address from the IP address.

## **TCP**

Abbreviation for Transmission Control Protocol. A standard protocol used for the Internet connection. Compared with the other protocol, UDP, TCP provides reliable communication but the communication speed is slower.

## **TKIP**

Abbreviation for Temporal Key Integrity Protocol. This is used in WPA encryption standard for wireless LAN. TKIP provides high security because it changes encryption keys based on PSK during an on-going communication.

## **UDP**

Abbreviation for User Datagram Protocol. A standard protocol used for the Internet connection. Compared with the other protocol, TCP, UDP can transmit data faster, but reliable communication is not guaranteed.

## **Unicast**

Transmission of the data to the specified equipment on a network by specifying a single address.

## **WPA**

Abbreviation for Wi-Fi Protected Access. This is an encryption standard for wireless LAN. It provides higher security than the conventional WEP (Wired Equivalent Privacy) standard. In WPA, TKIP is used for encryption method, and PSK and EAP are used for authentication protocol.

## **WPA2**

Abbreviation for Wi-Fi Protected Access 2. WPA2 is a standard with which AES (Advanced Encryption Standard) is added to WPA.

## **802.11g**

A wireless LAN standard that uses the 2.4 GHz band and provides a maximum data transmission rate of 54 Mbps.

## **802.1X**

A standard that performs user authentication and dynamic key generation and traffic on a LAN.

# Index

## Numerics

802.11g ..... 114  
802.1X.....48, 49, 55, 114

## A

abandoned object detection..... 84  
Access log ..... 38  
Active ..... 86, 88  
Active Directory..... 59  
ActiveX control.....11, 13, 16  
ActiveX viewer ..... 21  
ActiveX viewer ..... 20  
Adaptive rate control..... 43  
adaptive rate control..... 43  
Adjust..... 35  
Administrator ..... 18, 62  
administrator ..... 18  
Administrator e-mail address  
.....50, 67, 74  
Administrator menu ..... 20, 31  
AES ..... 112  
Alarm ..... 68, 71, 75, 79  
alarm ..... 68, 71, 75, 79  
Alarm buffer.....33, 71, 75  
alarm buffer.....71, 75, 83  
Alarm buffer Menu ..... 83  
alarm detection.....68, 70, 74  
Alarm duration ..... 78  
Alarm interval ..... 90  
Alarm out ..... 78  
Alarm output .....29, 32, 78, 81  
alarm output ..... 29, 78  
Alarm output Menu..... 78  
Alarm recording ..... 74  
Alarm sending..... 68, 70  
Antenna ..... 48  
ARP commands ..... 109  
ATA memory card.....37, 73, 77  
Audio ..... 62  
audio..... 40  
Audio codec ..... 40  
audio output ..... 79  
Audio port number..... 44, 45  
Audio upload..... 40  
Authentication.....49, 67, 74

authentication.....49, 67, 74  
authentication server ..... 56  
authenticator..... 56  
Automatically adjust clock for  
daylight saving time changes..... 35

## B

Backlight compensation..... 40  
backlight compensation ..... 40  
Backup setting data ..... 37  
bandwidth..... 92  
Bandwidth control..... 43, 92  
Baud rate ..... 91  
baud rate..... 91  
Bit rate..... 43  
bit rate ..... 43  
Brightness ..... 41

## C

CA (Certificate Authority) ..... 56, 112  
CA certificate ..... 58, 60  
Camera ..... 32  
camera ..... 39  
Camera Menu..... 39  
camera position ..... 64  
Cancel button ..... 32  
Capacity warning ..... 73  
Capture ..... 22  
capture ..... 22, 25  
certificate request ..... 57  
CF memory card ..... 73, 77  
CGI commands ..... 110  
Character length ..... 91  
character length..... 91  
Clear ..... 65  
Client certificate..... 57  
client certificate..... 57  
Codec ..... 83  
Color ..... 39  
Common..... 39, 67, 70, 73, 85  
Common name ..... 112  
common name ..... 112  
Configuration ..... 90  
Contrast..... 41  
contrast..... 41  
control authority ..... 34  
Control panel..... 22  
control panel..... 22, 26  
Control ..... 22

Cropping..... 42  
cropping ..... 42  
Current date & time..... 35  
Custom Homepage Installer..... 106  
custom settings..... 41

## D

Date & time..... 35  
date and time ..... 35, 93  
Date and time format..... 35  
Date time ..... 93  
Date\_No. .... 76  
Day/Night..... 41, 81  
day/night..... 29  
Day/Night mode..... 41  
day/night mode..... 41  
daylight saving time ..... 35  
Default gateway..... 46, 47  
default gateway ..... 46, 47  
Default policy..... 63  
delete ..... 38  
Delete custom homepage ..... 38  
Delete panorama image..... 38  
Delete voice alert file ..... 38  
Detection ..... 86  
Detection time ..... 90  
DHCP server ..... 45, 47  
Digital certificate..... 112  
digital certificate..... 112  
Digital zoom..... 22  
digital zoom..... 22, 24  
DNS server ..... 46, 47  
Domain suffix..... 46, 47  
downloading images..... 77  
Dual codec..... 19, 42  
Dynamic IP address notification .... 49

## E

E. flip..... 39  
EAP ..... 49  
EAP method ..... 56, 112  
EAP-TLS authentication ..... 112  
Effective period  
..... 66, 68, 69, 71, 72, 75, 76, 78, 79  
e-Mail ..... 28  
e-mail ..... 49, 67  
e-Mail (SMTP)..... 32, 67, 80  
e-Mail (SMTP) Menu..... 67  
e-Mail (SMTP) notification..... 49



Others

e-mail address.....	50
End time .....	82
Exclusive control mode.....	34
Exposure compensation .....	40
exposure compensation .....	40
Exposure mode.....	40
exposure mode.....	40
extension.....	76
<b>F</b>	
Factory default.....	37
factory settings .....	37
File.....	79, 81
File attachment .....	68
file name.....	68, 69, 70, 71, 74, 75
focus .....	23, 26
Focus mode .....	39
focus mode .....	39
Folder structure of image memory .....	76
format .....	37
Format ATA memory card.....	37
Format CF memory card .....	37
format of date and time .....	35
Frame rate.....	22, 24, 43
frame rate .....	22, 24, 43
FTP .....	28, 62
FTP client .....	32, 80
FTP client function.....	70
FTP client Menu.....	70
FTP server .....	32, 70
FTP server function.....	77
FTP server Menu .....	77
FTP server name.....	70
<b>G</b>	
Gain .....	41
gain.....	41
<b>H</b>	
H.264 .....	19, 113
H.264 setting .....	42
Home .....	22
home position .....	64
Home position setting .....	64
Homepage .....	34
homepage .....	34
Host name.....	46, 47
HTTP method.....	50
HTTP notification.....	50
HTTP port number .....	46
HTTP requests.....	50
HTTP server .....	50
<b>I</b>	
image file .....	28
Image file name .....	68, 70, 71, 74, 75
Image memory.....	29, 32, 73, 80
image memory.....	32
Image memory Menu .....	73
Image mode .....	39
image mode .....	39
Image quality .....	43
image quality .....	43
Image size.....	42
image size.....	42
Inactive .....	86, 88
information bar.....	11
Information Bar message .....	11
Initialize.....	37
Internet Authentication Service.....	59
Internet Explorer .....	15
Interval.....	35, 69, 72, 76
IP address .....	8, 45, 47
IP Setup Program .....	8, 92
Iris.....	41
iris.....	41
<b>J</b>	
Java .....	21
Java applet viewer .....	20, 22
JPEG.....	19
<b>L</b>	
logging in.....	19
<b>M</b>	
MAC address .....	45, 47
main viewer .....	15, 20, 21
mask .....	103
Maximum wait number .....	34
memory.....	73, 77
Message.....	50, 67
Method .....	50
Mic volume.....	39
Microphone .....	39
microphone.....	39
Mode.....	42, 72, 76, 78, 83, 91
monitor image.....	23
monitoring .....	24
Moving object.....	86
moving object detection .....	86, 87
MPEG4.....	19
MPEG4 setting .....	42
Multicast address .....	45
multicast address .....	45
Multicast streaming .....	44
multicast streaming.....	44
<b>N</b>	
Name .....	65
Network .....	32, 45
network.....	45
Network address/Subnet.....	63
network bandwidth .....	43
network connection type .....	47
Network Menu.....	45
No. ....	65
NTP server.....	35
NTP server name .....	35
<b>O</b>	
Object detection.....	33, 65, 78
object detection.....	84
Object detection Menu .....	84
Object size .....	87, 88
OK button .....	31
operation mode.....	42
Operation time.....	34
Overwrite.....	73
overwrite.....	73
<b>P</b>	
Pan/Tilt .....	34
pan/tilt.....	23, 26
pan/tilt control mode .....	34
panorama image .....	27
parity.....	91
Parity bit .....	91
passive mode .....	70
Passive mode .....	70
Passphrase .....	49
passphrase.....	49
Password.....	50, 62, 67, 70, 74
password.....	50, 62, 67, 70, 74
PC clock .....	35
periodical e-mail sending .....	69

periodical recording .....	75
Periodical recording .....	75
Periodical sending .....	69, 71
periodical sending .....	71
Picture .....	40
Play .....	79
playing audio .....	29
POP server .....	50, 67, 74
POP server name .....	50, 67, 74
port number .....	50
Position .....	64, 86
Position at alarm .....	65
Post-alarm period .....	83
Pre-alarm period .....	83
Preset .....	65
Preset call .....	65
Preset position .....	22, 32
preset position .....	22, 27
Preset position Menu .....	64
preset position name .....	65
Preset position table .....	65
Primary DNS server .....	46, 47
privacy mask .....	103
Private key password .....	57
Proxy port number .....	50
proxy server .....	50
Proxy server name .....	50
PSK .....	49, 113
PTZ mode .....	34
PTZ position .....	86

## R

RADIUS client .....	113
Reboot .....	37, 93
reboot .....	37, 93
Recipient e-mail address .....	50, 67
recipient e-mail address .....	50, 67
Recording capacity .....	83
recording capacity of the alarm buffer .....	83
recording images .....	28, 73
Recording time .....	83
Release time .....	90
Remote path .....	70, 71
remote path .....	71
removed object detection .....	84
Repeat .....	79
Reset .....	64
reset .....	40

Reset camera menu .....	40
Restart .....	88
Restore setting .....	37
Resume time on inactivity .....	66
Re-type password .....	62, 70

## S

Saturation .....	41
saturation .....	41
saves the setting data .....	37
Schedule .....	33
schedule .....	33, 82
Schedule Menu .....	82
Secondary DNS server .....	46, 47
Security .....	32, 48
security .....	48, 63
Security function .....	63
Security Menu .....	63
Security Warning .....	11, 13, 85
Selected root directory .....	73, 77
sending images .....	28
Sensor input 1 .....	65, 78
Sensor input 2 .....	65, 78
Sensor input mode .....	34
Sequence .....	66
Sequence number clear .....	68, 69, 71, 72, 75
Serial .....	33
serial interface .....	91
Serial Menu .....	91
Serial number .....	33
serial number .....	33
serial terminal .....	91
Set .....	64, 65
Setting .....	22
Shared secret .....	113
Sharpness .....	41
sharpness .....	41
Shutter speed .....	41
shutter speed .....	41
Single codec .....	19, 42
Slow shutter .....	41
slow shutter .....	41
SMTP server .....	49, 67, 74
SMTP server name .....	49, 67, 74
SNC audio upload tool .....	94
SNC panorama creator .....	101
SNC privacy masking tool .....	104
SNC video player .....	99

SNMP .....	110
Software version .....	33
software version .....	33
special tags .....	50
Speed .....	66
SSID .....	48
SSL .....	114
Stabilizer .....	39
stabilizer .....	39
Start time .....	82
Status lamp .....	88
Stay time .....	66
Stop bits .....	91
Streaming .....	44
Subject .....	50, 67
Subnet mask .....	46, 47
subnet mask .....	46, 47
Suffix .....	68, 69, 71, 72, 74, 75
suffix .....	68, 69, 71, 72, 74, 75
Superimpose .....	36
superimpose .....	36
supplicant .....	55
System .....	32, 33
system .....	33
System log .....	38
System Menu .....	33

## T

TCP .....	30, 91
TCP/UDP .....	23, 30
TCP/UDP Transmission .....	30
Test .....	79
threshold .....	87
Threshold slider bar .....	87
time difference .....	35
Time setting .....	90
Time zone .....	35
time zone .....	35
Timer .....	81
title bar .....	33
Title bar name .....	33
TKIP .....	114
TLS mode .....	57
Toggle .....	81
Tour .....	66
tour .....	66
transmission port number .....	44
Trigger .....	32
trigger .....	23

Trigger Menu.....	80
Type.....	47

## U

UDP.....	44
UDP (Multicast).....	30
UDP (Unicast).....	30
Unattended object.....	86
unattended object detection .....	84, 88, 89, 90
Unattended object setting.....	90
Unicast.....	44
Unicast streaming.....	44
URL.....	50
Use the same time schedule every day.....	82
User.....	18, 32, 62
user.....	18, 60, 62
User Menu.....	62
User name.....	50, 62, 67, 70, 74
user name.....	50, 62, 67, 70, 74
User preset.....	41

## V

Video codec.....	42
video codec.....	42, 83
Video port number.....	44, 45
View size.....	22, 24
view size.....	22, 24
Viewer authentication.....	63
Viewer mode.....	18, 63
viewer mode.....	63
VISCA.....	91
Voice alert.....	29, 32, 79, 81
Voice alert Menu.....	79
voice alert number select.....	98
volume.....	23, 39

## W

warning mail.....	73
welcome page.....	15, 19, 33
Welcome text.....	33
WEP.....	48
WEP key.....	48
White balance.....	40
white balance.....	40
Window.....	86, 88
Windows Firewall.....	11
Windows Vista.....	12
Windows XP Service Pack 2.....	10
Wireless.....	46
wireless cards.....	46
WPA.....	49, 114
WPA2.....	49, 114

## Z

Zoom.....	34
zoom.....	23, 26
zoom bar.....	27
Zoom mode.....	39
zoom mode.....	39