

PCS-1 Instruction for Automatic Upgrade

This document provides the instructions for the automatic software upgrade of the PCS-1. You can upgrade the machine by installing an upgrading program. This software upgrade program is imbedded into the self-executable file. The software file is named "PCS-VerXX.exe". Since this is a self-extracting executable file, you just need to double-click to install the program.

Please note:

To successfully complete the upgrade, your PC must have Windows 95, 98, ME, 2000 or NT.

If the PC and PCS-1 are connected to the LAN, proceed to step two.


Step 1- Connecting directly to a PC not on a LAN

Please follow directions to set up the network configuration on both the PC and PCS-1:

- Right-click on Network Neighborhood icon. on your Windows Desktop,
- Select "Properties"
- Under "Configurations" Select TCP/IP and the appropriate Network card adapter.
- Select "properties".
- Select "specify an IP address"
- Enter an IP address and subnet mask. Ex:
- IP address: 100.100.100.1
- Subnet Mask: 255.255.255.0
- Enter the corresponding information on the PCS as per Operation Manual, Page 101.

Before the installation, please check if your PC and PCS-1 are connected with an Ethernet cross cable, or to a HUB with straight Ethernet cables as shown on diagrams below.

Straight data cable connection.

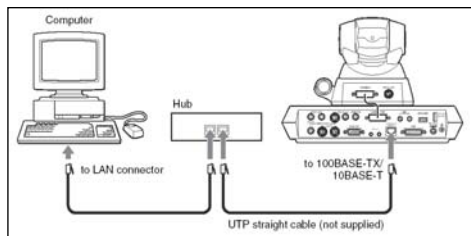


PC

Example IP address: 192.168.1.1

Subnet Mask: 255.255.255.0

Cross data cable connection

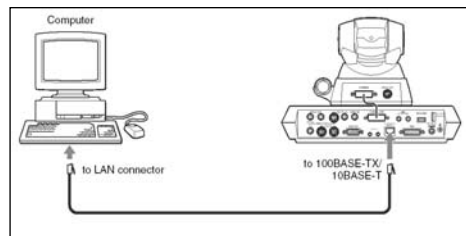

or


PCS-1

Example IP address: 192.168.1.2


Subnet Mask: 255.255.255.0

Step 2- Download file to your PC


Determine the directory where you are installing the program (or you can leave it to the default directory). Then, press "OK". The file starts self-extracting.

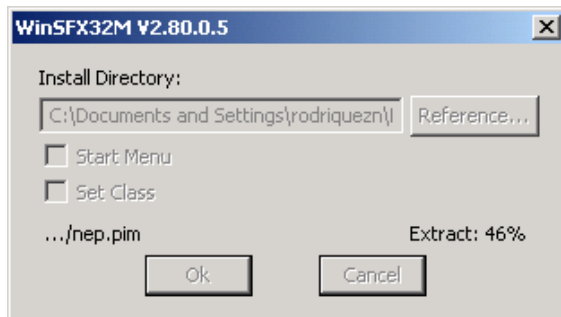

Step 3- Input the IP address of PCS-1. Also, enter “sonypcs” into the user box and leave the password box blank. **Note: If a password has been set by the administrator use that password.**

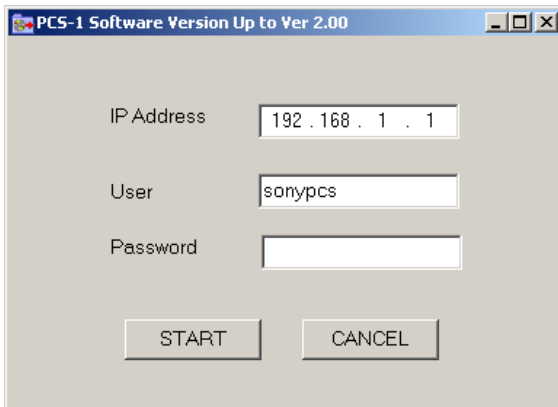

Step 4- Press “START”. It will take approximately 3 minutes to complete the software version upgrade. **Do not turn off the power of the PCS-1 during this upgrade.**

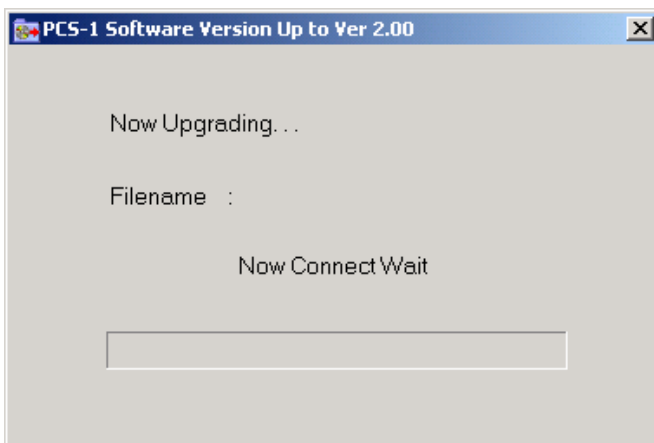

Step 5- Press “CLOSE” to close the window.

Step 6- After the PCS-1 is upgraded it will reboot automatically. If you have the optional PCS-B786 or PCS-DSB1 connected to the PCS-1 a message will appear on the screen as the firmware on these devices is updated. **Do not turn the power off while these devices are being upgraded.**

Step 7 – Enter the administrator setup screen and select the “Information” button. Verify that the PCS-1 Host Version is V02.00.